


SYSTEM DIAGRAM

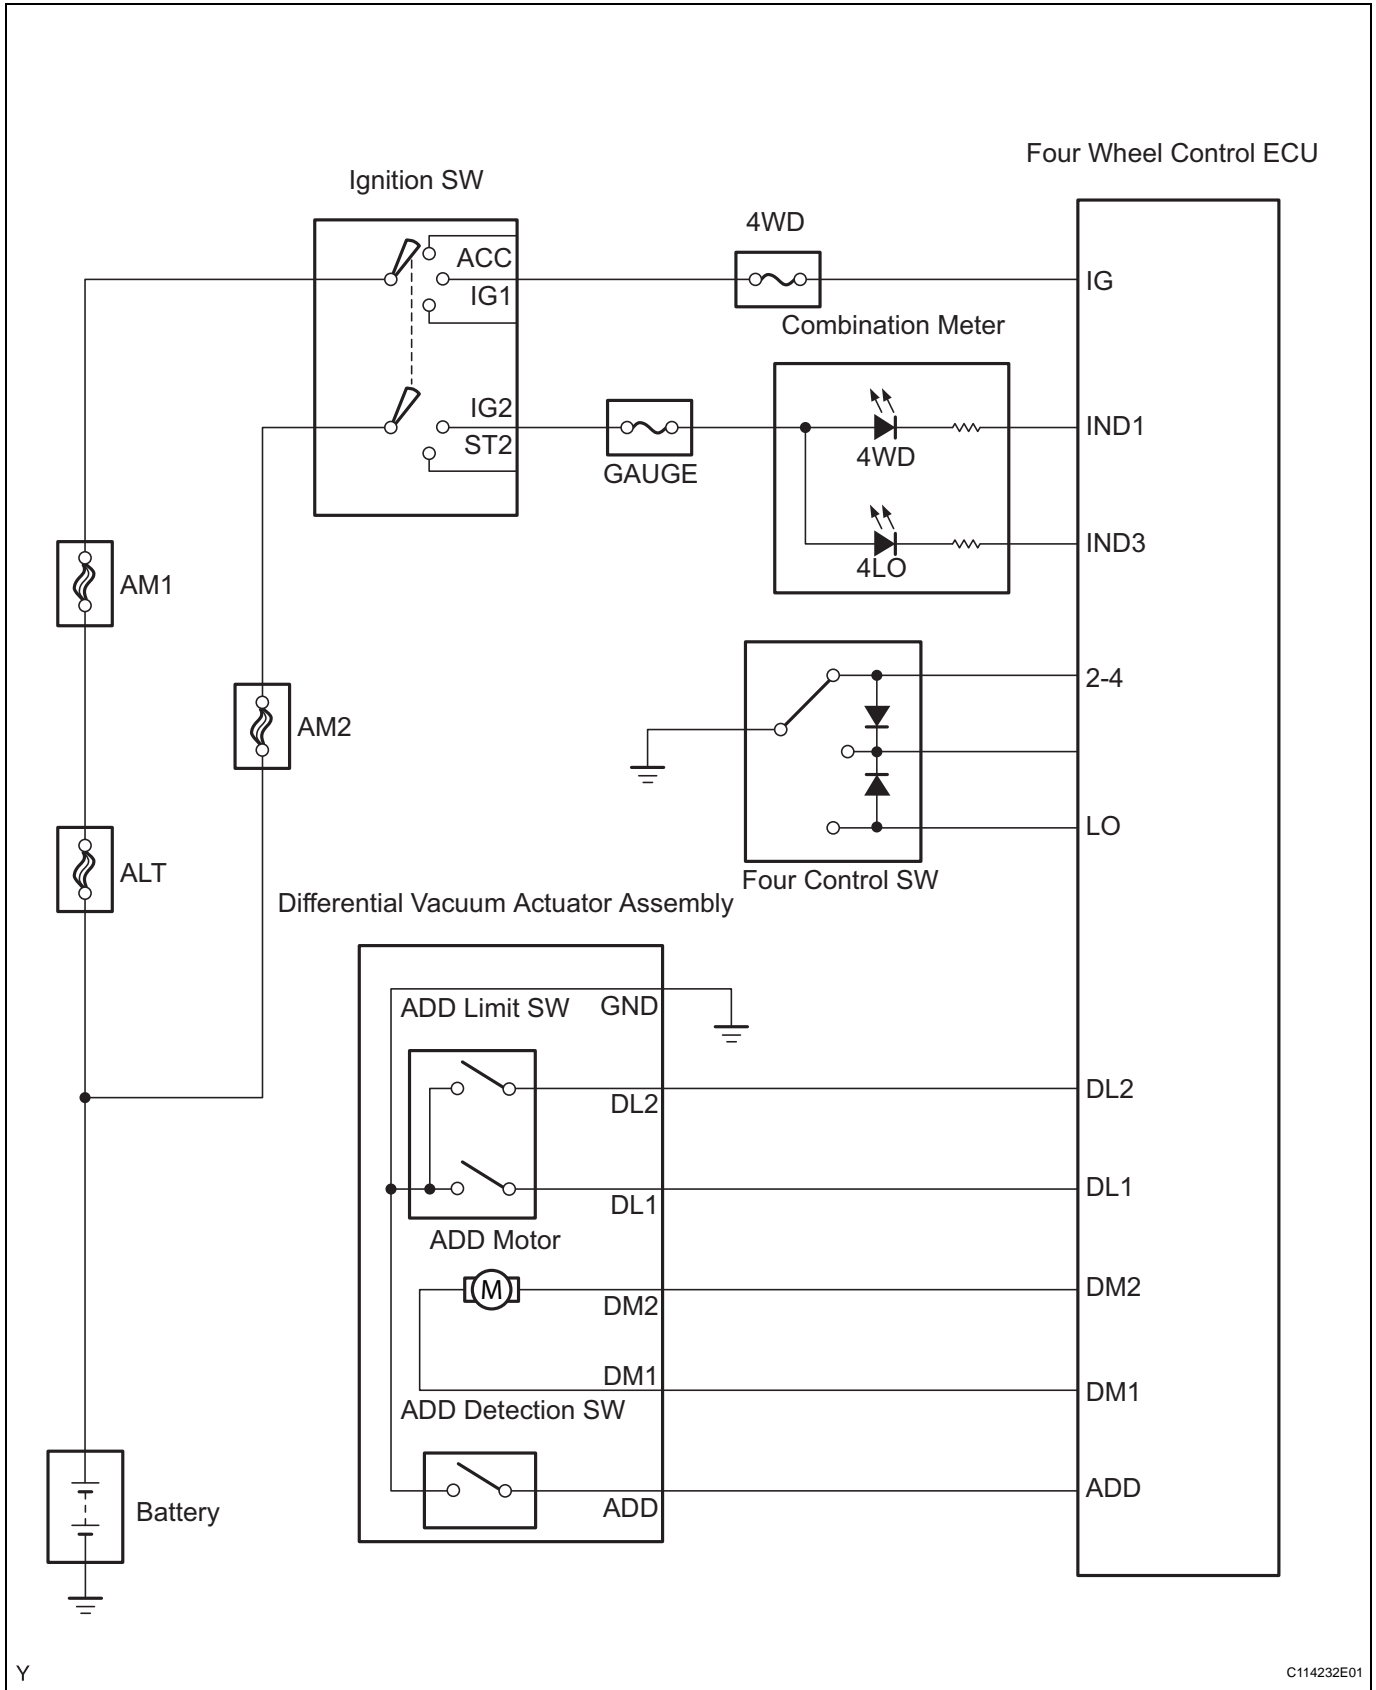

DF

PROBLEM SYMPTOMS TABLE

HINT:

Use the table below to help you find the cause of the problem. The numbers indicate the ranked order of probability of each of the possible causes. Check each part in order. If necessary, replace these parts.

Symptom	Suspected area	See page
Oil leakage from front differential	1. Oil level (Too high or wrong grade)	DF-8
	2. Front differential rear oil seal (Worn or damaged)	DF-12
	3. Companion flange (Loose or damaged)	DF-19
Oil leakage from rear differential	1. Oil level (Too high or wrong grade)	DF-8
	2. Rear differential front oil seal (Worn or damaged)	DF-9
	3. Companion flange (Loose or damaged)	DF-43