



# REAR DIFFERENTIAL CARRIER ASSEMBLY (w/ Differential Lock)

## COMPONENTS

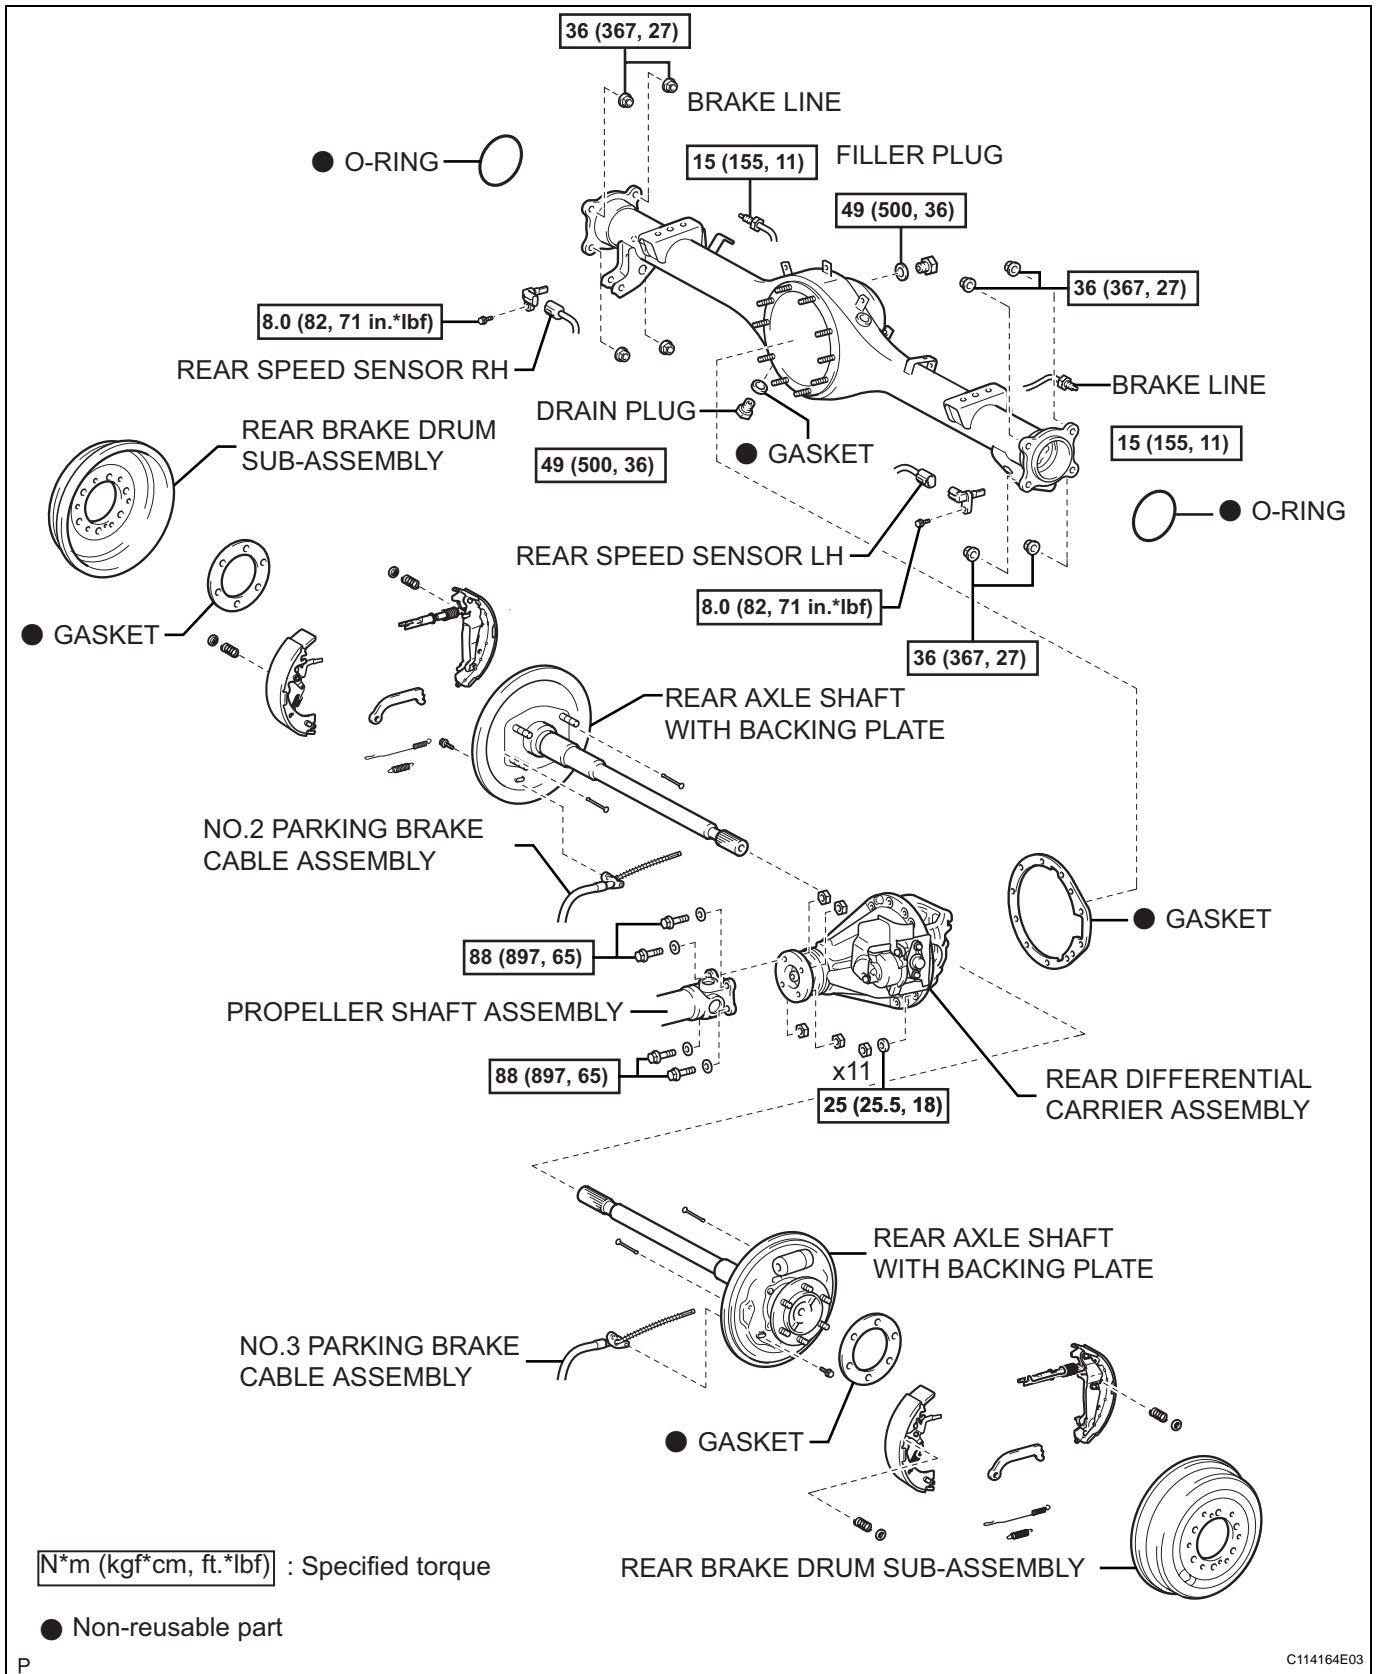

DF

**DF**

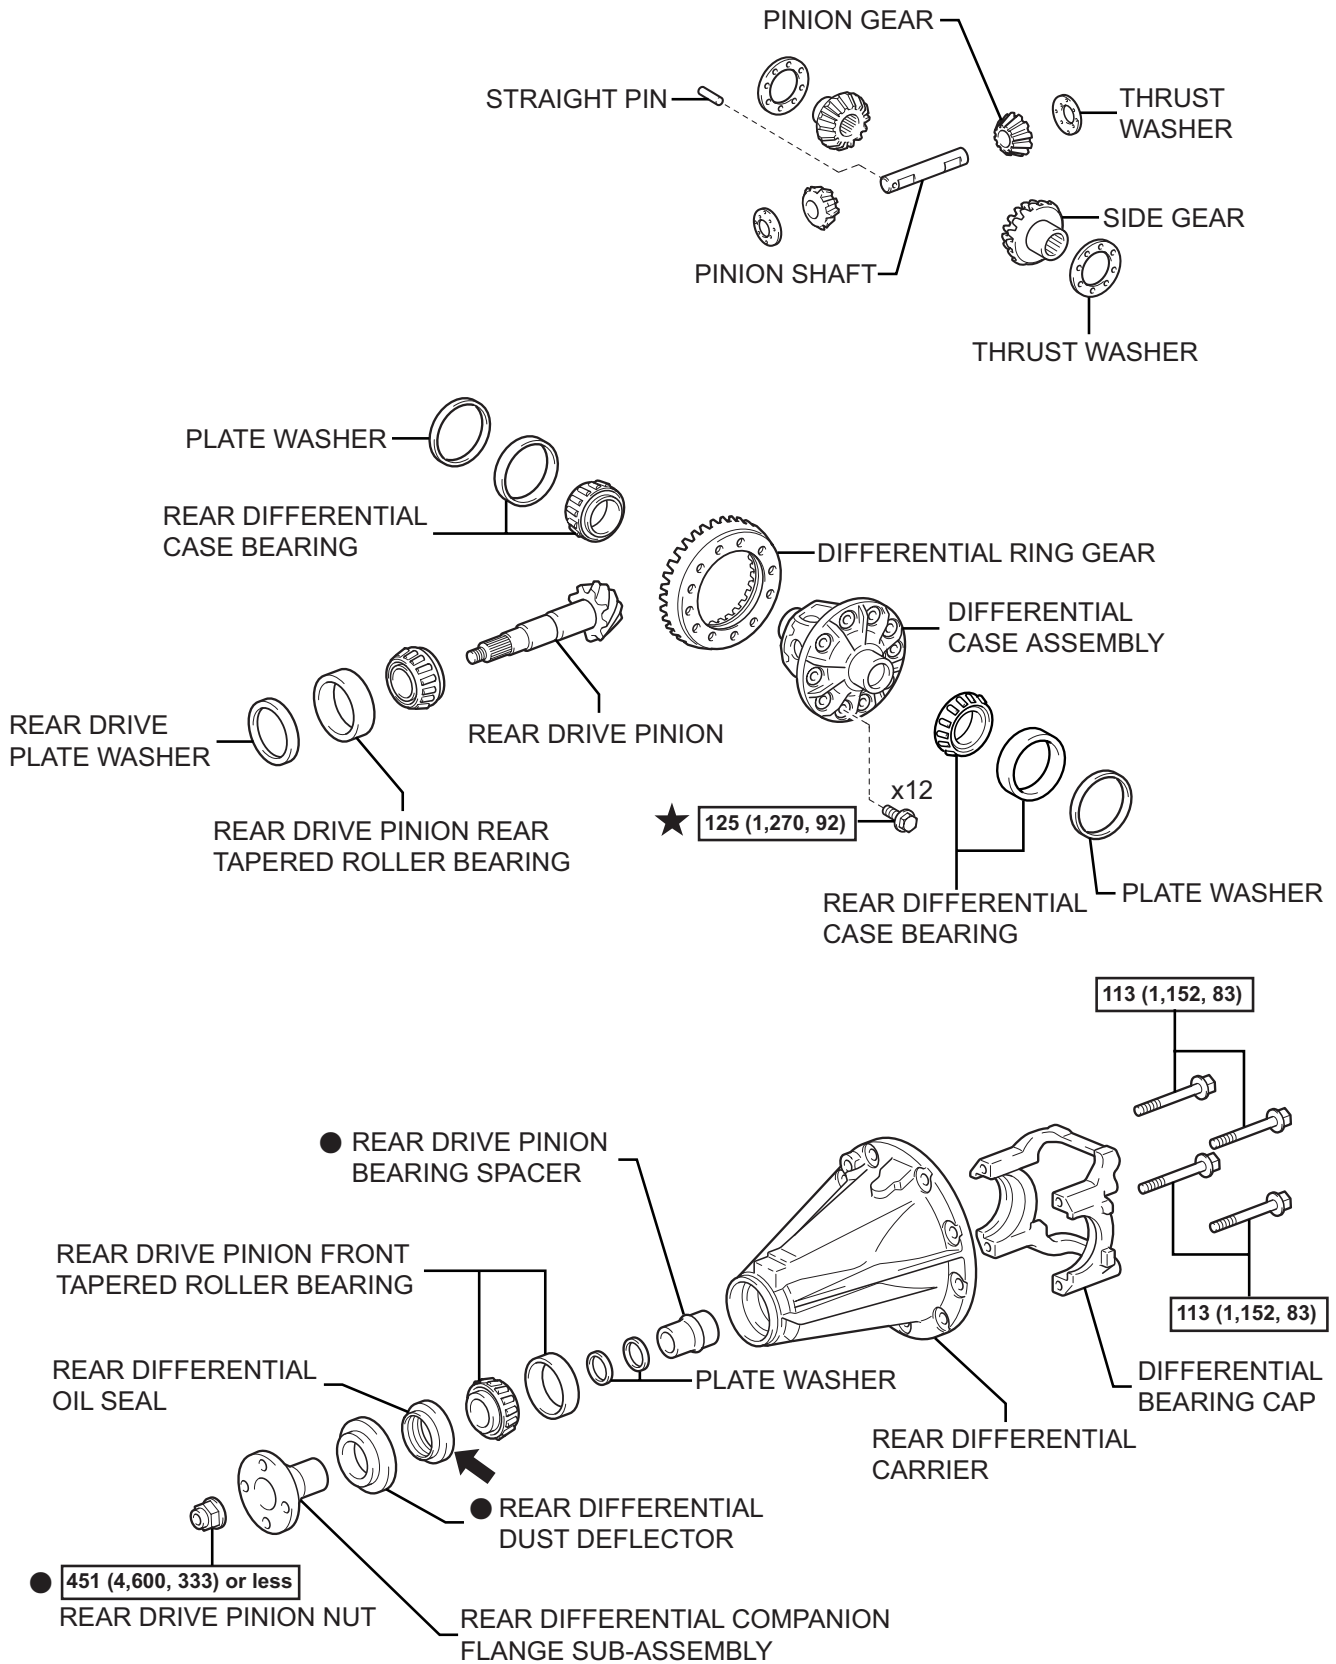


**N\*m (kgf\*cm, ft.\*lbf)** : Specified torque

● Non-reusable part

★ Precoated part


← Apply MP grease

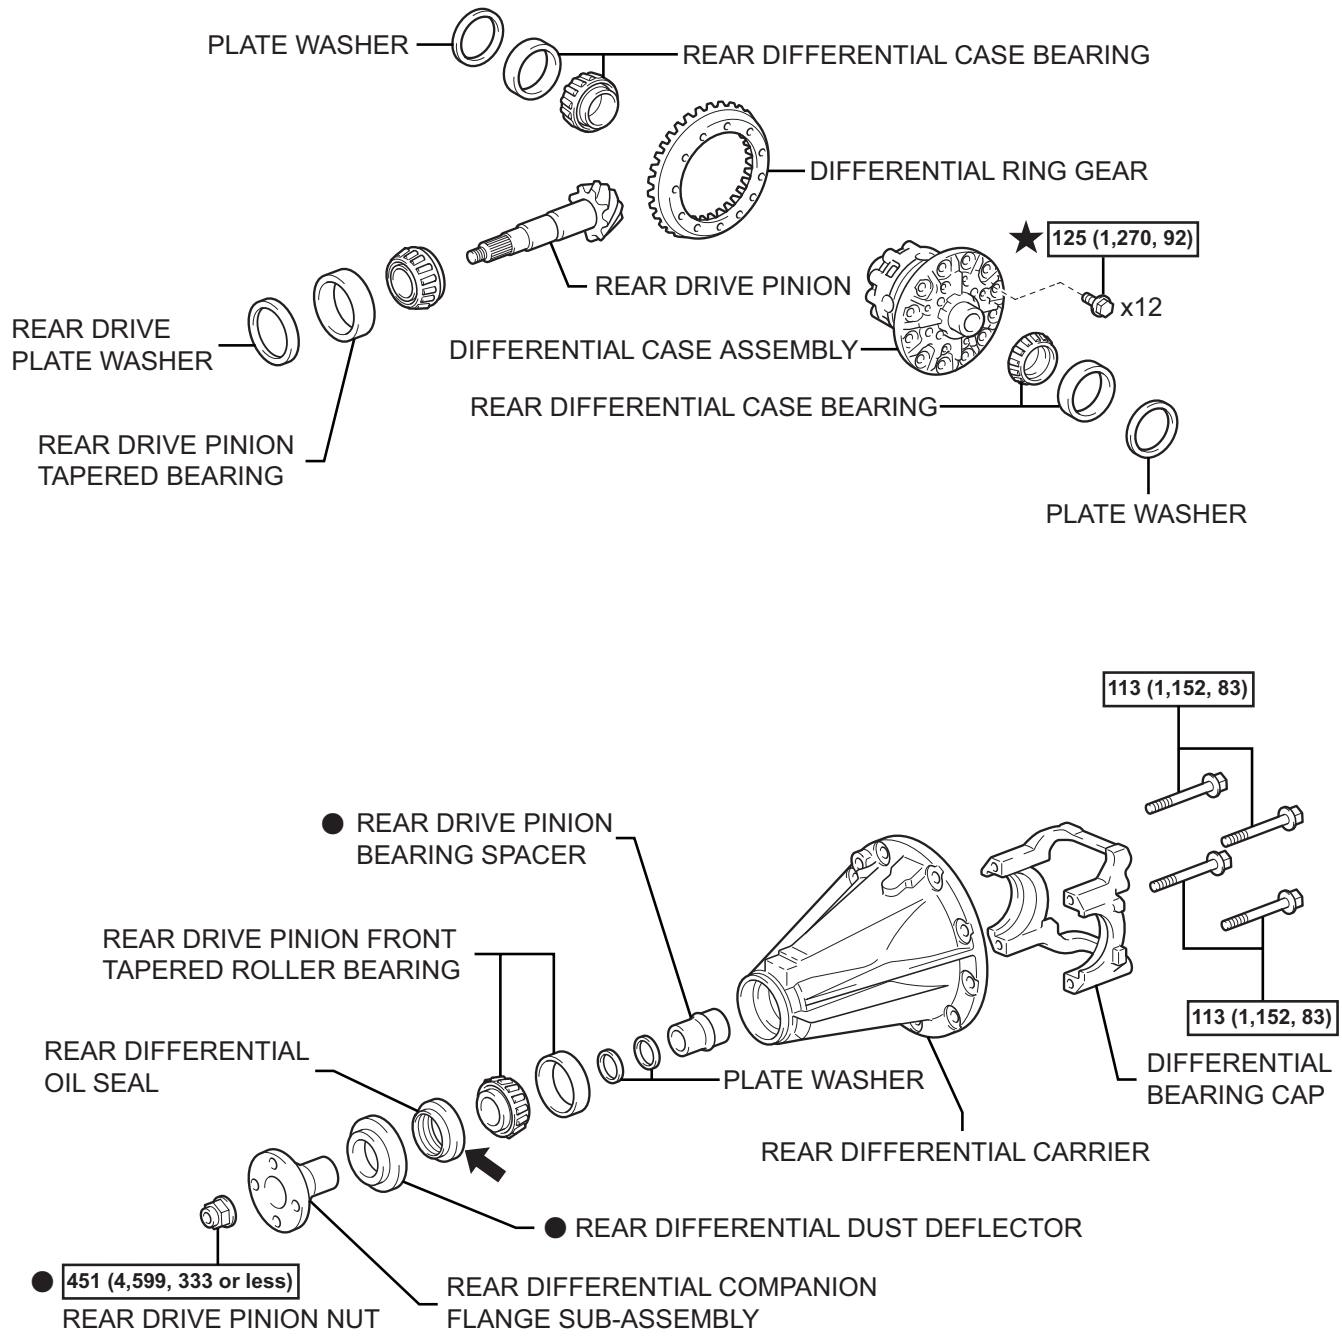

DF

N\*m (kgf\*cm, ft.\*lbf) : Specified torque ● Non-reusable part ★ Precoated part ← Apply MP grease

\*: If the side gear backlash has been adjusted by a TOYOTA dealer, adjusting shims are installed between the side gear thrust washer and the differential case.

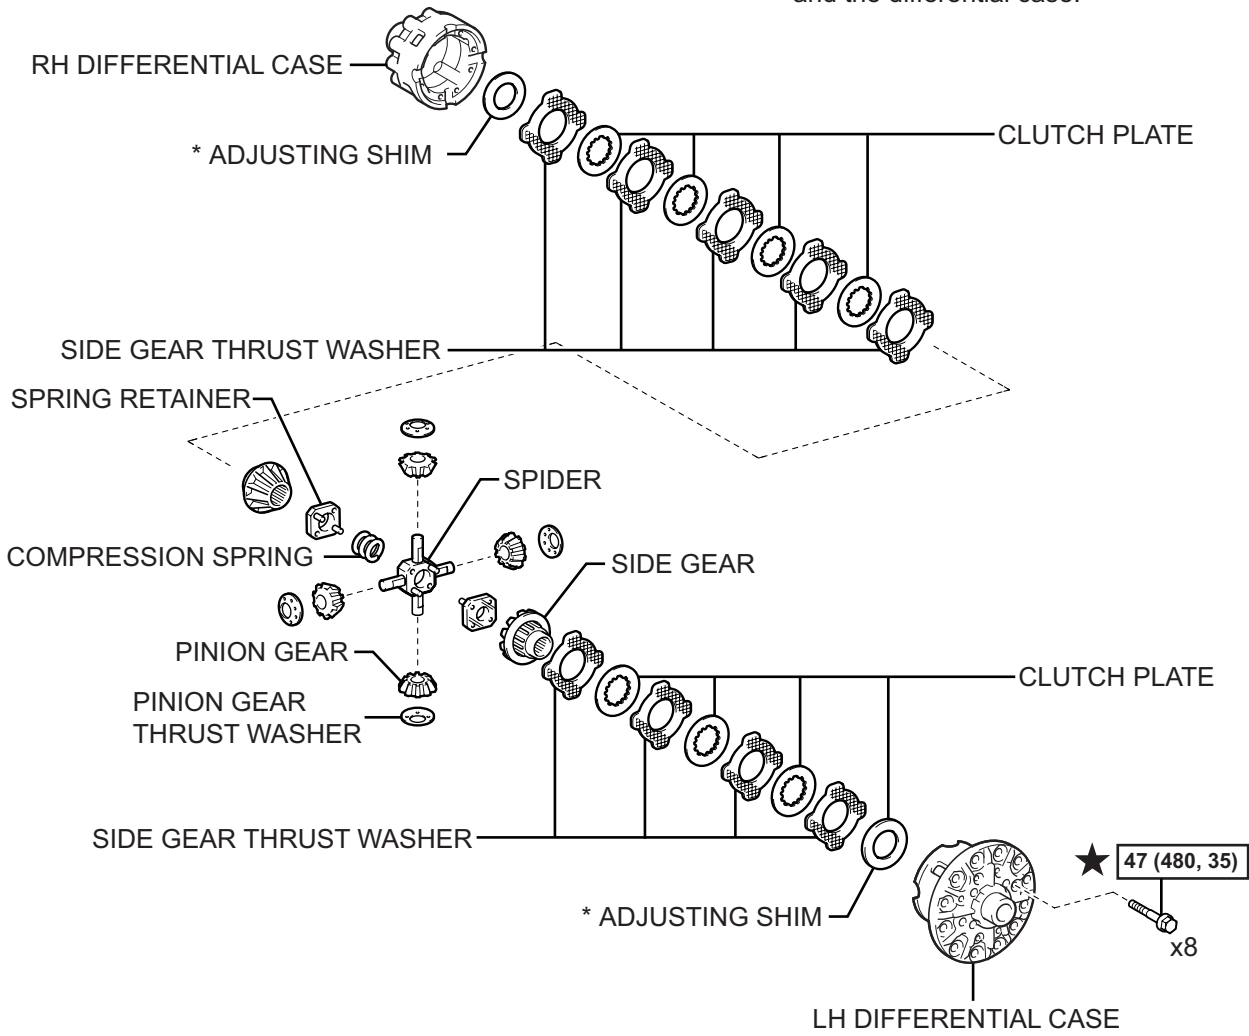

DF

[N\*m (kgf\*cm, ft.\*lbf)] : Specified torque

★ Precoated part

P