

INSTALLATION


1. INSTALL FRONT STABILIZER BAR

2. INSTALL FRONT STABILIZER LOWER BRACKET BUSH LH

(a) Install the front stabilizer lower bracket bush.

HINT:

- Install the bush onto the inner side of the bush stopper on the stabilizer bar.
- Install the bush as the protrusion to be on the inner side of the vehicle.

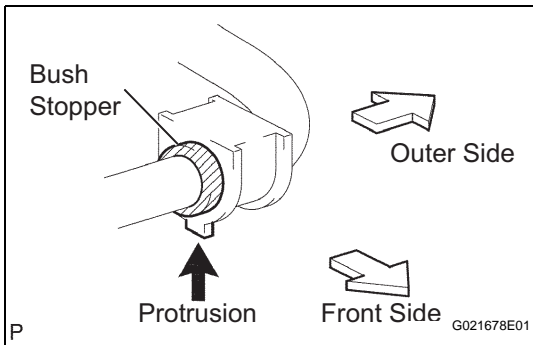

3. INSTALL FRONT STABILIZER LOWER BRACKET BUSH RH

HINT:

The installation procedure for the RH side is the same as that for the LH side.

4. INSTALL FRONT STABILIZER BRACKET NO. 1 LH


(a) Install the front stabilizer bracket with the 2 bolts.

Torque: 40 N*m (408 kgf*cm, 30 ft.*lbf)

5. INSTALL FRONT STABILIZER BRACKET NO. 1 RH

NOTICE:

The installation procedure for the RH side is the same as that for the LH side.

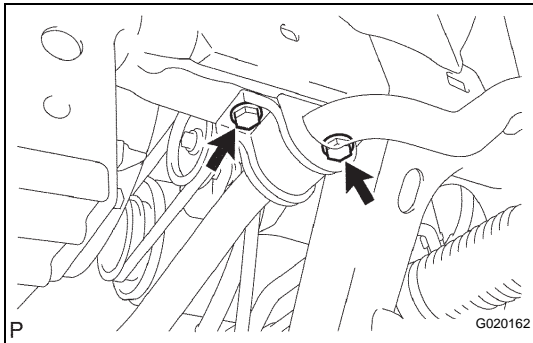


6. INSTALL FRONT STABILIZER LINK ASSEMBLY LH

(a) Install the front stabilizer link assembly LH with the 2 nuts.

Torque: 70 N*m (714 kgf*cm, 52 ft.*lbf)

HINT:

If the ball joint turns together with the nut, use a hexagon (6 mm) wrench to hold the stud.

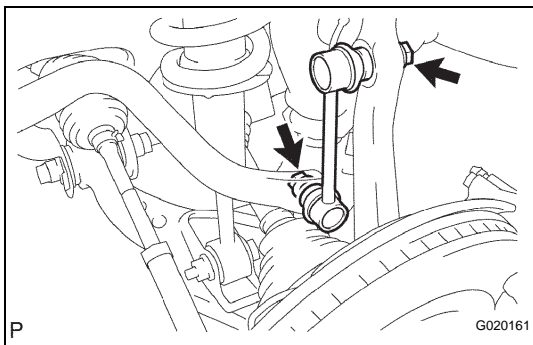

7. INSTALL FRONT STABILIZER LINK ASSEMBLY RH

HINT:

The installation procedure for the RH side is the same as that for the LH side.

8. INSTALL ENGINE UNDER COVER SUB-ASSEMBLY NO. 1

Torque: 30 N*m (306 kgf*cm, 22 ft.*lbf)

9. INSTALL FRONT WHEELS

Torque: 113 N*m (1,152 kgf*cm, 83 ft.*lbf)