
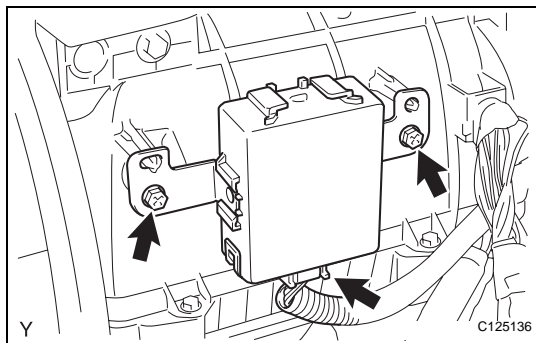


REMOVAL

1. BOLT, SCREW AND NUT TABLE (See page [IP-7](#))
2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
3. REMOVE FRONT FLOOR FOOTREST (See page [IR-1](#))
4. REMOVE FRONT DOOR SCUFF PLATE LH (for Regular Cab) (See page [IR-40](#))
5. REMOVE FRONT DOOR SCUFF PLATE LH (for Access Cab) (See page [IR-61](#))
6. REMOVE FRONT DOOR SCUFF PLATE LH (for Double Cab) (See page [IR-12](#))
7. REMOVE COWL SIDE TRIM BOARD LH (for Regular Cab) (See page [IR-40](#))
8. REMOVE COWL SIDE TRIM BOARD LH (for Access Cab) (See page [IR-61](#))
9. REMOVE COWL SIDE TRIM BOARD LH (for Double Cab) (See page [IR-12](#))
10. REMOVE INSTRUMENT PANEL UNDER TRAY (for Automatic Transmission) (See page [IP-9](#))
11. REMOVE INSTRUMENT PANEL HOLE COVER (for Manual Transmission) (See page [IP-9](#))
12. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Automatic Transmission on Separate Seat Type) (See page [IP-9](#))
13. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Manual Transmission on Separate Seat Type) (See page [IP-9](#))
14. REMOVE REAR CONSOLE BOX ASSEMBLY (for Separate Seat Type) (See page [IP-10](#))
15. REMOVE INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission on Separate Seat Type) (See page [IP-10](#))
16. REMOVE FRONT CONSOLE BOX (for Automatic Transmission on Separate Seat Type) (See page [IP-10](#))
17. REMOVE FRONT CONSOLE BOX (for Manual Transmission on Separate Seat Type) (See page [IP-11](#))
18. REMOVE FRONT CONSOLE BOX (for Automatic Transmission on Bench Seat Type) (See page [IP-11](#))
19. REMOVE FRONT CONSOLE BOX (for Manual Transmission on Bench Seat Type) (See page [IP-11](#))
20. REMOVE AIR CONDITIONING CONTROL ASSEMBLY (See page [IP-12](#))

21. REMOVE RADIO RECEIVER ASSEMBLY (See page [AV-69](#))
22. SEPARATE HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [ED-3](#))
23. REMOVE LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL (See page [IP-12](#))
24. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-12](#))
25. REMOVE INSTRUMENT CLUSTER CENTER FINISH PANEL SUB-ASSEMBLY (See page [IP-13](#))
26. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-13](#))
27. REMOVE INSTRUMENT PANEL LOWER FINISH PANEL SUB-ASSEMBLY RH (See page [IP-14](#))
28. REMOVE LOWER INSTRUMENT PANEL LH (See page [IP-14](#))
29. REMOVE INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-14](#))
30. REMOVE TIRE PRESSURE WARNING ECU
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and the tire pressure warning ECU.

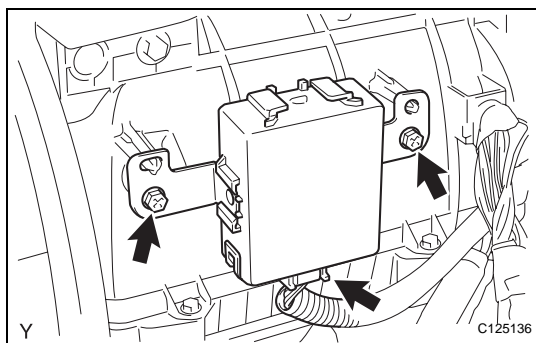

INSTALLATION

1. INSTALL TIRE PRESSURE WARNING ECU
 - (a) Install the tire pressure warning ECU with the 2 screws.
Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)
 - (b) Connect the connector.
2. INSTALL INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-20](#))
3. INSTALL LOWER INSTRUMENT PANEL LH (See page [IP-20](#))
4. INSTALL INSTRUMENT PANEL LOWER FINISH PANEL SUB-ASSEMBLY RH (See page [IP-20](#))
5. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-20](#))
6. INSTALL INSTRUMENT CLUSTER CENTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))
7. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))

8. **INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL (See page [IP-22](#))**
9. **CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [ED-8](#))**
10. **INSTALL RADIO RECEIVER ASSEMBLY (See page [AV-70](#))**
11. **INSTALL AIR CONDITIONING CONTROL ASSEMBLY (See page [IP-22](#))**
12. **INSTALL FRONT CONSOLE BOX (for Manual Transmission on Bench Seat Type) (See page [IP-22](#))**
13. **INSTALL FRONT CONSOLE BOX (for Automatic Transmission on Bench Seat Type) (See page [IP-23](#))**
14. **INSTALL FRONT CONSOLE BOX (for Manual Transmission on Separate Seat Type) (See page [IP-23](#))**
15. **INSTALL FRONT CONSOLE BOX (for Automatic Transmission on Separate Seat Type) (See page [IP-24](#))**
16. **INSTALL INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission on Separate Seat Type) (See page [IP-24](#))**
17. **INSTALL REAR CONSOLE BOX ASSEMBLY (for Separate Seat Type) (See page [IP-24](#))**
18. **INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Manual Transmission on Separate Seat Type) (See page [IP-25](#))**
19. **INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Automatic Transmission on Separate Seat Type) (See page [IP-25](#))**
20. **INSTALL INSTRUMENT PANEL HOLE COVER (for Manual Transmission) (See page [IP-25](#))**
21. **INSTALL INSTRUMENT PANEL UNDER TRAY (for Automatic Transmission) (See page [IP-25](#))**
22. **INSTALL COWL SIDE TRIM BOARD LH (for Regular Cab) (See page [IR-52](#))**
23. **INSTALL COWL SIDE TRIM BOARD LH (for Access Cab) (See page [IR-75](#))**
24. **INSTALL COWL SIDE TRIM BOARD LH (for Double Cab) (See page [IR-29](#))**
25. **INSTALL FRONT DOOR SCUFF PLATE LH (for Regular Cab) (See page [IR-52](#))**
26. **INSTALL FRONT DOOR SCUFF PLATE LH (for Access Cab) (See page [IR-75](#))**
27. **INSTALL FRONT DOOR SCUFF PLATE LH (for Double Cab) (See page [IR-29](#))**

28. **INSTALL FRONT FLOOR FOOTREST** (See page [IR-1](#))
29. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
(See page [IN-5](#))
30. **REGISTER TRANSMITTER ID** (See page [TW-11](#))
31. **INSPECT TIRE PRESSURE WARNING SYSTEM**
(See page [TW-11](#))