

DIAGNOSTIC TROUBLE CODE CHART

HINT:

If a malfunction code is displayed during the DTC check, inspect the circuit relevant to that code. For details of each code, refer to the page listed under "See page" in the table below.

DTC chart of Tire Pressure Warning

DTC No.	Detection Item	Trouble Area	See page
C2111/11	Transmitter ID1 Operation Stop	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter (Forced transmission of transmitter ID) Tire pressure warning ECU 	TW-33
C2112/12	Transmitter ID2 Operation Stop	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter (Forced transmission of transmitter ID) Tire pressure warning ECU 	TW-33
C2113/13	Transmitter ID3 Operation Stop	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter (Forced transmission of transmitter ID) Tire pressure warning ECU 	TW-33
C2114/14	Transmitter ID4 Operation Stop	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter (Forced transmission of transmitter ID) Tire pressure warning ECU 	TW-33
C2115/15	Transmitter ID5 Operation Stop	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter (Forced transmission of transmitter ID) Tire pressure warning ECU 	TW-33
C2121/21	No Signal from Transmitter ID1	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter Tire pressure warning antenna and receiver Tire pressure warning ECU 	TW-37
C2122/22	No Signal from Transmitter ID2	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter Tire pressure warning antenna and receiver Tire pressure warning ECU 	TW-37
C2123/23	No Signal from Transmitter ID3	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter Tire pressure warning antenna and receiver Tire pressure warning ECU 	TW-37
C2124/24	No Signal from Transmitter ID4	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter Tire pressure warning antenna and receiver Tire pressure warning ECU 	TW-37
C2125/25	No Signal from Transmitter ID5	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter Tire pressure warning antenna and receiver Tire pressure warning ECU 	TW-37
C2141/41	Transmitter ID1 Error	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter 	TW-43
C2142/42	Transmitter ID2 Error	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter 	TW-43

DTC No.	Detection Item	Trouble Area	See page
C2143/43	Transmitter ID3 Error	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter 	TW-43
C2144/44	Transmitter ID4 Error	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter 	TW-43
C2145/45	Transmitter ID5 Error	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter 	TW-43
C2165/65	Abnormal Temperature Inside ID1 Tire	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter Tire 	TW-46
C2166/66	Abnormal Temperature Inside ID2 Tire	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter Tire 	TW-46
C2167/67	Abnormal Temperature Inside ID3 Tire	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter Tire 	TW-46
C2168/68	Abnormal Temperature Inside ID4 Tire	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter Tire 	TW-46
C2169/69	Abnormal Temperature Inside ID5 Tire	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter Tire 	TW-46
C2171/71	Transmitter ID not Registered	<ul style="list-style-type: none"> Tire pressure warning ECU Transmitter ID registration condition 	TW-49
C2176/76	Receiver Error	<ul style="list-style-type: none"> Tire pressure warning antenna and receiver Tire pressure warning ECU Wire harness or connector 	TW-51
C2177/77	Initialization not Completed	<ul style="list-style-type: none"> Tire pressure warning valve and transmitter Tire pressure warning ECU 	TW-54
C2181/81	Transmitter ID1 not Received (Test Mode DTC)	<ul style="list-style-type: none"> Tire pressure warning antenna and receiver Tire pressure warning valve and transmitter Tire pressure warning ECU Wire harness or connector 	TW-37
C2182/82	Transmitter ID2 not Received (Test Mode DTC)	<ul style="list-style-type: none"> Tire pressure warning antenna and receiver Tire pressure warning valve and transmitter Tire pressure warning ECU Wire harness or connector 	TW-37
C2183/83	Transmitter ID3 not Received (Test Mode DTC)	<ul style="list-style-type: none"> Tire pressure warning antenna and receiver Tire pressure warning valve and transmitter Tire pressure warning ECU Wire harness or connector 	TW-37
C2184/84	Transmitter ID4 not Received (Test Mode DTC)	<ul style="list-style-type: none"> Tire pressure warning antenna and receiver Tire pressure warning valve and transmitter Tire pressure warning ECU Wire harness or connector 	TW-37
C2185/85	Transmitter ID5 not Received (Test Mode DTC)	<ul style="list-style-type: none"> Tire pressure warning antenna and receiver Tire pressure warning valve and transmitter Tire pressure warning ECU Wire harness or connector 	TW-37

DTC No.	Detection Item	Trouble Area	See page
C2191/91	Vehicle Speed Signal Error (Test Mode DTC)	<ul style="list-style-type: none">• Vehicle speed sensor• Tire pressure warning ECU• Combination meter• Wire harness	TW-55