



FRONT SPEED SENSOR

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FRONT WHEEL**
3. **REMOVE FRONT SPEED SENSOR**
 - (a) Disconnect the speed sensor connector.
 - (b) Remove the bolt and front speed sensor.

NOTICE:

- Do not attach any foreign matter to the sensor tip.
- Ensure that no foreign matter enters the sensor installation part.

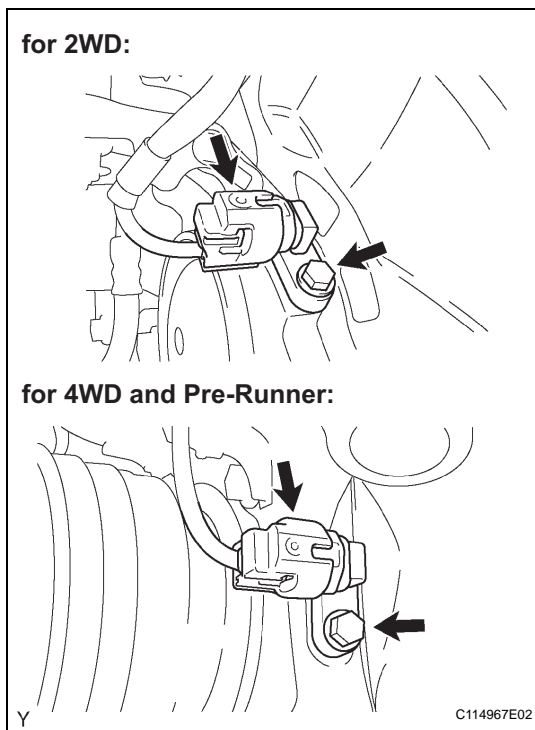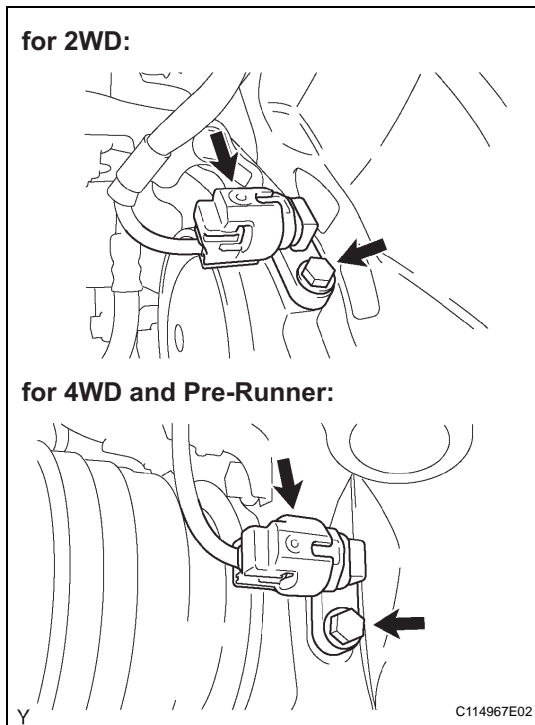

INSTALLATION

1. **INSTALL FRONT SPEED SENSOR**
 - (a) Install the front speed sensor with the bolt.
Torque: 8.3 N*m (85 kgf*cm, 73 in.*lbf)

NOTICE:

Make sure that the sensor tip is clean.

 - (b) Connect the speed sensor connector.
2. **INSTALL FRONT WHEEL**
Torque: 113 N*m (1,152 kgf*cm, 83 ft.*lbf)
3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
(See page [IN-5](#))
4. **CHECK VSC SENSOR SIGNAL (w/ VSC)**
(See page [BC-103](#))
5. **CHECK ABS SENSOR SIGNAL (w/o VSC)**
(See page [BC-7](#))