

# REAR SPEED SENSOR

## REMOVAL



1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

2. REMOVE REAR SPEED SENSOR

- (a) Disconnect the speed sensor connector.
- (b) Remove the nut and speed sensor rear.

**NOTICE:**

- Do not attach any foreign matter to the sensor tip.
- Ensure that no foreign matter enters the sensor installation hole.

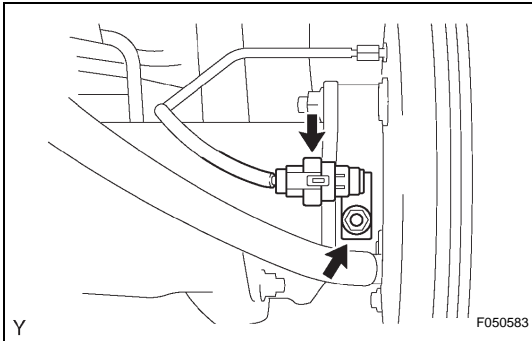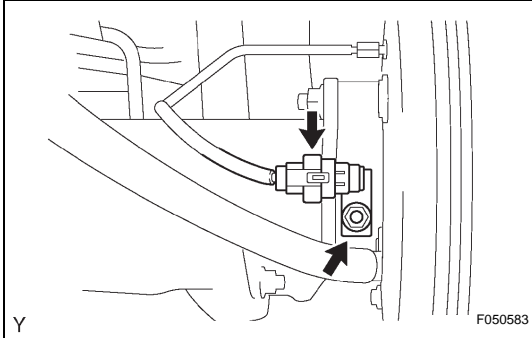

## INSTALLATION

1. INSTALL REAR SPEED SENSOR

- (a) Install the rear speed sensor with the nut.  
**Torque: 8.0 N\*m (82 kgf\*cm, 71 in.\*lbf)**

**NOTICE:**

**Make sure that the sensor tip is clean.**

- (b) Connect the speed sensor connector.

2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

**Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)**

(See page [IN-5](#))

3. CHECK VSC SENSOR SIGNAL (w/ VSC)

(See page [BC-103](#))

4. CHECK ABS SENSOR SIGNAL (w/o VSC)

(See page [BC-7](#))