

VSC TRAC Warning Light does not Come ON

DESCRIPTION

When the ECU stores DTC, the VSC warning light illuminates on the combination meter.


WIRING DIAGRAM

See page [BC-241](#).

NOTICE:

When replacing the master cylinder solenoid, perform zero point calibration (See page [BC-99](#)).

1 CHECK VSC TRAC WARNING LIGHT

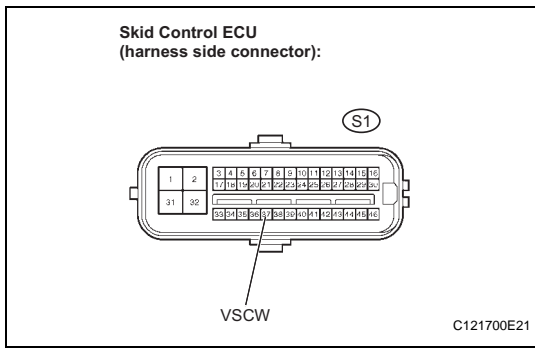

- (a) Disconnect the skid control ECU connector.
- (b) Turn the ignition switch to the ON position.
- (c) Ground terminal VSCW of the skid control ECU.
- (d) Check VSC TRAC warning light.

OK


VSCW -GND Condition	Illumination Condition
Connecting	OFF
Disconnecting	ON

- (e) Turn the ignition switch to OFF.
- (f) Reconnect the skid control ECU connector.

OK → **REPLACE MASTER CYLINDER SOLENOID**

BC **NG**

2 CHECK HARNESS AND CONNECTOR (SKID CONTROL ECU - COMBINATION METER)

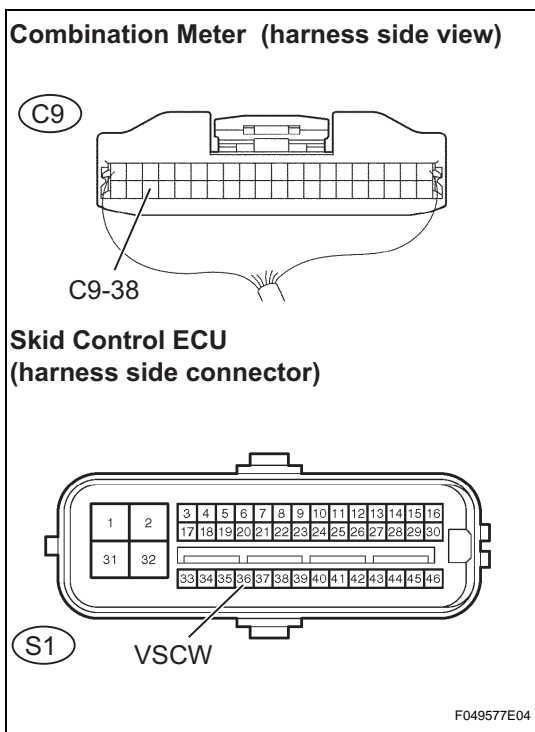

- (a) Disconnect the skid control ECU connector.
- (b) Disconnect the combination meter connector.
- (c) Measure the resistance.

Standard

Tester Connection	Specified Condition
C9-38 - S1-36 (VSCW)	Below 1 Ω

- (d) Measure the resistance.

Standard

Tester Connection	Specified Condition
S1-36 (VSCW) - Body ground	10 kΩ or higher

- (e) Reconnect the combination meter connector.
- (f) Reconnect the skid control ECU connector.

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

3 INSPECT COMBINATION METER ASSEMBLY

(a) Check the combination meter system (See page [ME-8](#)).

OK:

Combination meter is normal.

NG

**REPLACE COMBINATION METER
ASSEMBLY**

OK

CHECK FOR INTERMITTENT PROBLEMS