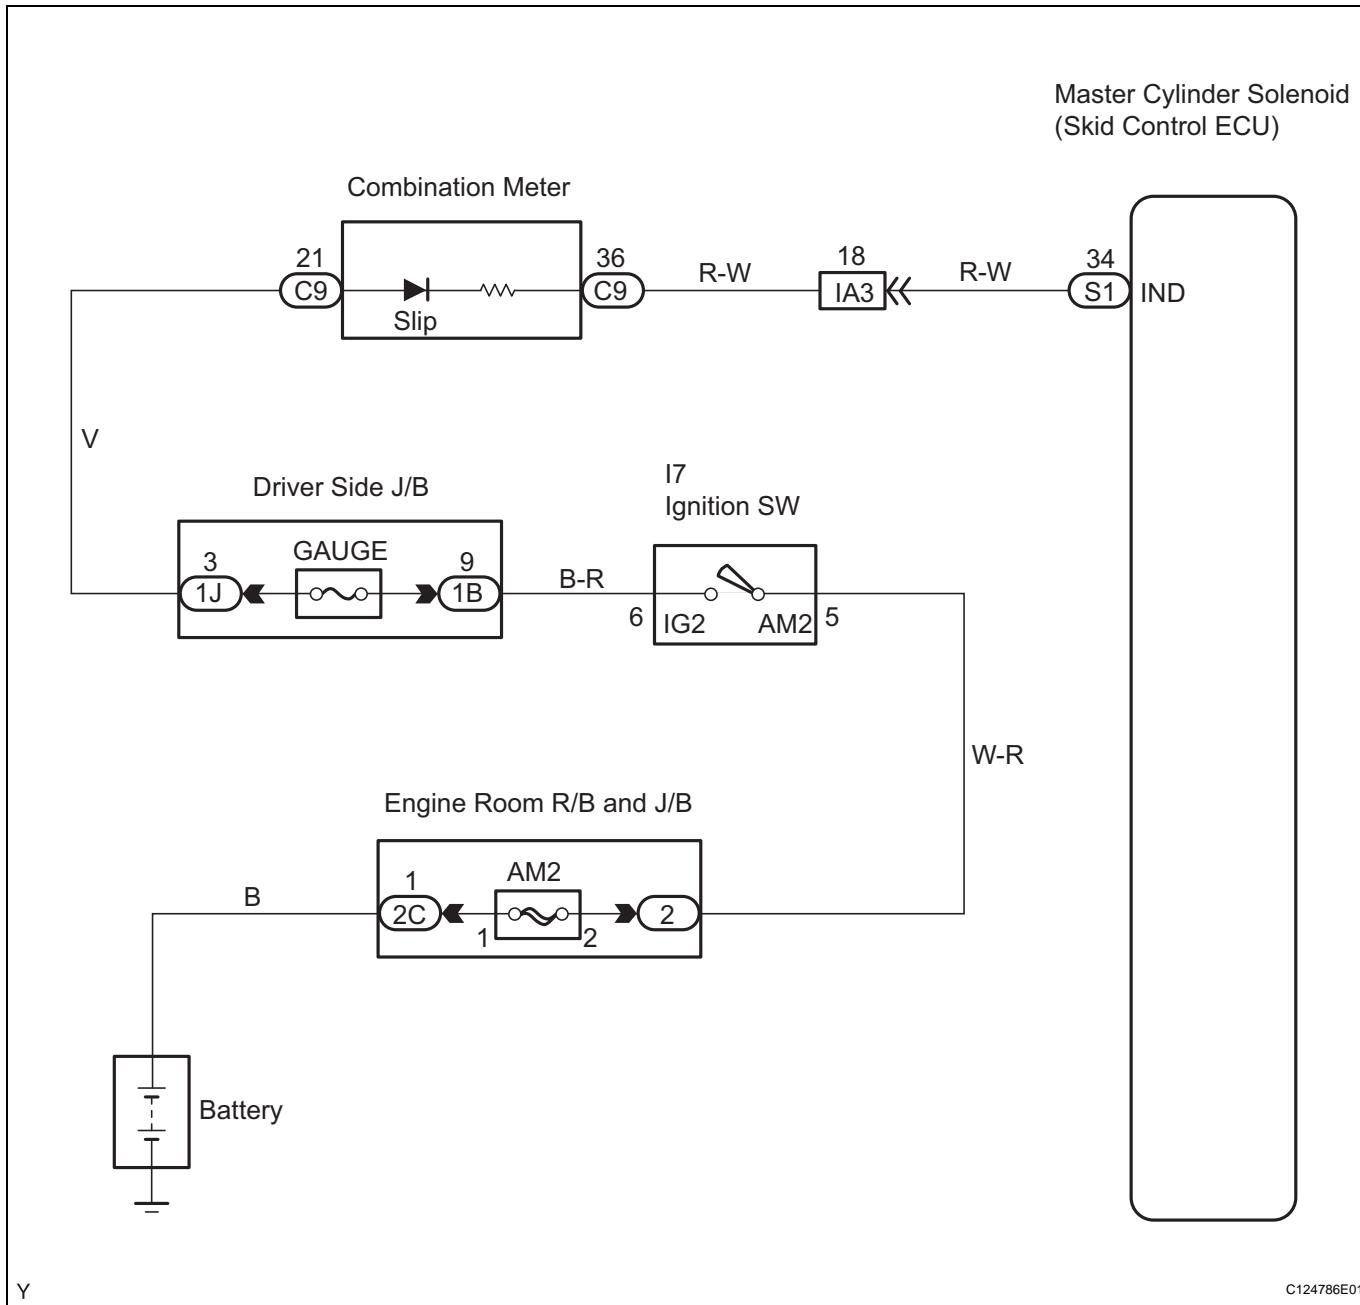


## Slip Indicator Light Remains ON

### DESCRIPTION

- The SLIP indicator blinks when any of the TRAC, VSV and AUTO LSD operate.
- When the system fails, the SLIP indicator light illuminates to warn the driver.

### WIRING DIAGRAM



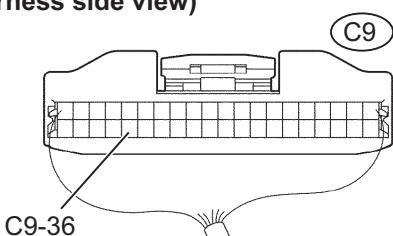
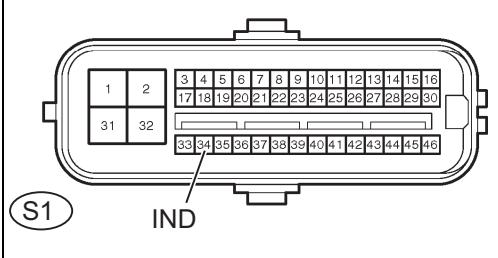
### HINT:

Start the inspection from step 1 when using a intelligent tester and start from step 2 when not using a intelligent tester.

**1 CHECK DTC**

(a) Check the DTCs.

Result	Proceed to
DTC not output	A
DTC output	B

**REPAIR CIRCUITS INDICATED BY OUTPUT DTCs****A****2 CHECK HARNESS AND CONNECTOR (SKID CONTROL ECU - COMBINATION METER)****Combination Meter  
(harness side view)****Skid Control ECU  
(harness side connector)**

F049577E02

- (a) Disconnect the skid control ECU connector.  
 (b) Disconnect the combination meter connector.  
 (c) Measure the resistance.

**Standard**

Tester Connection	Specified Condition
S1-34 (IND) - C9-36	Below 1 Ω

- (d) Measure the resistance.

**Standard**

Tester Connection	Specified Condition
S1-34 (IND) - Body ground	10 kΩ or higher

- (e) Reconnect the combination meter connector.  
 (f) Reconnect the skid control ECU connector.

**REPAIR OR REPLACE HARNESS OR CONNECTOR****BC****OK****3 INSPECT COMBINATION METER ASSEMBLY**

- (a) Check the combination meter system (See page ME-8).

**OK:****Combination meter is normal.****REPLACE COMBINATION METER ASSEMBLY****OK****REPLACE MASTER CYLINDER SOLENOID**