


Slip Indicator Light does not Come ON

WIRING DIAGRAM

See page [BC-118](#)

1 CHECK SLIP INDICATOR LIGHT

Skid Control ECU (harness side connector):

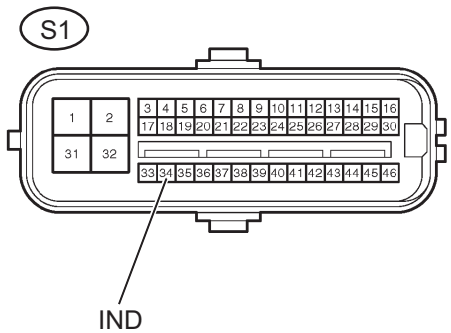

C121700E25

- (a) Disconnect the skid control ECU connector.
- (b) Turn the ignition switch to the ON position.
- (c) Ground terminal IND of the skid control ECU.
- (d) Check the SLIP indicator light.

OK

IND - GND Condition	Illumination Condition
Connecting	ON
Disconnecting	OFF

- (e) Turn the ignition switch to OFF.
- (f) Reconnect the skid control ECU connector.

OK


REPLACE MASTER CYLINDER SOLENOID

NG


BC

2 CHECK HARNESS AND CONNECTOR (SKID CONTROL ECU - COMBINATION METER)

Combination Meter (harness side view)

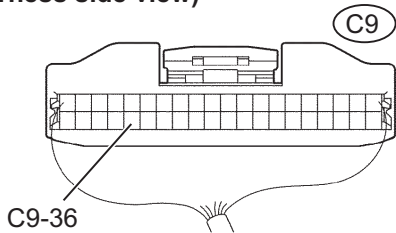

Skid Control ECU (harness side connector)

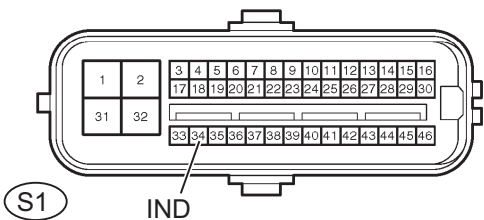

F049577E02

- (a) Disconnect the skid control ECU connector.
- (b) Disconnect the combination meter connector.
- (c) Measure the resistance.

Standard

Tester Connection	Specified Condition
S1-34 (IND) - C9-36	Below 1 Ω
S1-34 (IND) - Body ground	10 kΩ or higher

- (d) Reconnect the combination meter connector.
- (e) Reconnect the skid control ECU connector.

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3 INSPECT COMBINATION METER ASSEMBLY

(a) Check the combination meter system (See page [ME-8](#)).

OK:

Combination meter is normal.

NG

**REPLACE COMBINATION METER
ASSEMBLY**

OK

CHECK FOR INTERMITTENT PROBLEMS