
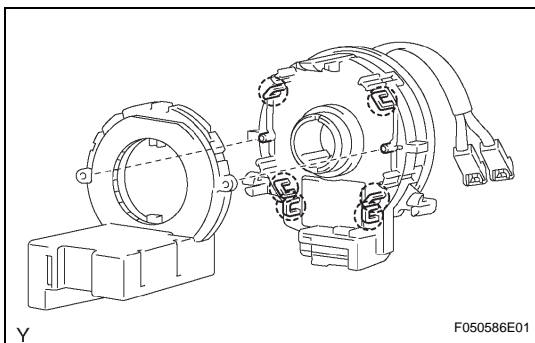


STEERING ANGLE SENSOR (w/ VSC)

REMOVAL

1. **PRECAUTION**
(See page [RS-1](#))
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
(a) Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE STEERING WHEEL COVER LOWER NO. 2**
(See page [SR-9](#))
5. **REMOVE STEERING WHEEL COVER LOWER NO. 3**
(See page [SR-9](#))
6. **REMOVE STEERING PAD ASSEMBLY** (See page [RS-558](#))
7. **REMOVE STEERING WHEEL ASSEMBLY** (See page [SR-9](#))
8. **REMOVE STEERING COLUMN COVER LOWER** (See page [RS-566](#))
9. **REMOVE STEERING COLUMN COVER UPPER** (See page [RS-566](#))
10. **REMOVE SPIRAL CABLE** (See page [RS-566](#))
11. **REMOVE STEERING SENSOR**
(a) Release 6 claw fittings and remove the steering sensor from the spiral cable.

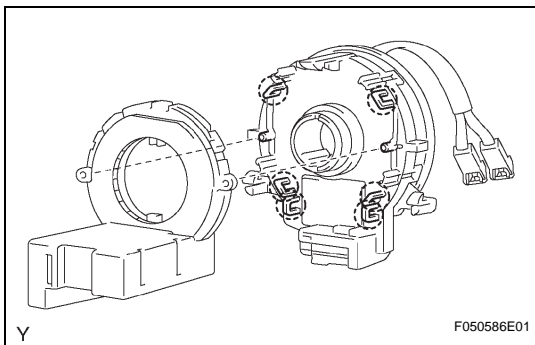

INSTALLATION

1. **INSTALL STEERING SENSOR**
(a) Install the steering sensor onto the spiral cable.
NOTICE:
 - Engage the claws securely.
 - Be careful not to damage the claws.
2. **REMOVE PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
3. **INSTALL SPIRAL CABLE** (See page [RS-567](#))
4. **CENTER SPIRAL CABLE** (See page [RS-567](#))

5. **INSTALL STEERING COLUMN COVER UPPER** (See page [RS-568](#))
6. **INSTALL STEERING COLUMN COVER LOWER** (See page [RS-568](#))
7. **INSTALL STEERING WHEEL ASSEMBLY** (See page [SR-18](#))
8. **INSTALL STEERING PAD ASSEMBLY** (See page [RS-558](#))
9. **INSTALL STEERING WHEEL COVER LOWER NO. 3**
(See page [SR-18](#))
10. **INSTALL STEERING WHEEL COVER LOWER NO. 2**
(See page [SR-18](#))
11. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
(See page [IN-5](#))
12. **INSPECT STEERING PAD ASSEMBLY**
13. **INSPECT SRS WARNING LIGHT**
(See page [RS-28](#))