


## INSTALLATION

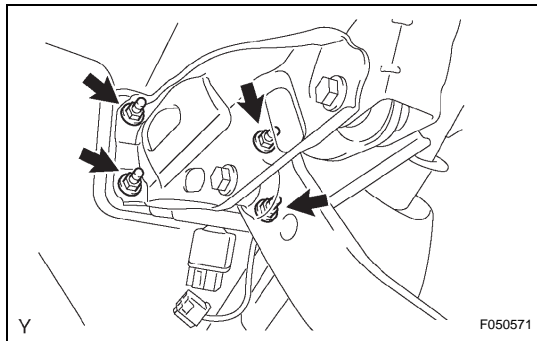

1. **INSTALL BRAKE BOOSTER**
  - (a) Install a new gasket onto the brake booster.
  - (b) Install the brake booster assembly with the 4 nuts.  
**Torque: 14.2 N\*m (145 kgf\*cm, 10 ft.\*lbf)**
  - (c) Connect the vacuum hose to the brake booster.
2. **INSTALL MASTER CYLINDER PUSH ROD CLEVIS**  
(See page [BR-18](#))
3. **INSTALL BRAKE MASTER CYLINDER** (See page [BR-22](#))
4. **FILL RESERVOIR WITH BRAKE FLUID** (See page [BR-7](#))
5. **BLEED MASTER CYLINDER** (See page [BR-7](#))
6. **BLEED BRAKE LINE** (See page [BR-7](#))
7. **CHECK FLUID LEVEL IN RESERVOIR** (See page [BR-8](#))
8. **CHECK FOR BRAKE FLUID LEAKAGE**
9. **INSPECT BRAKE PEDAL HEIGHT** (See page [BR-11](#))
10. **INSPECT PEDAL FREE PLAY** (See page [BR-14](#))
11. **INSPECT PEDAL RESERVE DISTANCE** (See page [BR-14](#))
12. **INSTALL DRIVER SIDE JUNCTION BLOCK**  
Torque: 8.0 N\*m (82 kgf\*cm, 71 in.\*lbf)
13. **INSTALL INSTRUMENT PANEL FINISH PANEL LOWER NO. 1** (See page [IP-22](#))
14. **INSTALL INSTRUMENT PANEL UNDER TRAY** (for Automatic Transmission) (See page [IP-25](#))
15. **INSTALL INSTRUMENT PANEL HOLE COVER** (for Manual Transmission) (See page [IP-25](#))
16. **INSTALL COWL SIDE TRIM BOARD** (for Regular Cab) (See page [IR-52](#))
17. **INSTALL COWL SIDE TRIM BOARD** (for Access Cab) (See page [IR-75](#))
18. **INSTALL COWL SIDE TRIM BOARD** (for Double Cab) (See page [IR-29](#))
19. **INSTALL FRONT DOOR SCUFF PLATE** (for Regular Cab) (See page [IR-52](#))
20. **INSTALL FRONT DOOR SCUFF PLATE** (for Access Cab) (See page [IR-75](#))
21. **INSTALL FRONT DOOR SCUFF PLATE** (for Double Cab) (See page [IR-29](#))
22. **INSTALL FRONT FLOOR FOOTREST** (See page [IR-1](#))

**23. CONNECT CABLE TO NEGATIVE BATTERY  
TERMINAL****Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)**(See page [IN-5](#))