



BLOWER RESISTOR

INSPECTION

1. INSPECT BLOWER RESISTOR

- (a) Check the resistance.
 - (1) Using an ohmmeter, measure the resistance between the terminals.

Standard

Tester Connection	Specified Condition
1 (M1) - 3 (COMMON)	0.792 to 0.968 Ω at 20°C (68°F)
2 (M2) - 3 (COMMON)	0.342 to 0.418 Ω at 20°C (68°F)
4 (Lo) - 3 (COMMON)	2.07 to 2.53 Ω at 20°C (68°F)

If the result is not as specified, replace the blower resistor.