


# PARTS LOCATION

COMBINATION METER

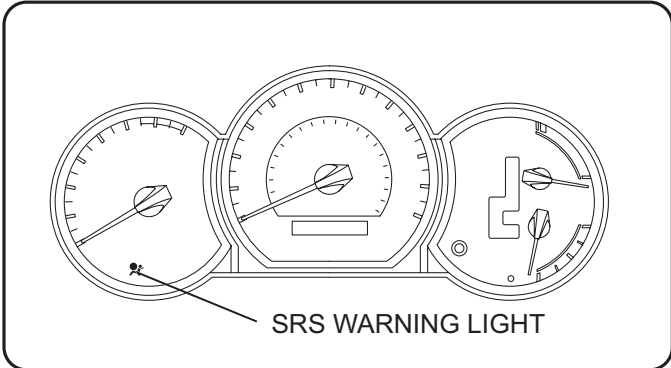

FRONT PASSENGER AIRBAG ASSEMBLY

FRONT AIRBAG SENSOR RH


FRONT AIRBAG SENSOR LH

STEERING PAD


SPIRAL CABLE

CENTER AIRBAG SENSOR ASSEMBLY

DLC3

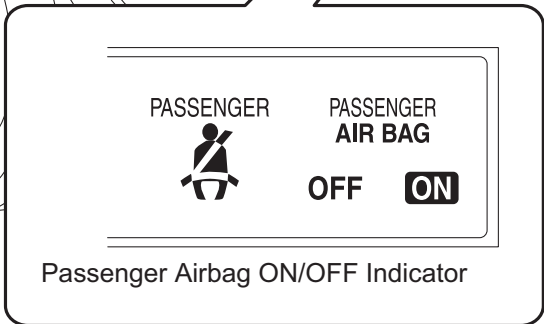

HAZARD WARNING SIGNAL SWITCH ASSEMBLY

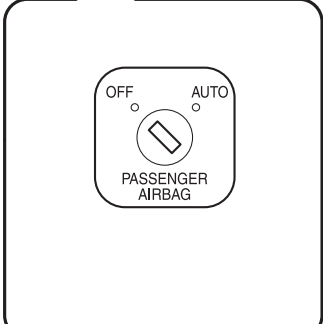

AIRBAG CUT-OFF SWITCH (Except Double Cab)

RS

for BENCH SEAT:

OCCUPANT CLASSIFICATION ECU

FRONT SEAT OUTER  
BELT ASSEMBLY LH

FRONT SEAT INNER  
BELT ASSEMBLY LH

SEAT POSITION SENSOR

FRONT SEAT OUTER  
BELT ASSEMBLY RH

for SEPARATE SEAT:

SEAT POSITION SENSOR

FRONT SEAT OUTER  
BELT ASSEMBLY LH


FRONT SEAT INNER  
BELT ASSEMBLY LH

OCCUPANT CLASSIFICATION ECU

FRONT SEAT OUTER  
BELT ASSEMBLY RH

RS

w/ FRONT SEAT SIDE AIRBAG and CURTAIN SHIELD AIRBAG :

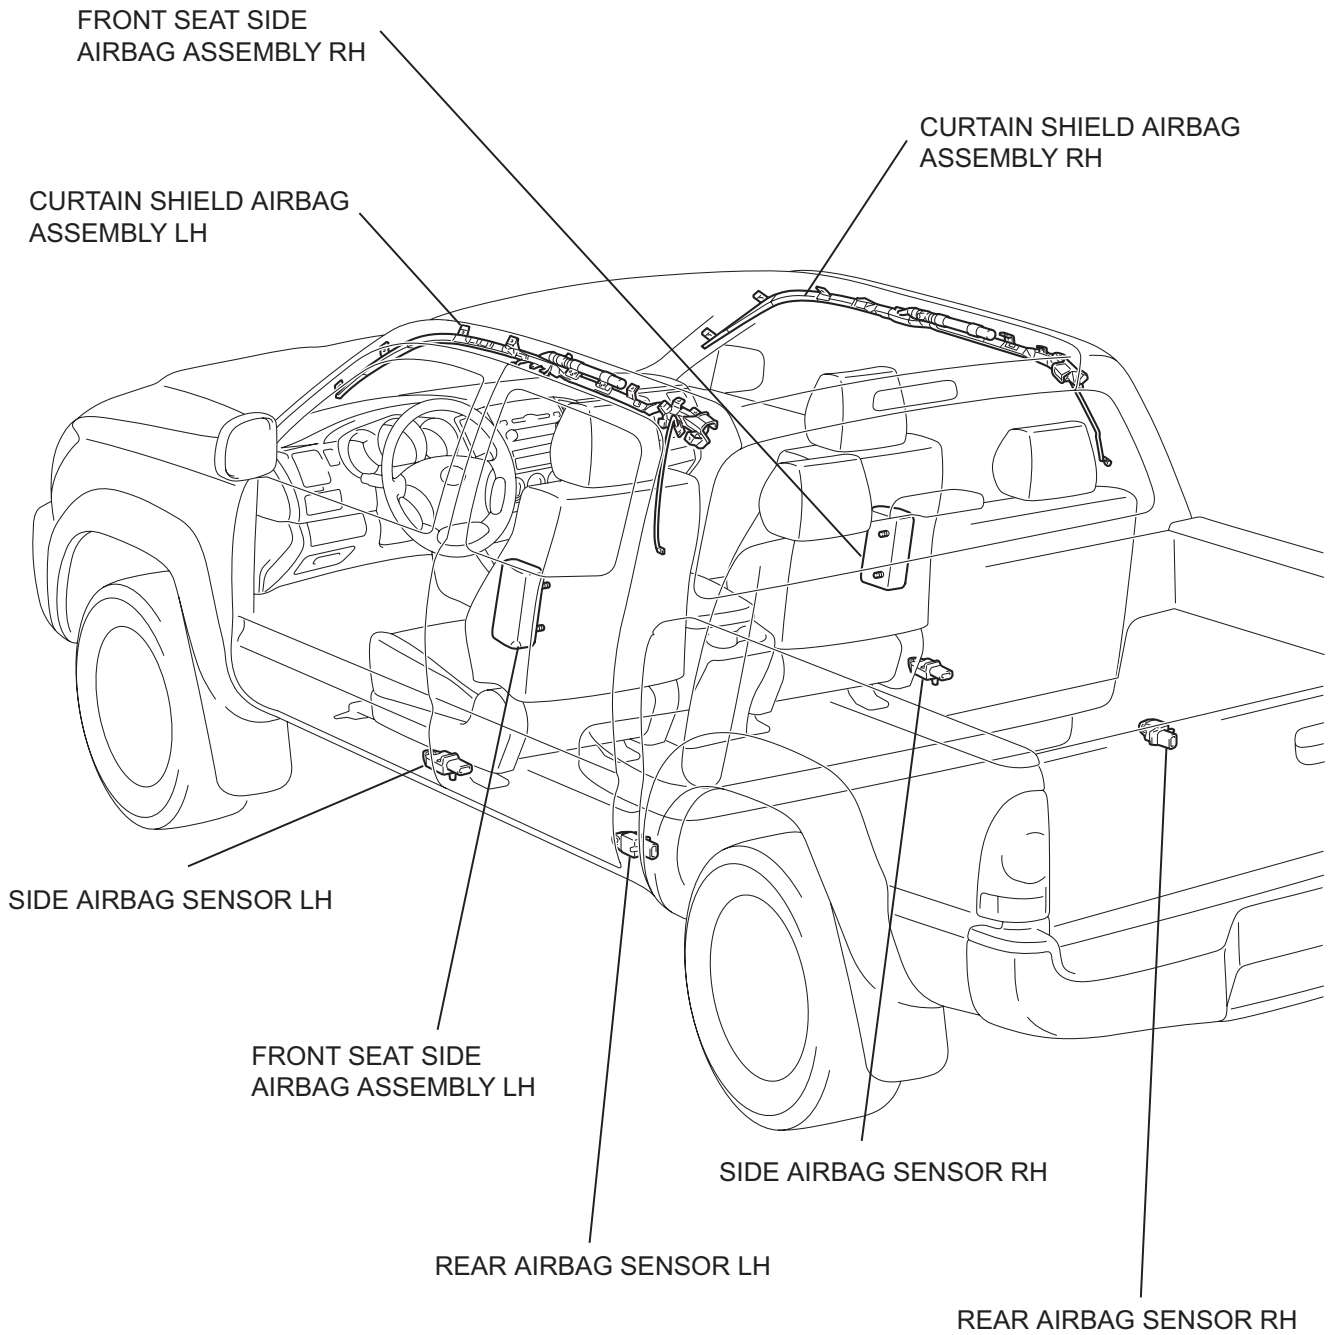

RS