

## HOW TO PROCEED WITH TROUBLESHOOTING

**1** VEHICLE BROUGHT TO WORKSHOP

NEXT

**2** CUSTOMER PROBLEM ANALYSIS (See page [IN-26](#))

NEXT

**3** PASSENGER AIRBAG ON/OFF INDICATOR CHECK (See page [RS-484](#))

NEXT

**4** DTCs CHECK (Present and Past DTCs) (See page [RS-487](#))

(a) Check for DTCs.

**Result**

Result	Proceed to
DTC is output.	A
DTC is not output.	B

**B**

GO TO PROBLEM SYMPTOMS TABLE

**A**

**5** DTCs CHART (See page [RS-489](#))

NEXT

**6** CIRCUIT INSPECTION

NEXT

**7** REPAIR OR REPLACEMENT

NEXT

**8** DTC CLEARANCE (Present and Past DTCs) (See page [RS-487](#))

(a) Clear the DTCs.

NEXT

**9 DTC CHECK (Present and Past DTCs) (See page RS-487)**

(a) Check for DTCs.

**Result**

Result	Proceed to
DTC is not output.	A
DTC is output.	B

**B** Go to step 5

A

**10 SYMPTOM SIMULATION**

(a) Check the passenger airbag ON/OFF indicator condition (See page RS-484).

**Result**

Result	Proceed to
Passenger airbag ON/OFF indicator is operating normally.	A
Passenger airbag ON/OFF indicator (OFF) and SRS warning light come on.	B

**B** Go to step 5

A

**11 CONFIRMATION TEST**

NEXT

END