



# SPIRAL CABLE

## REMOVAL


HINT:

COMPONENTS: See page [RS-556](#)

1. **PRECAUTION**
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**  
Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE NO.2 LOWER STEERING WHEEL COVER**  
(See page [SR-9](#))
5. **REMOVE NO.3 LOWER STEERING WHEEL COVER**  
(See page [SR-9](#))
6. **REMOVE STEERING PAD** (See page [RS-558](#))
7. **REMOVE STEERING WHEEL ASSEMBLY** (See page [SR-9](#))
8. **REMOVE LOWER STEERING COLUMN COVER**
  - (a) Remove the 2 screws.
  - (b) Disengage the 2 claws to remove the steering column cover lower.

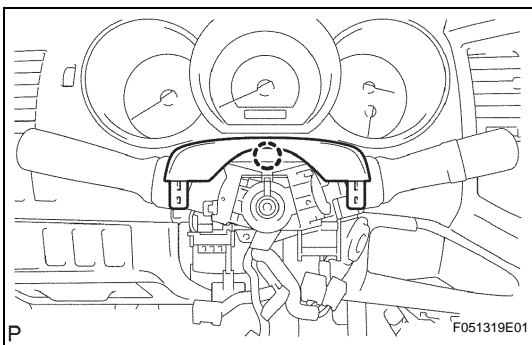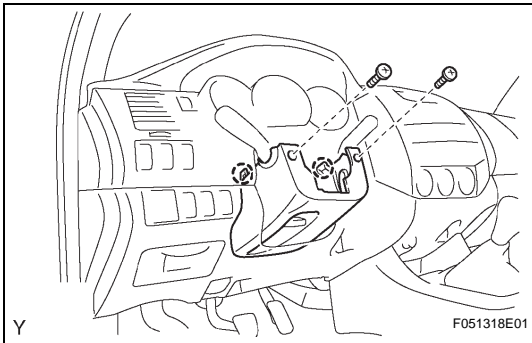

9. **REMOVE UPPER STEERING COLUMN COVER**
  - (a) Disengage the claw, then remove the upper steering column cover.

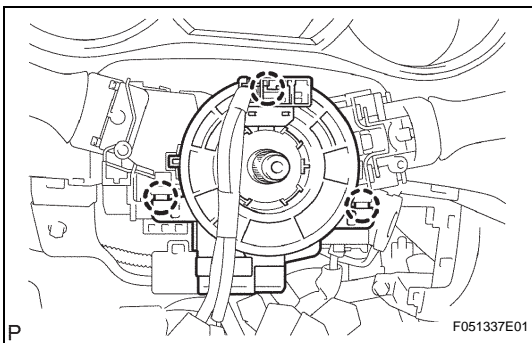

10. **REMOVE SPIRAL CABLE SUB-ASSEMBLY**
  - (a) Disconnect the airbag connector and the connector from the spiral cable sub-assembly.  
**NOTICE:**  
**When handling the airbag connector, take care not to damage the airbag with harness.**
  - (b) Disengage the 3 claws and remove the spiral cable sub-assembly.

---

## INSPECTION

### 1. INSPECT SPIRAL CABLE SUB-ASSEMBLY

- (a) If any of the following conditions is identified, replace the spiral cable sub-assembly with a new one.

**Condition:**

**Scratches or cracks on the connector**

**Cracks, dents or chipping of the spiral cable sub-assembly**