

## ON-VEHICLE INSPECTION

1. **INSPECT FRONT PASSENGER AIRBAG ASSEMBLY (for Vehicle not Involved in Collision)**
  - (a) Perform a diagnostic system check (See page [RS-37](#))
  - (b) With the front passenger airbag assembly installed on the vehicle, perform a visual check including the following: Cuts, minute cracks or marked discoloration on the instrument panel around the front passenger airbag assembly.
  
2. **INSPECT FRONT PASSENGER AIRBAG ASSEMBLY (for Vehicle Involved in Collision and Airbag not Deployed)**
  - (a) Perform a diagnostic system check (See page [RS-37](#))
  - (b) With the front passenger airbag assembly removed from the vehicle, perform a visual check including the following:
    - Cuts, minute cracks or marked discoloration on the front passenger airbag assembly.
    - Cracks or other damage to the wire harness or connector.
    - Deformation or cracks on the instrument panel or instrument panel reinforcement.

**CAUTION:**

**For removal and installation procedures of the front passenger airbag assembly, see Replacement on see page [RS-574](#), and be sure to follow the correct procedure.**

**HINT:**


If the instrument panel or instrument panel reinforcement is deformed or cracked, never repair it. Always replace it with a new one.

## REMOVAL



1. **PRECAUTION**
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**  
Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.
3. **REMOVE FRONT FLOOR FOOTREST (See page IR-1)**
4. **REMOVE FRONT DOOR SCUFF PLATE LH (for Regular Cab) (See page IR-40)**
5. **REMOVE FRONT DOOR SCUFF PLATE LH (for Access Cab) (See page IR-61)**
6. **REMOVE FRONT DOOR SCUFF PLATE LH (for Double Cab) (See page IR-12)**
7. **REMOVE FRONT DOOR SCUFF PLATE RH (for Regular Cab) (See page IR-41)**
8. **REMOVE FRONT DOOR SCUFF PLATE RH (for Access Cab) (See page IR-61)**
9. **REMOVE FRONT DOOR SCUFF PLATE RH (for Double Cab) (See page IR-12)**
10. **REMOVE COWL SIDE TRIM BOARD LH (for Regular Cab) (See page IR-40)**
11. **REMOVE COWL SIDE TRIM BOARD LH (for Access Cab) (See page IR-61)**
12. **REMOVE COWL SIDE TRIM BOARD LH (for Double Cab) (See page IR-12)**
13. **REMOVE COWL SIDE TRIM BOARD RH (for Regular Cab) (See page IR-40)**
14. **REMOVE COWL SIDE TRIM BOARD RH (for Access Cab) (See page IR-61)**
15. **REMOVE COWL SIDE TRIM BOARD RH (for Double Cab) (See page IR-12)**
16. **SEPARATE FRONT DOOR OPENING TRIM WEATHERSTRIP LH (See page IP-8)**
17. **SEPARATE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (See page IP-8)**
18. **REMOVE FRONT PILLAR GARNISH LH (for Regular Cab) (See page IR-41)**
19. **REMOVE FRONT PILLAR GARNISH LH (for Access Cab) (See page IR-62)**
20. **REMOVE FRONT PILLAR GARNISH LH (for Double Cab) (See page IR-13)**
21. **REMOVE FRONT PILLAR GARNISH RH (for Regular Cab) (See page IR-41)**

22. REMOVE FRONT PILLAR GARNISH RH (for Access Cab) (See page [IR-63](#))
23. REMOVE FRONT PILLAR GARNISH RH (for Double Cab) (See page [IR-14](#))
24. REMOVE INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake) (See page [IP-9](#))
25. REMOVE INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake) (See page [IP-9](#))
26. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Automatic Transmission on Separate Seat Type) (See page [IP-9](#))
27. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Manual Transmission on Separate Seat Type) (See page [IP-9](#))
28. REMOVE CONSOLE BOX ASSEMBLY REAR (for Separate Seat Type) (See page [IP-10](#))
29. REMOVE INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission on Separate Seat Type) (See page [IP-10](#))
30. REMOVE FRONT CONSOLE BOX (for Automatic Transmission on Separate Seat Type) (See page [IP-10](#))
31. REMOVE FRONT CONSOLE BOX (for Manual Transmission on Separate Seat Type) (See page [IP-11](#))
32. REMOVE FRONT CONSOLE BOX (for Automatic Transmission on Bench Seat Type) (See page [IP-11](#))
33. REMOVE FRONT CONSOLE BOX (for Manual Transmission on Bench Seat Type) (See page [IP-11](#))
34. REMOVE AIR CONDITIONING CONTROL ASSEMBLY (See page [IP-12](#))
35. REMOVE RADIO RECEIVER ASSEMBLY WITH BRACKET (See page [AV-69](#))
36. SEPARATE HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [ED-3](#))
37. REMOVE NO. 1 LOWER INSTRUMENT PANEL FINISH PANEL (See page [IP-12](#))
38. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-12](#))
39. REMOVE COMBINATION METER ASSEMBLY (See page [IP-13](#))
40. REMOVE CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-13](#))
41. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-13](#))

42. REMOVE LOWER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY RH (See page [IP-14](#))
43. REMOVE LOWER INSTRUMENT PANEL LH (See page [IP-14](#))
44. REMOVE LOWER INSTRUMENT PANEL COVER SUB-ASSEMBLY (See page [IP-14](#))
45. REMOVE INSTRUMENT SIDE PANEL RH (See page [IP-14](#))
46. DISCONNECT PASSENGER AIRBAG CONNECTOR
  - (a) Disconnect the airbag connector.
47. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY WITH PASSENGER AIRBAG ASSEMBLY (See page [IP-14](#))

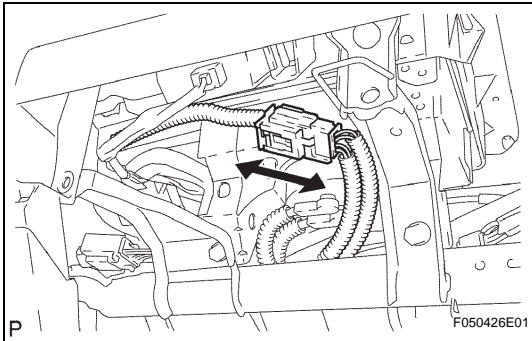


48. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY
  - (a) Disengage the 10 hooks and remove the front passenger airbag.
  - (b) Release the front side wall of the airbag door from the other hook and remove the front passenger airbag assembly.

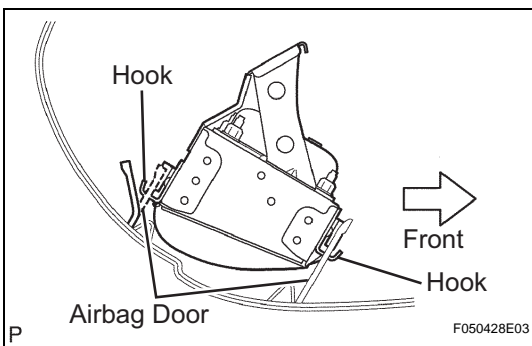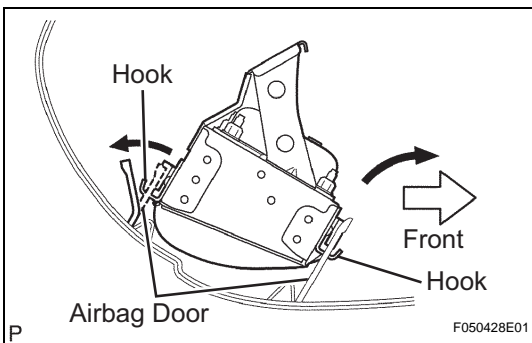

## INSTALLATION

1. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY
  - (a) Engage the 10 hooks so that the connector side faces the outside of the vehicle, and install the front passenger airbag assembly.
2. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY WITH PASSENGER AIRBAG ASSEMBLY (See page [IP-18](#))
3. CONNECT PASSENGER AIRBAG CONNECTOR
  - (a) Connect the passenger airbag connector and clamp.
4. INSTALL INSTRUMENT SIDE PANEL RH (See page [IP-20](#))
5. INSTALL LOWER INSTRUMENT COVER SUB-ASSEMBLY (See page [IP-20](#))
6. INSTALL LOWER INSTRUMENT PANEL LH (See page [IP-20](#))

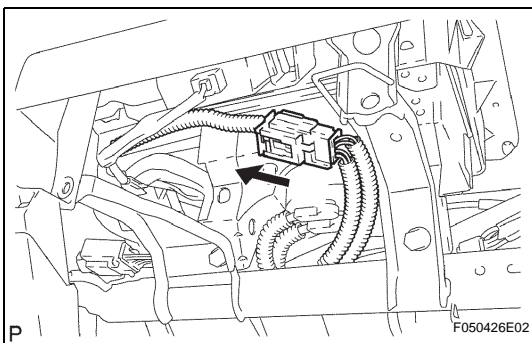

7. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY RH (See page [IP-20](#))
8. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-20](#))
9. INSTALL CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))
10. INSTALL COMBINATION METER ASSEMBLY (See page [IP-21](#))
11. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))
12. INSTALL NO. 1 LOWER INSTRUMENT PANEL FINISH PANEL (See page [IP-22](#))
13. CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [ED-8](#))
14. INSTALL RADIO RECEIVER ASSEMBLY WITH BRACKET (See page [AV-70](#))
15. INSTALL AIR CONDITIONING CONTROL ASSEMBLY (See page [IP-22](#))
16. INSTALL FRONT CONSOLE BOX (for Manual Transmission on Bench Seat Type) (See page [IP-22](#))
17. INSTALL FRONT CONSOLE BOX (for Automatic Transmission on Bench Seat Type) (See page [IP-23](#))
18. INSTALL FRONT CONSOLE BOX (for Manual Transmission on Separate Seat Type) (See page [IP-23](#))
19. INSTALL FRONT CONSOLE BOX (for Automatic Transmission on Separate Seat Type) (See page [IP-24](#))
20. INSTALL INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission on Separate Seat Type) (See page [IP-24](#))
21. INSTALL REAR CONSOLE BOX ASSEMBLY (for Separate Seat Type) (See page [IP-24](#))
22. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Manual Transmission on Separate Seat Type) (See page [IP-25](#))
23. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Automatic Transmission on Separate Seat Type) (See page [IP-25](#))
24. INSTALL INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake) (See page [IP-25](#))
25. INSTALL INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake) (See page [IP-25](#))
26. INSTALL FRONT PILLAR GARNISH LH (for Regular Cab) (See page [IR-51](#))

27. INSTALL FRONT PILLAR GARNISH LH (for Access Cab) (See page [IR-74](#))
28. INSTALL FRONT PILLAR GARNISH LH (for Double Cab) (See page [IR-28](#))
29. INSTALL FRONT PILLAR GARNISH RH (for Regular Cab) (See page [IR-52](#))
30. INSTALL FRONT PILLAR GARNISH RH (for Access Cab) (See page [IR-74](#))
31. INSTALL FRONT PILLAR GARNISH RH (for Double Cab) (See page [IR-28](#))
32. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH (for Regular Cab) (See page [IR-52](#))
33. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH (for Access Cab) (See page [IR-74](#))
34. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH (for Double Cab) (See page [IR-29](#))
35. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH (for Regular Cab) (See page [IR-52](#))
36. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH (for Access Cab) (See page [IR-74](#))
37. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH (for Double Cab) (See page [IR-29](#))
38. INSTALL COWL SIDE TRIM BOARD LH (for Regular Cab) (See page [IR-52](#))
39. INSTALL COWL SIDE TRIM BOARD LH (for Access Cab) (See page [IR-75](#))
40. INSTALL COWL SIDE TRIM BOARD LH (for Double Cab) (See page [IR-29](#))
41. INSTALL COWL SIDE TRIM BOARD RH (for Regular Cab) (See page [IR-52](#))
42. INSTALL COWL SIDE TRIM BOARD RH (for Access Cab) (See page [IR-75](#))
43. INSTALL COWL SIDE TRIM BOARD RH (for Double Cab) (See page [IR-29](#))
44. INSTALL FRONT DOOR SCUFF PLATE LH (for Regular Cab) (See page [IR-52](#))
45. INSTALL FRONT DOOR SCUFF PLATE LH (for Access Cab) (See page [IR-75](#))
46. INSTALL FRONT DOOR SCUFF PLATE LH (for Double Cab) (See page [IR-29](#))

47. **INSTALL FRONT DOOR SCUFF PLATE RH (for Regular Cab) (See page [IR-52](#))**
48. **INSTALL FRONT DOOR SCUFF PLATE RH (for Access Cab) (See page [IR-75](#))**
49. **INSTALL FRONT DOOR SCUFF PLATE RH (for Double Cab) (See page [IR-29](#))**
50. **INSTALL FRONT FLOOR FOOTREST (See page [IR-1](#))**
51. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**  
**Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)**
52. **INSPECT SRS WARNING LIGHT**  
**(See page [RS-28](#))**