


REMOVAL

HINT:

Use the same procedures for the RH side and LH side.

1. **PRECAUTION**
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.
3. **REMOVE RADIATOR GRILLE (See page ET-4)**
4. **REMOVE FRONT AIRBAG SENSOR**
 - (a) Remove the 2 bolts and front airbag sensor.
 - (b) Disconnect the connector from the sensor.

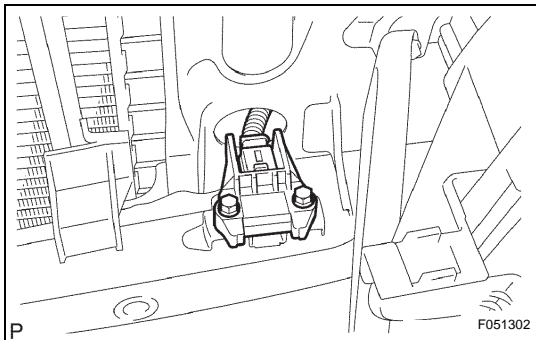

INSTALLATION

HINT:

Use the same procedures for the RH side and LH side.

1. INSTALL FRONT AIRBAG SENSOR

- (a) Check that the ignition switch is OFF.
- (b) Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:

After disconnecting cable from the terminal, wait for at least 90 seconds before starting the operation.

- (c) Check that there is no slack in the installation parts of the front airbag sensor.
- (d) Connect the connector to the front airbag sensor.
- (e) Install the front airbag sensor with the bolt.

Torque: 9.0 N*m (92 kgf*cm, 80 in.*lbf)

NOTICE:

- If the front airbag sensor has been dropped, or there are any cracks, dents or other defects in the case or connector, replace it with a new one.
- When installing the front airbag sensor, make sure that the SRS wiring does not interfere with any other parts and that it is not pinched between other parts.

2. INSTALL RADIATOR GRILLE (See page [ET-11](#))

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

4. INSPECT SRS WARNING LIGHT

(See page [RS-28](#))