


REMOVAL

HINT:

Use the same procedures for the RH side and LH side.

1. **PRECAUTION**
(See page [RS-1](#))
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.
3. **REMOVE FRONT DOOR SCUFF PLATE LH (See page [IR-12](#))**
4. **REMOVE REAR DOOR SCUFF PLATE LH (See page [IR-13](#))**
5. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH (See page [IR-13](#))**
6. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH (See page [IR-13](#))**
7. **REMOVE LAP BELT OUTER ANCHOR COVER (See page [IR-15](#))**
8. **REMOVE CENTER PILLAR LOWER GARNISH LH (See page [IR-15](#))**
9. **REMOVE SIDE AIRBAG SENSOR**
 - (a) Remove the bolt and the side airbag sensor.
 - (b) Disconnect the connector from the side airbag sensor.

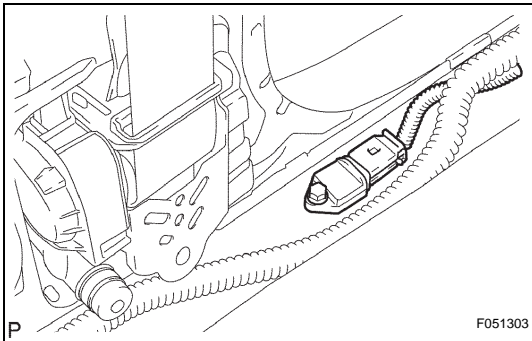

INSTALLATION

HINT:

Use the same procedures for the RH side and LH side.

1. REMOVE SIDE AIRBAG SENSOR

- (a) Check that the ignition switch is OFF.
- (b) Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:

After disconnecting the cable from the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the side airbag sensor with the bolt.

Torque:

9.0 N*m (80 kgf*cm, 80 in.*lbf)

NOTICE:

- Installation of the connector is done with the sensor assembly installed. Make sure that the sensor assembly is installed to the specified torque.
 - If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
 - When installing the sensor assembly, make sure that the SRS wiring does not interfere with other parts and is not pinched between other parts.
 - After installation, shake the sensor assembly to check that it is not loose.
- (d) Check that there is no slack in the installation parts of the side airbag sensor.
 - (e) Connect the connector to the side airbag sensor.

2. INSTALL CENTER PILLAR LOWER GARNISH LH (See page [IR-26](#))

3. INSTALL LAP BELT OUTER ANCHOR COVER (See page [IR-27](#))

4. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH (See page [IR-28](#))

5. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH (See page [IR-29](#))

6. INSTALL REAR DOOR SCUFF PLATE LH (See page [IR-29](#))

7. INSTALL FRONT DOOR SCUFF PLATE LH (See page [IR-29](#))

8. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

9. INSPECT SRS WARNING LIGHT (See page [RS-28](#))