

REMOVAL

NOTICE:

- If the wiring connector for the SRS is disconnected with the ignition switch in the ON position, DTCs will be recorded.
- Never use SRS parts from another vehicle. When replacing the parts, replace them with new ones.
- Never reuse a seat position sensor if an airbag has previously deployed in a collision.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.

2. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH (See page [SB-12](#))

3. REMOVE FRONT SEAT INNER BELT ASSEMBLY RH (See page [SB-12](#))

4. REMOVE FRONT SEAT HEADREST ASSEMBLY (See page [SE-53](#))


5. REMOVE FRONT SEAT ASSEMBLY (See page [SE-53](#))

6. REMOVE SEAT POSITION SENSOR PROTECTOR (for RHD)

- (a) Remove the seat slide position sensor protector from the seat position airbag sensor.


7. REMOVE SEAT POSITION SENSOR (for RHD)

- (a) Disconnect the connector from the seat position sensor.
- (b) Using "Torx" socket wrench T30, remove the "Torx" screw and the seat position sensor.

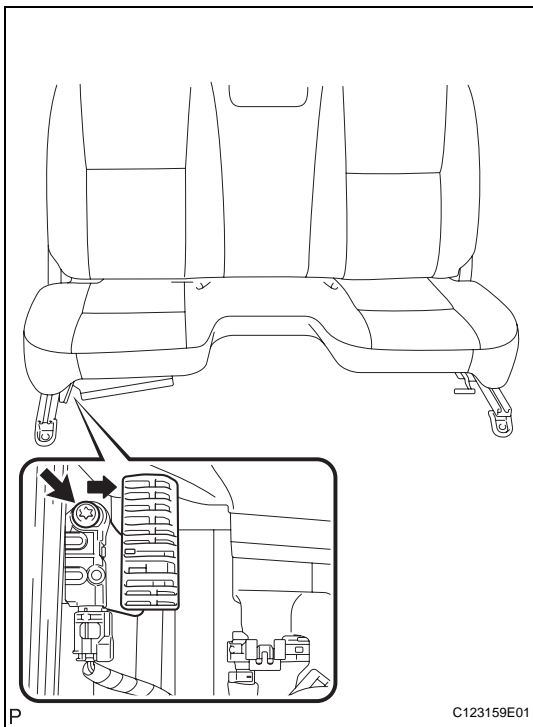

P

C123159E01

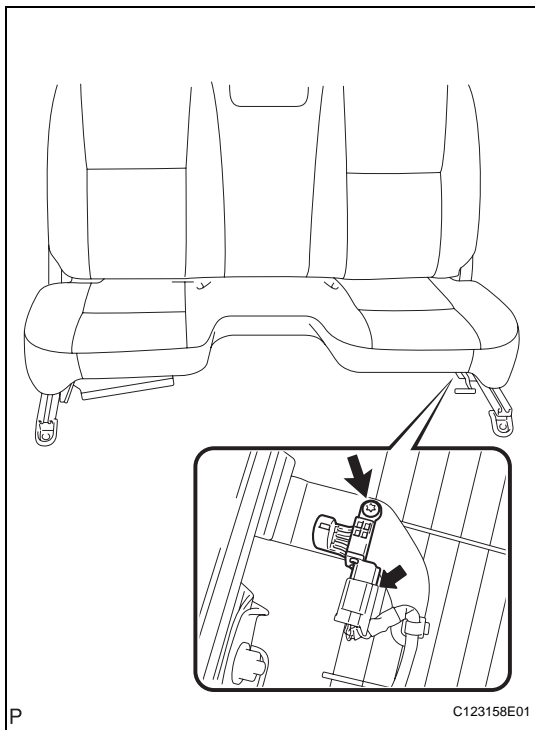

8. REMOVE SEAT POSITION SENSOR (for LHD)

- (a) Disconnect the connector from the seat position sensor.
- (b) Using "Torx" socket wrench T30, remove the "Torx" screw and the seat position sensor.

P

C123158E01