


SEAT POSITION SENSOR (for Bench Seat Type)

COMPONENTS

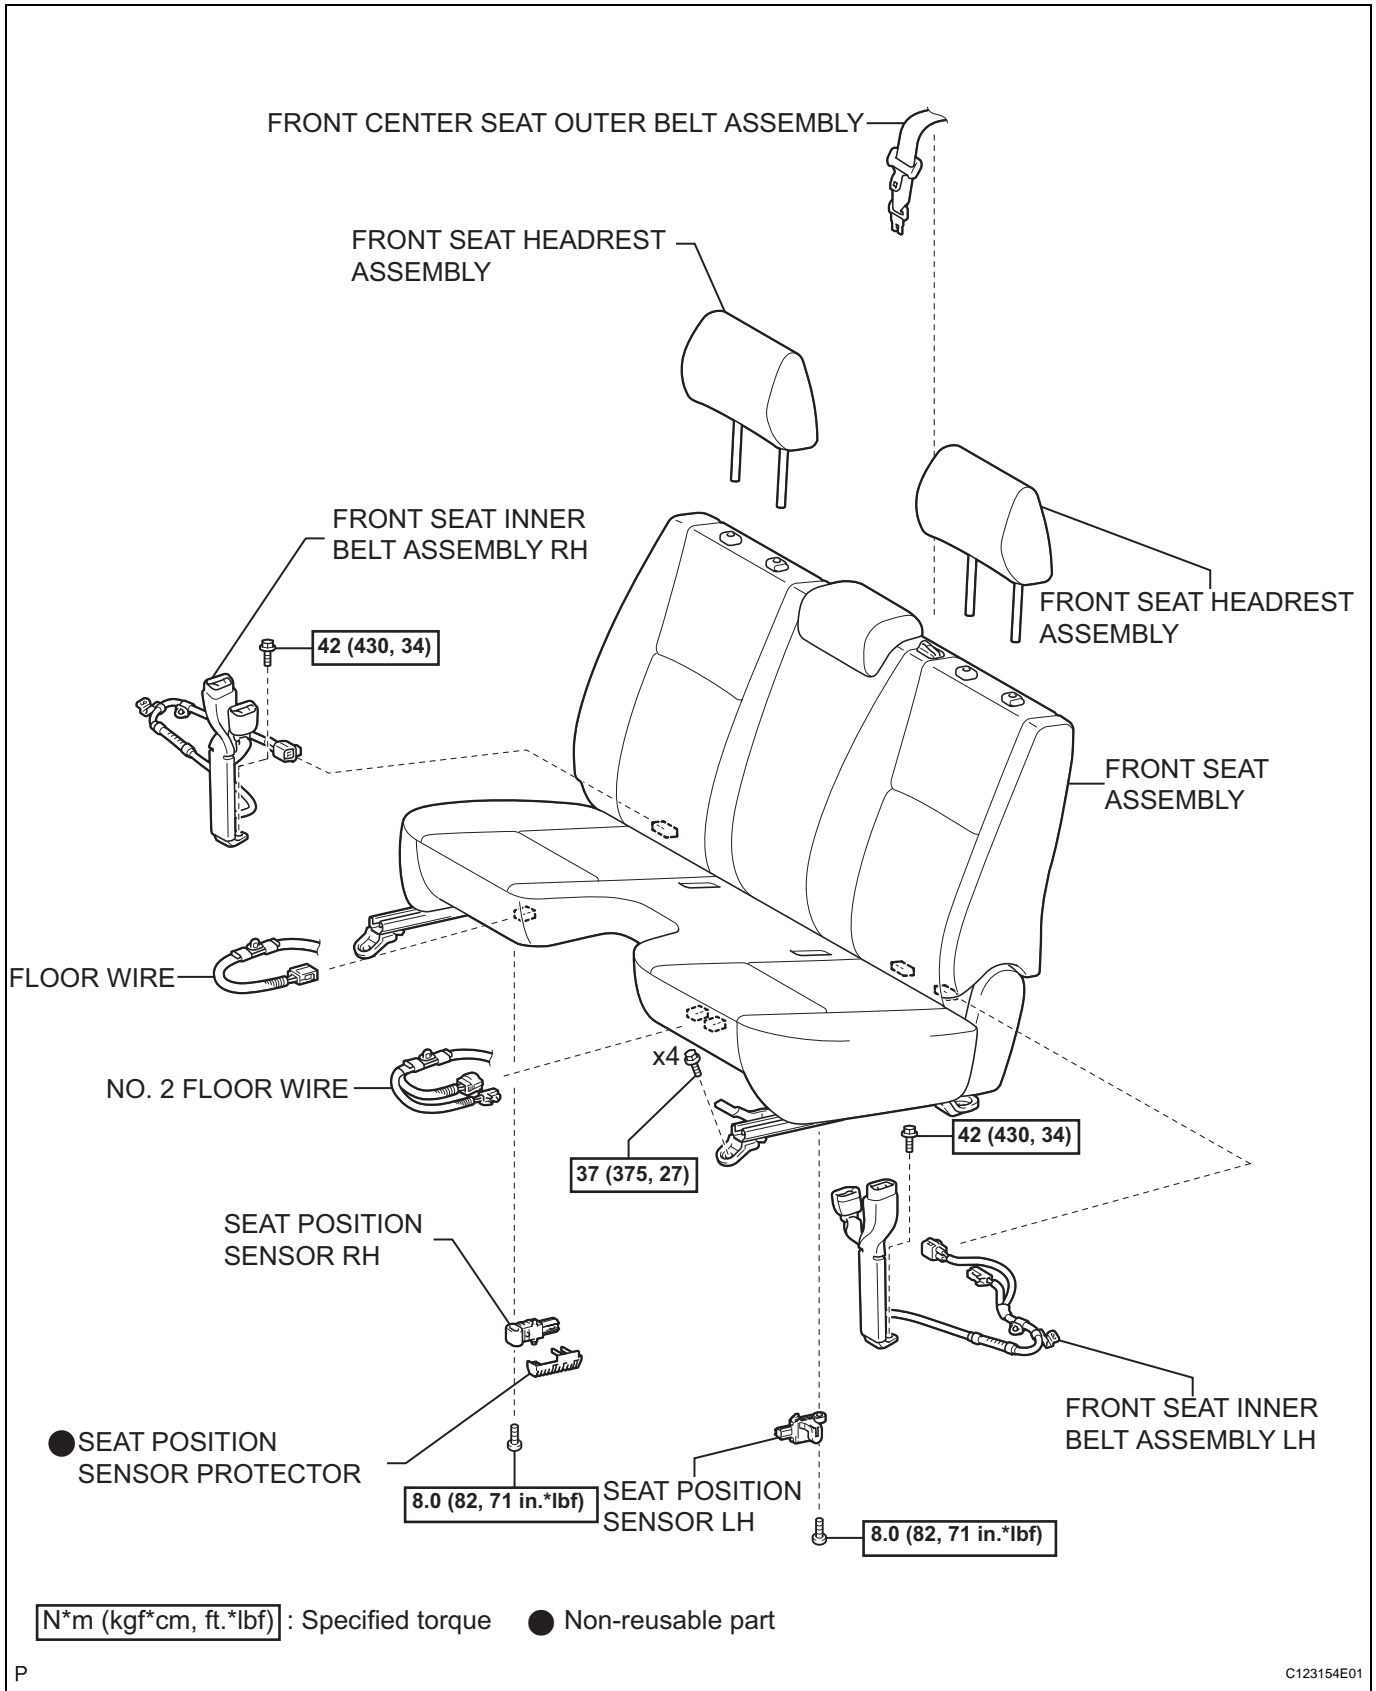

N*m (kgf*cm, ft.*lbf) : Specified torque ● Non-reusable part

ON-VEHICLE INSPECTION

1. **REMOVE SEAT POSITION SENSOR (for Vehicle not Involved in Collision)**
 - (a) Perform a diagnostic system check (See page [RS-34](#)).

 2. **REMOVE SEAT POSITION SENSOR (for Vehicle Involved in Collision)**
 - (a) Perform a diagnostic system check (See page [RS-34](#)).
 - (b) Even if the airbag was not deployed, perform a visual check for damage to the seat position airbag sensor. If there are any defects as mentioned below, replace the seat position airbag sensor with a new one:
 - Cracks, dents or chips in the case.
 - Cracks or other damage to the connector.
- CAUTION:**
For removal and installation procedures of the seat position airbag sensor, see pages [RS-620](#) and [RS-621](#), and be sure to follow the correct procedure.