


# OCCUPANT CLASSIFICATION ECU (for Separate Seat Type) COMPONENTS

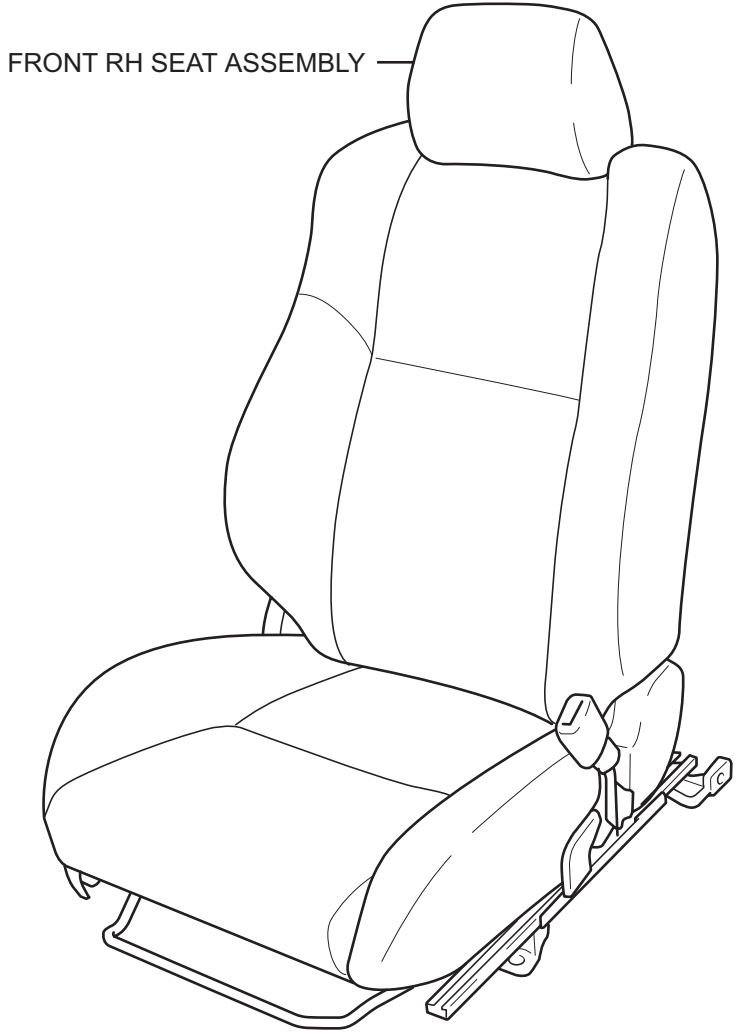

RS

---

## ON-VEHICLE INSPECTION

1. **INSPECT OCCUPANT CLASSIFICATION ECU (for Vehicle not Involved in Collision)**
  - (a) Perform a diagnostic system check (See page [RS-34](#)).
2. **INSPECT OCCUPANT CLASSIFICATION ECU (for Vehicle Involved in Collision)**
  - (a) Perform a diagnostic system check (See page [RS-34](#)).
  - (b) Even if the airbag was not deployed, perform a visual check for damage to the occupant classification ECU. If there are any defects as mentioned below, replace the occupant classification ECU with a new one:
    - Cracks, dents or chips in the case.
    - Cracks or other damage to the connector.

**CAUTION:**

**For removal and installation procedures of the occupant classification ECU, see page [RS-631](#), and be sure to follow the correct procedure.**