


OCCUPANT CLASSIFICATION ECU (for Bench Seat Type) COMPONENTS

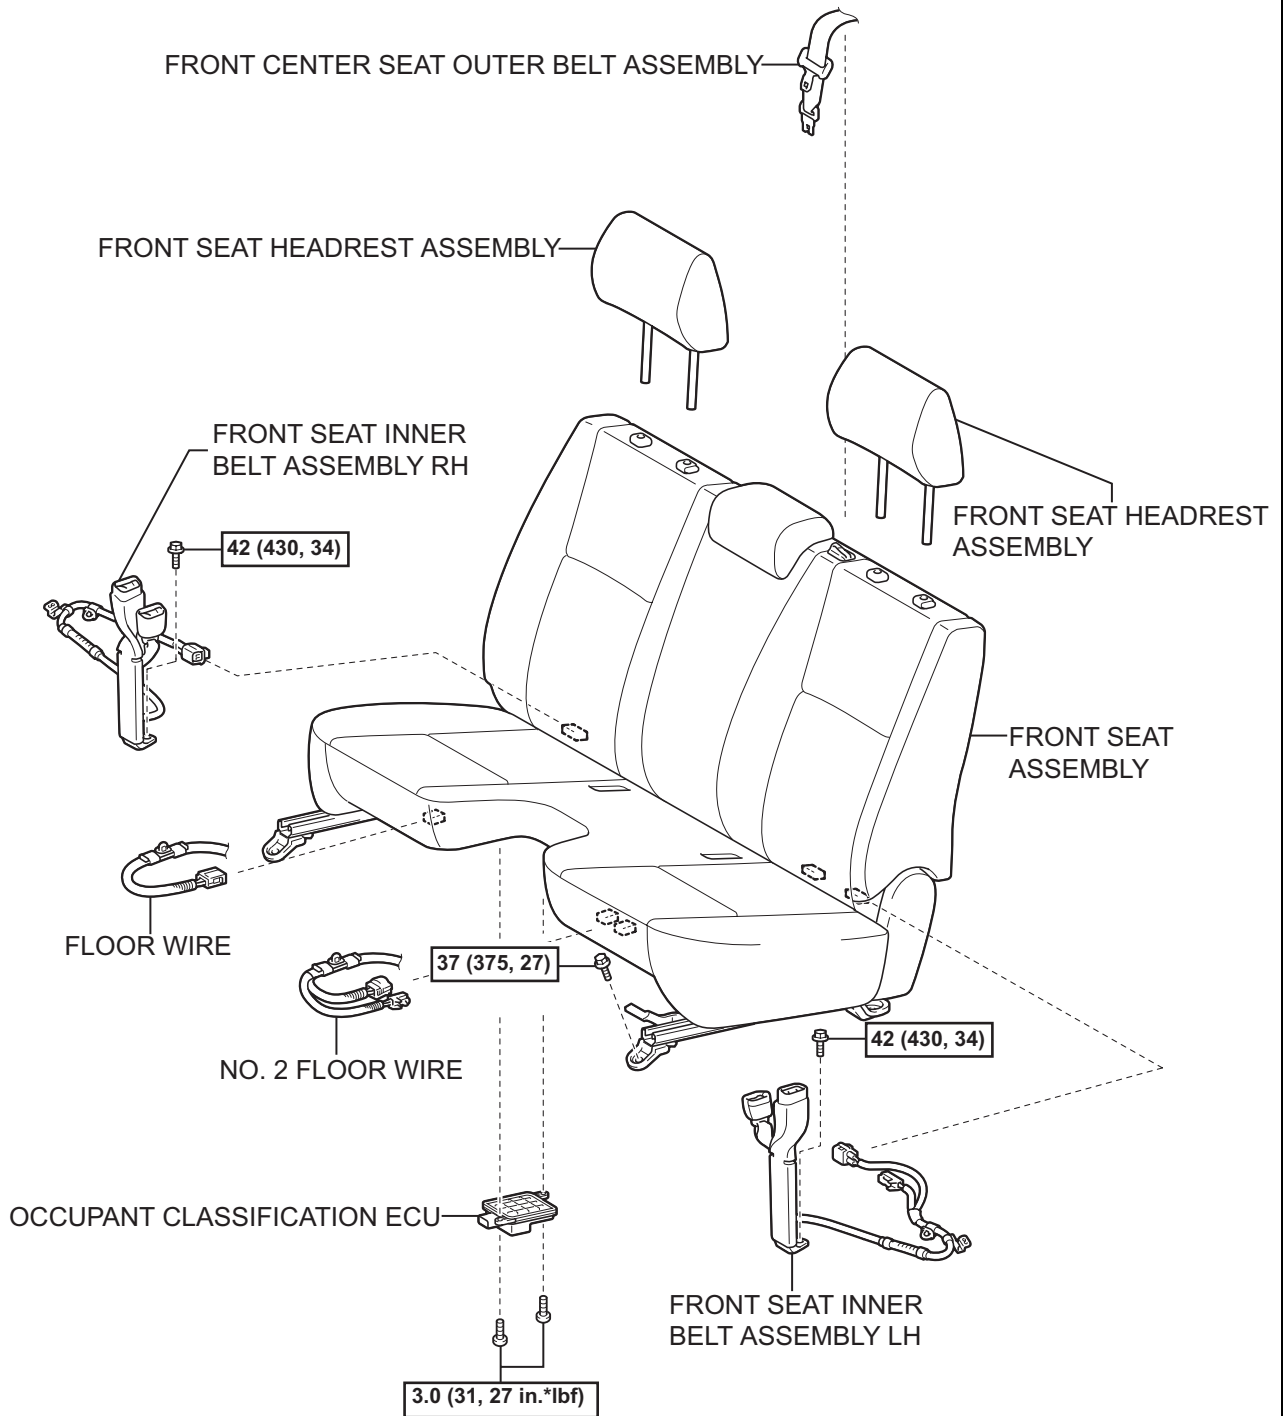

RS

N*m (kgf*cm, ft.*lbf) : Specified torque

ON-VEHICLE INSPECTION

1. **INSPECT OCCUPANT CLASSIFICATION ECU (for Vehicle not Involved in Collision)**
 - (a) Perform a diagnostic system check (See page [RS-34](#)).
2. **REMOVE OCCUPANT CLASSIFICATION ECU (for Vehicle Involved in Collision)**
 - (a) Perform a diagnostic system check (See page [RS-34](#)).
 - (b) Even if the airbag was not deployed, check if there is any damage to the occupant classification ECU. If there are any defects as mentioned below, replace the occupant classification ECU with a new one:
 - Cracks, dents or chips on the case.
 - Cracks or other damage to the connector.

CAUTION:

Be sure to follow the correct removal and installation procedures.