


13. REMOVE AIRBAG CUT OFF SWITCH

- (a) Disconnect the airbag cut off switch connector.
- (b) Remove the instrument cluster finish panel sub-assembly center while holding the 2 claws of the airbag cut off switch.

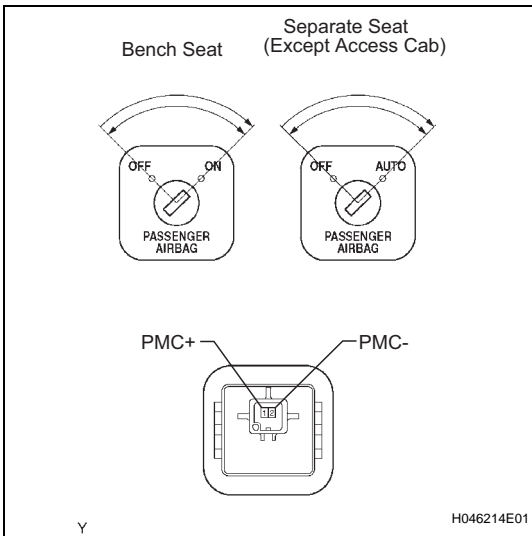

INSPECTION


1. INSPECT AIRBAG CUT OFF SWITCH

- (a) Check the resistance.
 - (1) Using an ohmmeter, measure the resistance between the terminals.

Standard :

Switch Connection	Tester Condition	Specified Condition
OFF	1 (MSW+) - 2 (MSW-)	80 to 120Ω
ON	1 (MSW+) - 2 (MSW-)	320 to 480Ω


If the result is not as specified, replace the air bag cut off switch.

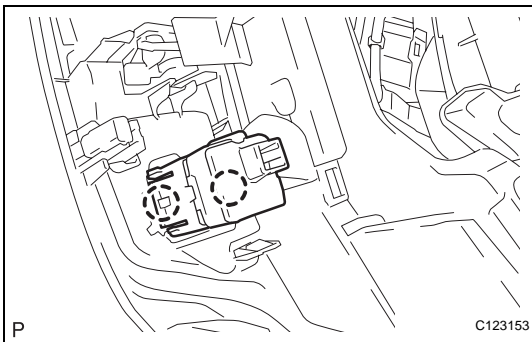

INSTALLATION

1. INSTALL AIRBAG CUT-OFF SWITCH

- (a) Engage the 2 claws of the cut off switch with the instrument cluster finish panel sub-assembly center.
- (b) Attach the connector to the airbag cut off switch.

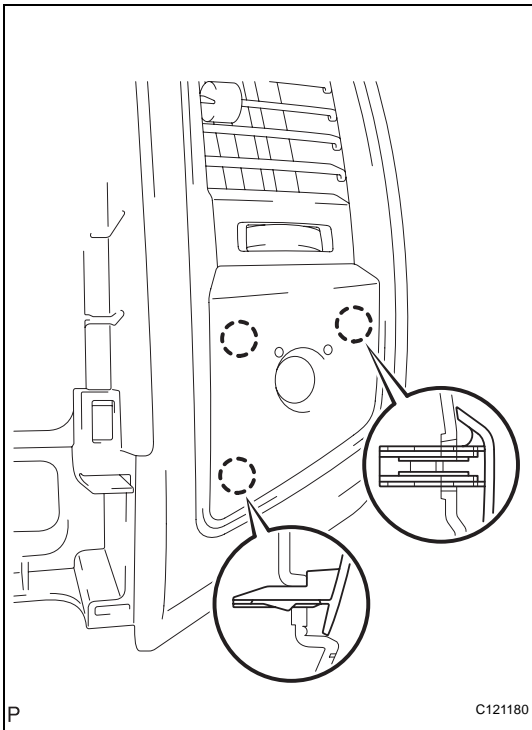

2. **INSTALL SWITCH BASE HOLE COVER**
(a) Disengage the 3 claws and install the switch base hole cover.
3. **INSTALL CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY** (See page [IP-21](#))
4. **INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY** (See page [IP-21](#))
5. **INSTALL INSTRUMENT LOWER PANEL LH** (See page [IP-20](#))
6. **INSTALL NO.1 LOWER INSTRUMENT PANEL FINISH PANEL** (See page [IP-22](#))
7. **CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY** (See page [ED-8](#))
8. **INSTALL RADIO RECEIVER ASSEMBLY WITH BRACKET** (See page [AV-70](#))
9. **INSTALL AIR CONDITIONING CONTROL ASSEMBLY** (See page [IP-22](#))
10. **INSTALL INSTRUMENT PANEL HOLE COVER** (for Lever Type Parking Brake) (See page [IP-25](#))
11. **INSTALL INSTRUMENT PANEL UNDER TRAY** (for Pedal Type Parking Brake) (See page [IP-25](#))
12. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
13. **INSPECT SRS WARNING LIGHT**
(See page [RS-28](#))