
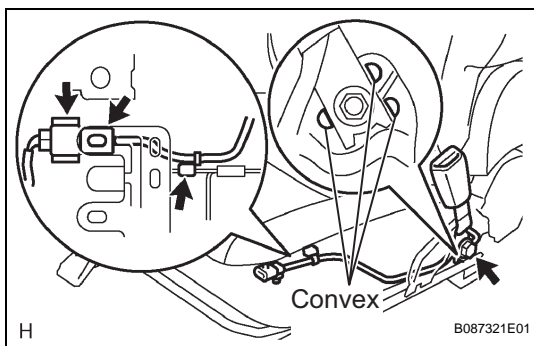


## INSTALLATION

### CAUTION:

Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (w/ Front Seat Side Airbag) (See page [RS-1](#)).

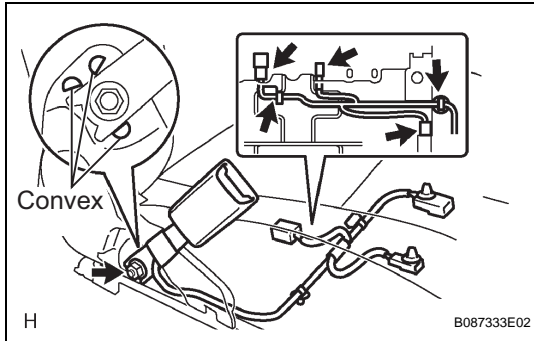

### 1. INSTALL FRONT SEAT INNER BELT ASSEMBLY

#### (a) for Separate Seat Type Driver Side:

- (1) Install the front seat inner belt with the nut.

**Torque: 42 N\*m (430 kgf\*cm, 31 ft.\*lbf)**

#### NOTICE:

**Be careful not to place the front seat inner belt over the convex areas of the front seat with adjuster frame.**

- (2) Check that the front seat inner belt rotates smoothly.
- (3) Connect the seat position sensor connector.
- (4) Install the 2 wire harness clamps and 2 connector clamps.

#### (b) for Separate Seat Type Front Passenger Side and Separate Folding Seat Type:

- (1) Install the front seat inner belt with the nut.

**Torque: 42 N\*m (430 kgf\*cm, 31 ft.\*lbf)**

#### NOTICE:

**Be careful not to place the front seat inner belt over the convex areas of the front seat with adjuster frame.**

- (2) Check that the front seat inner belt rotates smoothly.
- (3) Install the wire harness clamp and connector clamp.
- (4) Connect the seat wire connector.

### 2. INSTALL FRONT SEAT ASSEMBLY

#### (a) for Separate Seat Type Driver Side:

- (1) Install the front seat assembly (See page [SE-34](#)).

#### (b) for Separate Seat Type Front Passenger Side:

- (1) Install the front seat assembly (See page [SE-47](#)).

#### (c) for Separate Folding Seat Type:

- (1) Install the front seat assembly (See page [SE-18](#)).

### 3. INSTALL SEAT TRACK COVER

#### (a) for Separate Seat Type Driver Side:

- (1) Install the seat track cover (See page [SE-34](#)).

#### (b) for Separate Seat Type Front Passenger Side:

- (1) Install the seat track cover (See page [SE-48](#)).

#### (c) for Separate Folding Seat Type:

- (1) Install the seat track cover (See page [SE-19](#)).

### 4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

**Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)**

5. **INSPECT SRS WARNING LIGHT (w/ Front Seat Side Airbag)**  
(See page [RS-28](#))