


# FRONT CENTER SEAT OUTER BELT (for Bench Seat Type) COMPONENTS

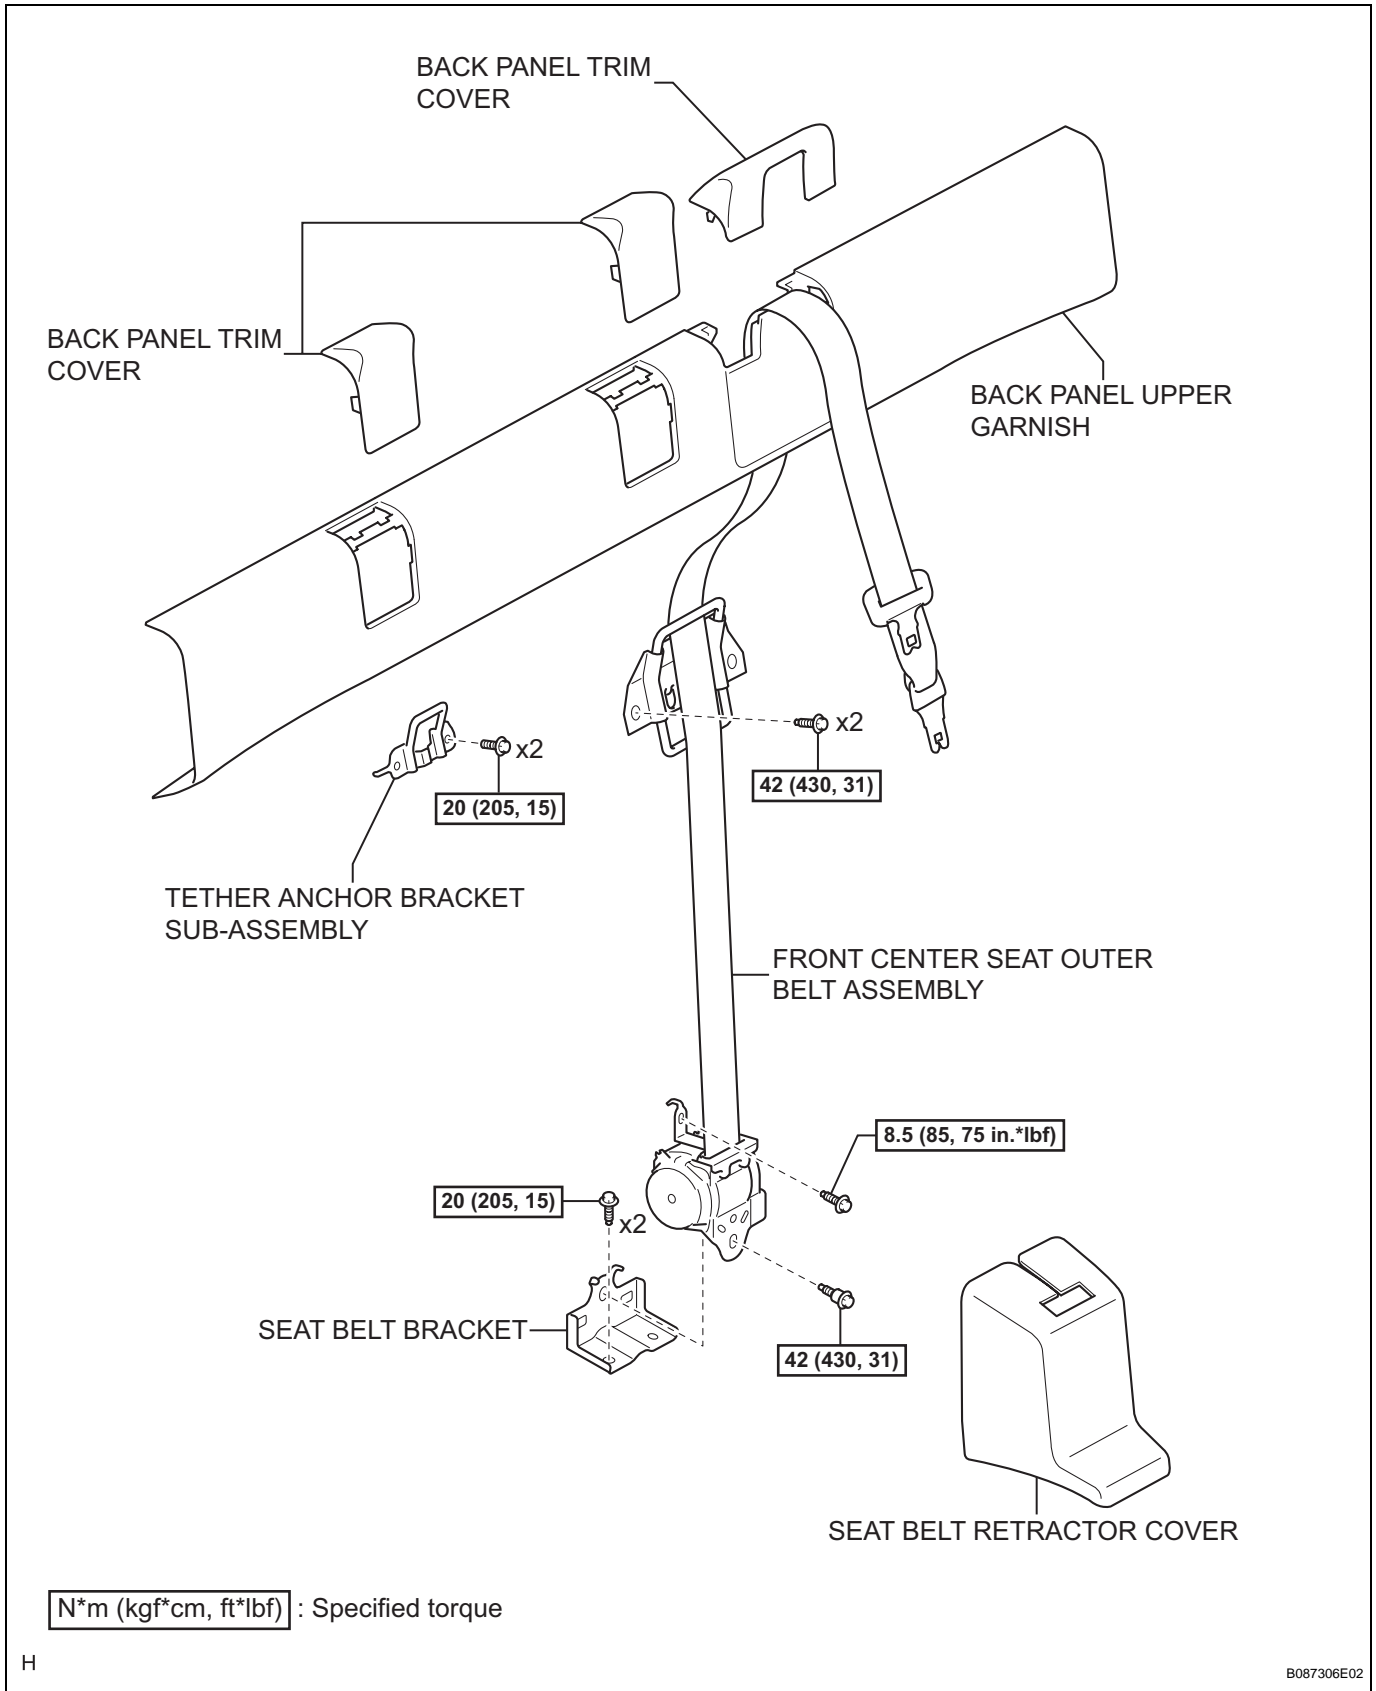


SB

**REMOVAL****1. REMOVE BACK PANEL TRIM COVER**


- (a) Disengage the 6 claws and remove the back panel trim cover.

HINT:


Follow the same procedures as for the opposite side.

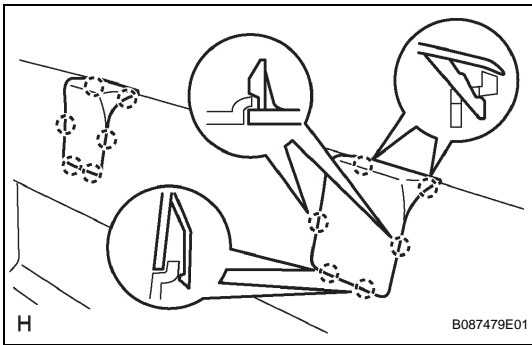


- (b) Disengage the 6 claws and remove the back panel trim cover.

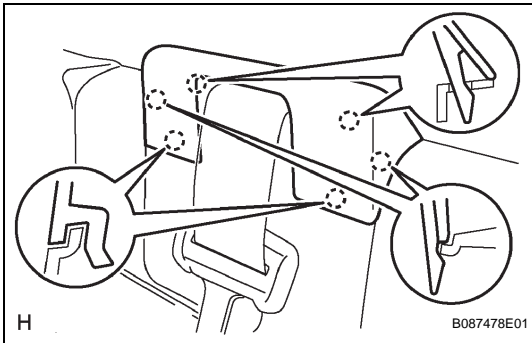**2. REMOVE BACK PANEL UPPER GARNISH (See page [IR-43](#))****3. REMOVE SEAT BELT RETRACTOR COVER**


- (a) Disengage the 4 clips and remove the seat retractor cover.

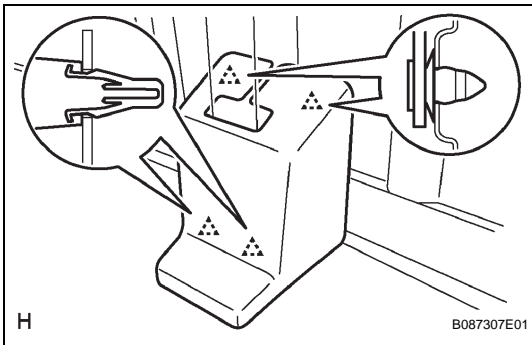
**4. REMOVE REAR CENTER SEAT OUTER BELT ASSEMBLY**

- (a) Remove the 2 bolts and shoulder anchor.

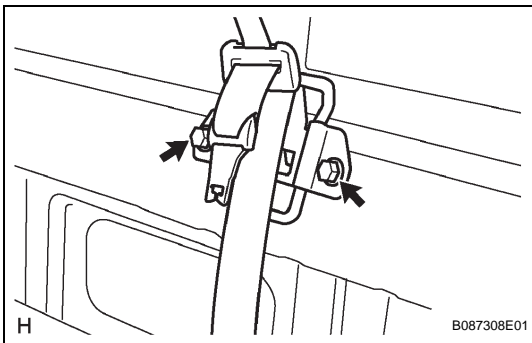


- (b) Remove the 2 bolts and retractor.

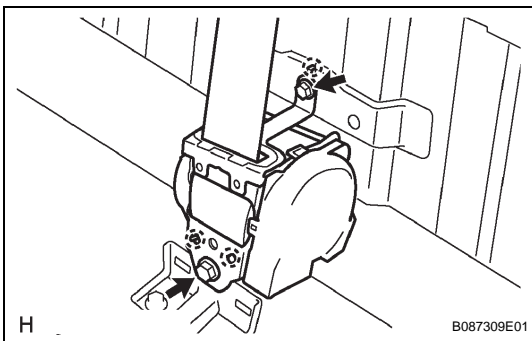


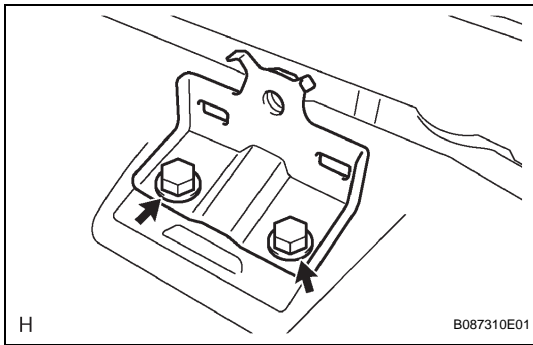**5. REMOVE SEAT BELT BRACKET**


- (a) Remove the 2 bolts and seat belt bracket.

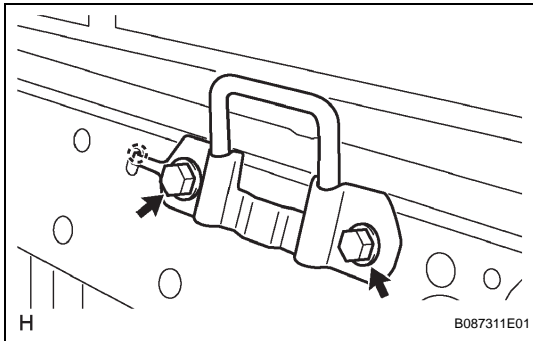**6. REMOVE TETHER ANCHOR BRACKET SUB-ASSEMBLY**


- (a) Remove the 2 bolts and tether anchor bracket.

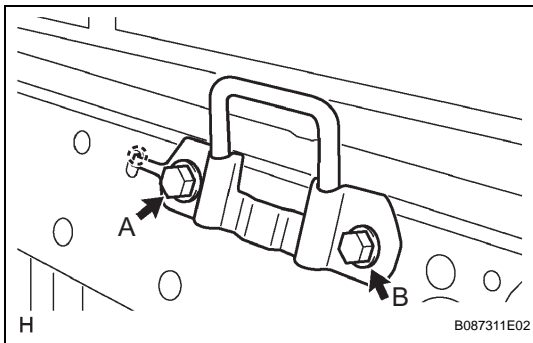**INSTALLATION****1. INSTALL TETHER ANCHOR BRACKET SUB-ASSEMBLY**

- (a) Hook the claw of the tether anchor bracket into the body hole.  
 (b) Tighten bolt A, and then tighten bolt B.  
**Torque: 20 N\*m (205 kgf\*cm, 15 ft.\*lbf)**

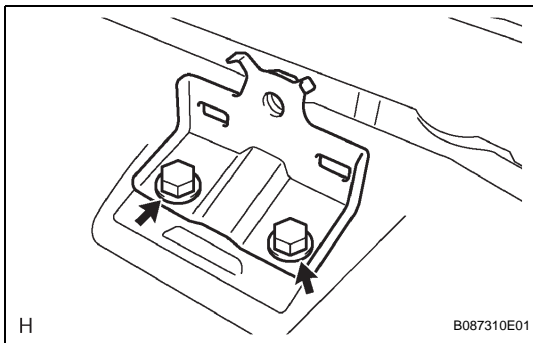**2. INSTALL SEAT BELT BRACKET**

- (a) Install the seat belt bracket with the 2 bolts.  
**Torque: 20 N\*m (205 kgf\*cm, 15 ft.\*lbf)**

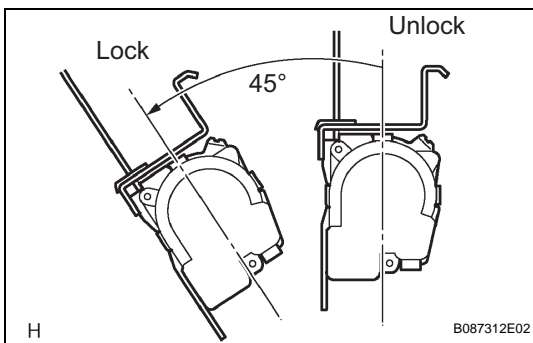
**3. INSTALL REAR SEAT SHOULDER BELT GUIDE**

- (a) Check the amount of inclination required to lock the retractor.  
 (1) Gently incline the retractor from its initial position. Check that the belt does not lock when the retractor is inclined 15° or less in any directions. Also check that the belt locks when the inclination of the retractor is 45° or more.


**NOTICE:**

**Do not disassemble the retractor.**

If operation is not as specified, replace the rear center seat outer belt.

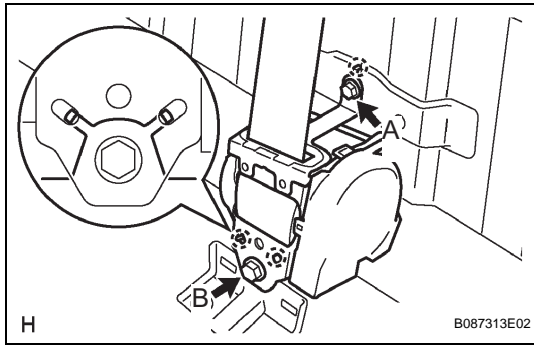

- (b) Hook the lower stay of the retractor onto the 2 hooks of the seat belt bracket.  
 (c) Tighten bolt A, and then tighten bolt B.  
**Torque: 8.5 N\*m (85 kgf\*cm, 75 in.\*lbf) for bolt A**  
**42 N\*m (430 kgf\*cm, 31 in.\*lbf) for bolt B**

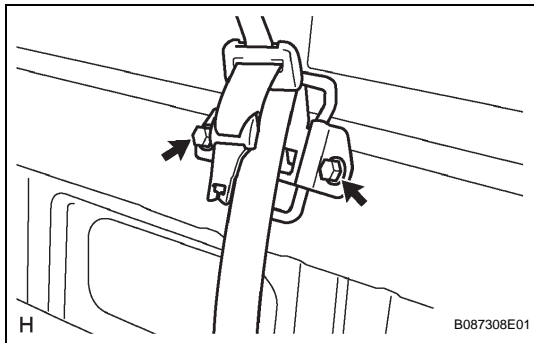


- (d) Install the shoulder anchor with the 2 bolts.  
**Torque: 42 N\*m (430 kgf\*cm, 31 ft.\*lbf)**  
 (e) Check the ELR lock.

**NOTICE:**

- The check should be performed with the rear center seat outer belt installed.
- Do not allow the anchor part of the rear center seat outer belt and the protruding parts of the floor panel to overlap.


- (1) With the belt installed, check that the belt locks when it is pulled out quickly.  
 If operation is not as specified, replace the rear center seat outer belt.

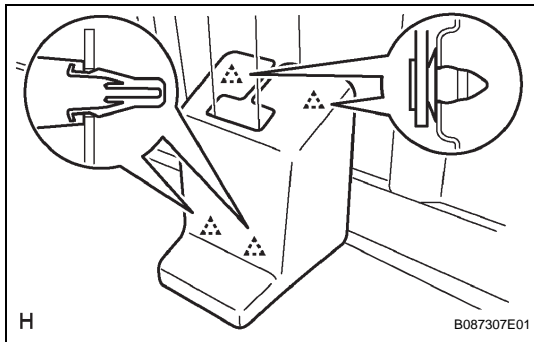

**4. INSTALL SEAT BELT RETRACTOR COVER**


- (a) Engage the 4 clips and install the seat retractor cover.

**5. INSTALL BACK PANEL UPPER GARNISH (See page IR-50)**

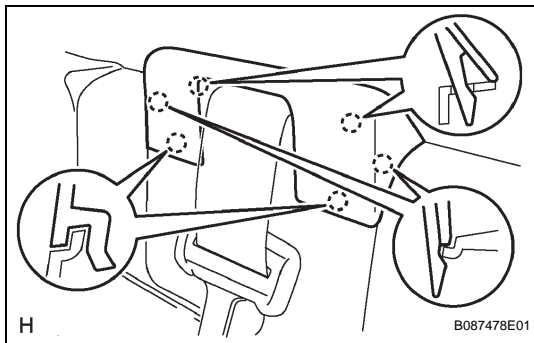

**6. INSTALL BACK PANEL TRIM COVER**

- (a) Engage the 6 claws and install the back panel trim cover.

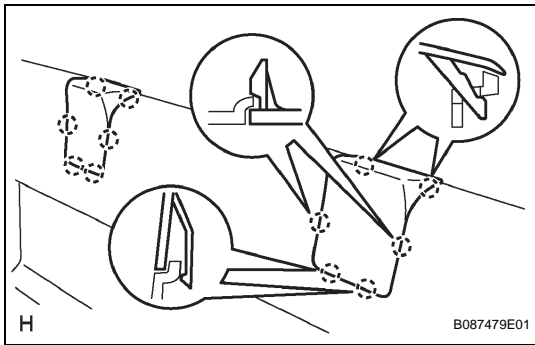

- (b) Engage the 6 claws and install the back panel trim cover.  
HINT:  
Follow the same procedures as for the opposite side.