

## REAR SEAT INNER BELT ASSEMBLY (for Double Cab)

### REMOVAL


#### 1. REMOVE REAR SEAT INNER BELT ASSEMBLY

(a) for LH Side:

- (1) Remove the bolt and rear seat inner belt.

(b) for RH Side:

- (1) Remove the bolt, rear seat inner belt and floor anchor of the rear center seat outer belt.

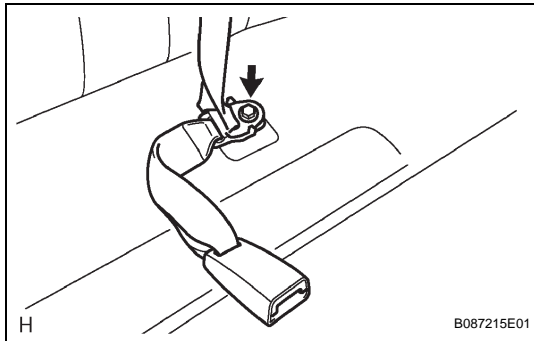

### INSTALLATION

#### 1. INSTALL REAR SEAT INNER BELT ASSEMBLY


(a) for LH Side:

- (1) Install the rear seat inner belt with the bolt.

**Torque: 42 N\*m (430 kgf\*cm, 31 ft.\*lbf)**

#### NOTICE:

- Make sure that the rear seat inner belt is oriented in the correct direction when installing.
- Be careful not to place the rear seat inner belt over the convex areas of the floor panel.

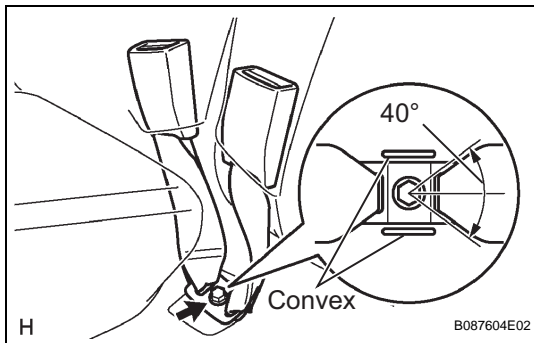

(b) for RH Side:

- (1) Install the rear seat belt inner and floor anchor of the rear center seat outer center with the bolt.

**Torque: 42 N\*m (430 kgf\*cm, 31 ft.\*lbf)**

#### NOTICE:

- Make sure that the rear seat inner belt and floor anchor of the rear center seat outer belt are oriented in the correct direction when installing.
- Be careful not to place the rear seat inner belt (and floor anchor of the rear center seat outer belt) over the convex areas of the floor panel.

