



REAR SEAT INNER BELT ASSEMBLY (for Access Cab)

REMOVAL

1. **REMOVE REAR SEAT INNER BELT ASSEMBLY**
 - (a) Disengage the claw and remove the buckle.
 - (b) Open the anchor cover.
 - (c) Remove the bolt and rear seat inner belt.

INSTALLATION

1. **INSTALL REAR SEAT INNER BELT ASSEMBLY**
 - (a) Install the rear seat inner belt with the bolt.
Torque: 42 N*m (430 kgf*cm, 31 ft.*lbf)
 - (b) Check that the floor anchor rotates smoothly.
 - (c) Close the anchor cover.
 - (d) Engage the claw and install the buckle.

