## INSTALLATION

## 1. REMOVE LICENSE PLATE LIGHT ASSEMBLY

- (a) Install the license plate light bulb into the light socket.
- (b) To install the license plate light bulb socket and bulb, turn them in the direction indicated by the arrow in the illustration.

(c) Install the license plate light assembly with the screw.

## CONNECT CABLE TO NEGATIVE BATTERY TERMINAL Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)

- 2. CONNECT CABLE TERMINAL Torque: 3.9 N\*m (4
- Т Е076087E01

