


Connector Front side:

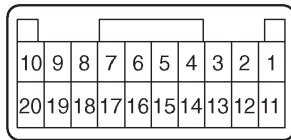

T

E076075E01

INSPECTION

1. INSPECT HEADLIGHT DIMMER SWITCH ASSEMBLY

- (a) Check the resistance of the light control switch.
- (1) Measure the resistance using an ohmmeter, and check the results in accordance with the value(s) in the table below.

Standard

Tester Connection	Condition	Specified Condition
-	OFF	10 k Ω or higher
12-18	TAIL	Below 1 Ω
12-18-20	HEAD	Below 1 Ω

If the result is not as specified, replace the headlight dimmer switch assembly.

- (b) Check the resistance of the headlight dimmer switch.
- (1) Measure the resistance using an ohmmeter, and check the results in accordance with the value(s) in the table below.

Standard

Tester Connection	Condition	Specified Condition
11-12-17	FLASH	Below 1 Ω
12-16	LOW BEAM	Below 1 Ω
11-12	HI BEAM	Below 1 Ω

If the result is not as specified, replace the headlight dimmer switch assembly.

- (c) Check the resistance of the turn signal switch.
- (1) Measure the resistance using an ohmmeter, and check the results in accordance with the value(s) in the table below.

Standard


Tester Connection	Condition	Specified Condition
12-13	Right turn	Below 1 Ω
-	Neutral	10 k Ω or higher
12-15	Left turn	Below 1 Ω

If the result is not as specified, replace the headlight dimmer switch assembly.

INSTALLATION


1. INSTALL HEADLIGHT DIMMER SWITCH ASSEMBLY

- (a) Engage the 2 claws and install the headlight dimmer switch assembly as shown in the illustration.

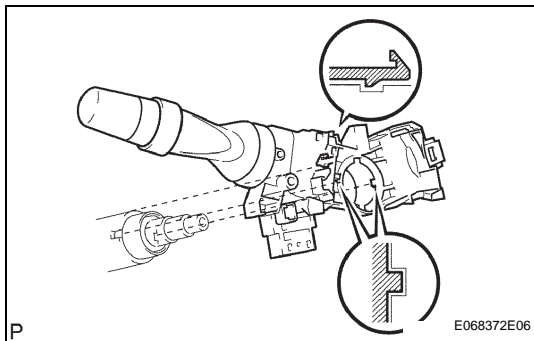

P

E068372E06

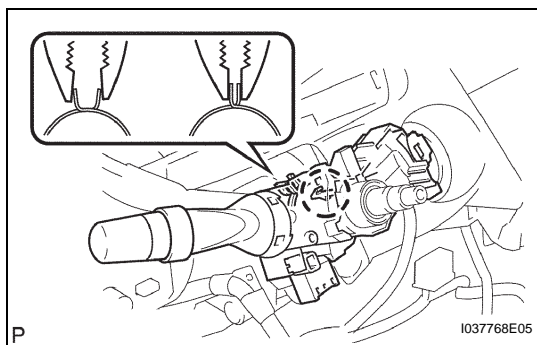

- (b) Install the headlight dimmer switch assembly with the clamp.
 - (c) Connect the connector.
2. **INSTALL WINDSHIELD WIPER SWITCH ASSEMBLY** (See page [WW-19](#))
 3. **INSTALL SPIRAL CABLE SUB-ASSEMBLY** (See page [RS-567](#))
 4. **INSTALL STEERING COLUMN UPPER COVER** (See page [SR-18](#))
 5. **INSTALL STEERING COLUMN LOWER COVER** (See page [SR-18](#))
 6. **CENTER SPIRAL CABLE** (See page [RS-567](#))
 7. **INSTALL STEERING WHEEL ASSEMBLY** (See page [SR-18](#))
 8. **INSPECT STEERING WHEEL CENTER POINT**
 9. **INSPECT HORN BUTTON ASSEMBLY**
 10. **INSTALL HORN BUTTON ASSEMBLY**
 11. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
 12. **INSPECT SRS WARNING LIGHT**
 13. **INSTALL NO. 3 STEERING WHEEL LOWER COVER** (See page [RS-559](#))
 14. **INSTALL NO. 2 STEERING WHEEL LOWER COVER** (See page [RS-559](#))