



FRONT FOG LIGHT SWITCH

INSPECTION

1. INSPECT FRONT FOG LIGHT SWITCH

- (a) Check the resistance.
- (1) Measure the resistance using an ohmmeter, and check the results in accordance with the value(s) in the table below.

Standard

Tester Connection	Condition	Specified Condition
1-2	Illumination circuit	Below 1 Ω
3-4	OFF	10 k Ω or higher
3-4	ON	Below 1 Ω

If the result is not as specified, replace the front fog light switch assembly.

- (b) Check the illumination operation.
- (1) Connect the battery positive (+) lead to terminal 1 and the battery negative (-) lead to terminal 2, then check that the illumination comes on.

Standard:

Illumination comes on.

If the illumination does not come on, replace the bulb.