

# HEADLIGHT DIMMER RELAY

## INSPECTION

### 1. INSPECT HEADLIGHT DIMMER RELAY


(a) Check the resistance.

- (1) Using an ohmmeter, measure the resistance between the terminals.

#### Standard

| Tester Connection | Specified Condition  |
|-------------------|--|
| 3-4               | Below 1 $\Omega$   |
| 3-4               | 10 k $\Omega$ or higher<br>(When battery voltage applied to terminals 1 and 2) |
| 3-5               | 10 k $\Omega$ or higher  |
| 3-5               | Below 1 $\Omega$<br>(When battery voltage applied to terminals 1 and 2)        |

If the result is not as specified, replace, the headlight dimmer relay.

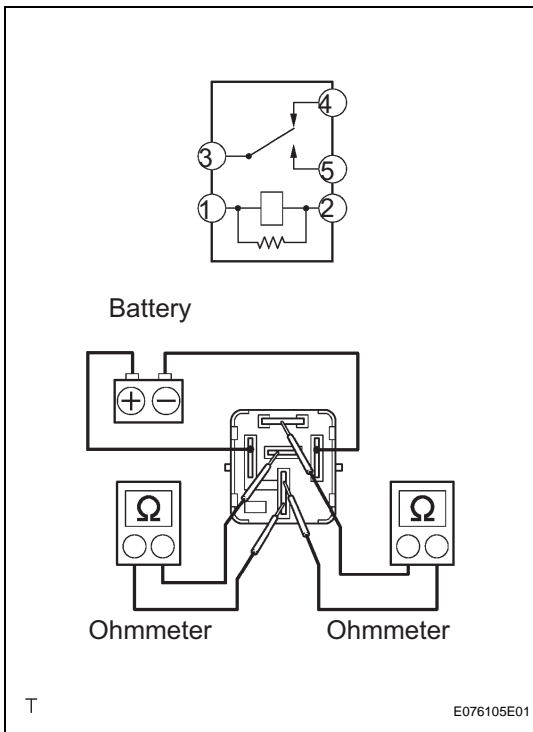

T

E076105E01