

TAILLIGHT RELAY

INSPECTION


1. INSPECT TAIL LIGHT RELAY

- (a) Check the resistance.
 - (1) Using an ohmmeter, measure the resistance between the terminals.

Standard

Tester Connection	Specified Condition
3-5	10 kΩ or higher
3-5	Below 1 Ω (When 1 battery voltage applied to terminals 1 and 2)

If the result is not as specified, replace the tail light relay.

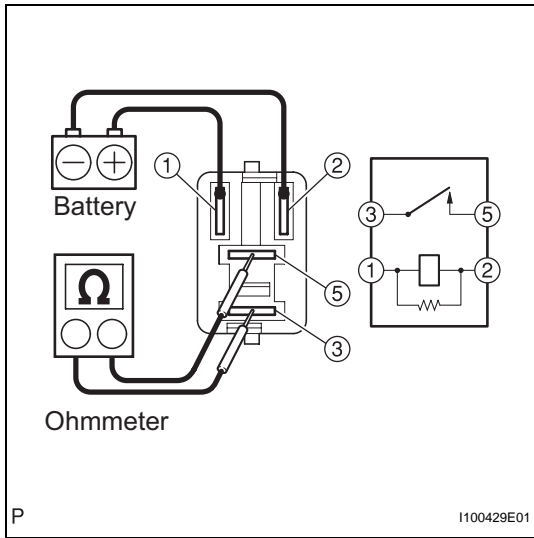

P

I100429E01

