

FOG LIGHT RELAY

INSPECTION

1. INSPECT FOG LIGHT RELAY


(a) Check the resistance.

- (1) Using an ohmmeter, measure the resistance between the terminals.

Standard

Tester Connection	Specified Condition
3-5	10 kΩ or higher
3-5	Below 1 Ω (When battery voltage applied to terminals 1 and 2)

If the result is not as specified, replace the fog light relay.

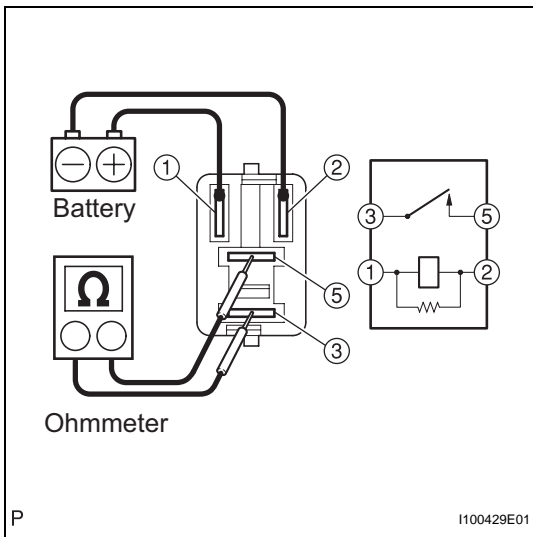

P

1100429E01