
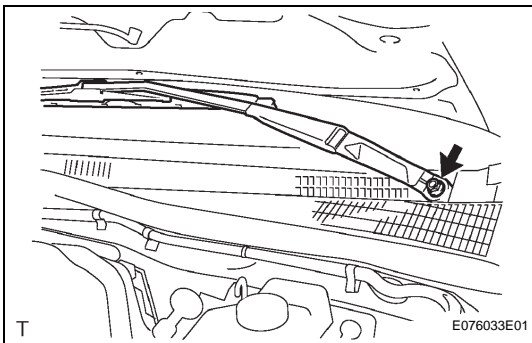


## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FRONT WIPER ARM HEAD CAP**
  - (a) Using a screwdriver wrapped with protective tape, remove the 2 front wiper arm head caps.

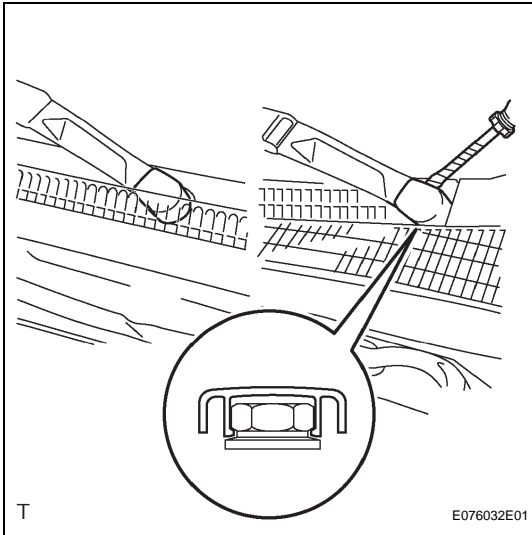


3. **REMOVE FRONT WIPER ARM LH**
  - (a) Operate the wiper, then stop the windshield wiper motor assembly at the automatic stop position.
  - (b) Remove the nut and front wiper arm LH.

### 4. REMOVE FRONT WIPER ARM RH

HINT:

Perform the same procedure as above on the opposite side.

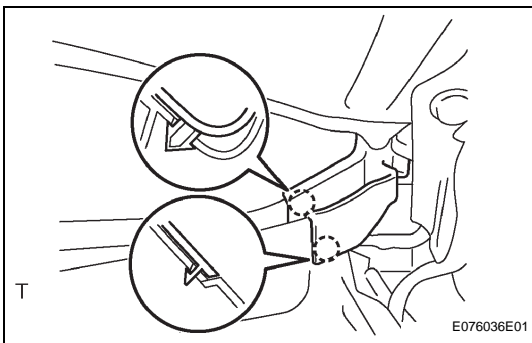


5. **REMOVE FRONT FENDER TO COWL SIDE SEAL LH**
  - (a) Disengage the 2 claws and remove the front fender to cowl side seal LH.

### 6. REMOVE FRONT FENDER TO COWL SIDE SEAL RH


HINT:

Perform the same procedure as above on the opposite side.

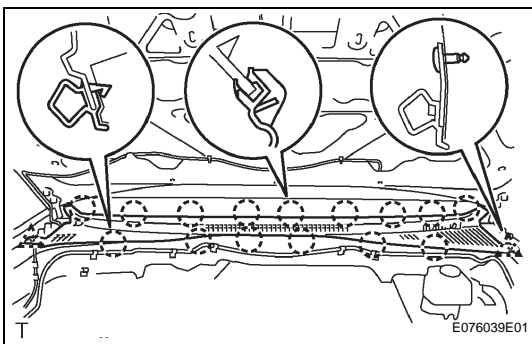


### 7. REMOVE COWL TOP VENTILATOR LOUVER SUB-ASSEMBLY

- (a) Disengage the 2 clips.
- (b) Disengage the 15 claws, then remove the cowl top ventilator louver sub-assembly.

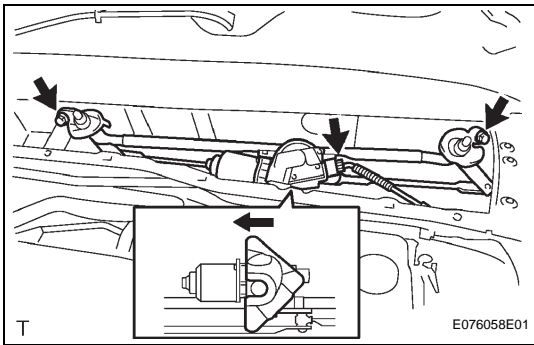


- 8. REMOVE WINDSHIELD WIPER MOTOR AND LINK**
- Disconnect the connector, then remove the 2 bolts.
  - Slide the wiper link assembly to the passenger side seat side. Disengage the meshing of the rubber pin, then remove the windshield wiper motor & link assembly.

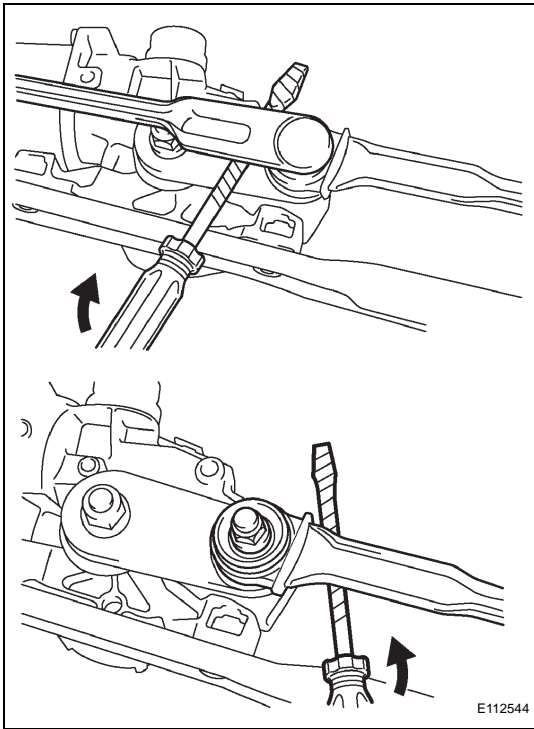

**9. REMOVE FRONT WIPER MOTOR**

- Using a screwdriver wrapped with protective tape, disengage the meshing of the 2 rods at the crank arm pivot of the windshield wiper motor assembly.

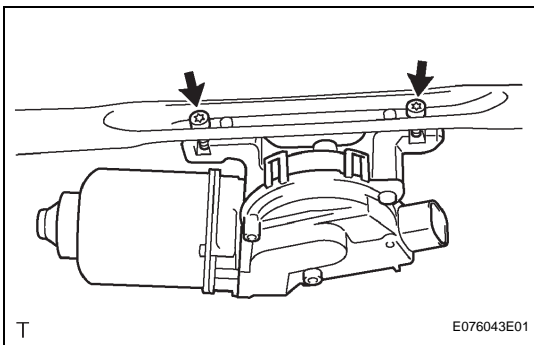

- Using a "Torx" socket wrench (T30), remove the 2 screws and windshield wiper motor assembly.