



WASHER MOTOR

ON-VEHICLE INSPECTION

1. INSPECT WASHER MOTOR

(a) Check the operation.

(1) Fill the washer jar with washer fluid.

HINT:

Operation should be performed with the windshield washer motor and pump assembly installed onto the washer jar assembly.

(2) Connect the positive battery (+) lead to terminal 1 of the windshield washer motor and pump assembly, then the negative battery (-) lead to terminal 2. Check that washer fluid flows from the washer jar.

Standard:

Washer fluid flows from the washer jar.