


INSTALLATION

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.

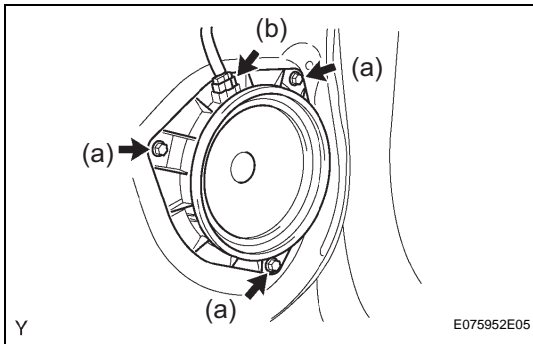

1. INSTALL REAR SPEAKER ASSEMBLY

- (a) Install the rear speaker assembly with the 3 screws.
- (b) Connect the connector.

2. INSTALL REAR DOOR INSIDE HANDLE SUB-ASSEMBLY LH (See page [ED-80](#))

3. INSTALL REAR DOOR TRIM PANEL ASSEMBLY LH (See page [ED-81](#))

4. INSTALL REAR POWER WINDOW REGULATOR SWITCH ASSEMBLY (See page [ED-81](#))

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)