

CD cannot be Inserted or is Ejected Right After Insertion

1 CHECK CD

- (a) Check whether a normal CD is inserted.
 (1) Make sure that the CD is a normal audio CD, and that there is no deformation, flaw, stain, burr or other defect on the CD.

OK:

A normal audio CD is inserted.

HINT:

- Translucent or oddly-shaped CDs cannot be played.
- Computer CD-ROMs (even those with music) and CD-R discs cannot be played.
- Playing an 8 cm CD does not require an adapter.

NG

CD IS FAULTY

OK

2 CHECK WHETHER CD IS INSERTED PROPERLY

- (a) Check whether the CD is inserted properly.
 (1) Check whether or not the CD is inserted upside down.

OK:


Not upside down.

NG

INSERT CD PROPERLY

OK

3 CLEAN CD

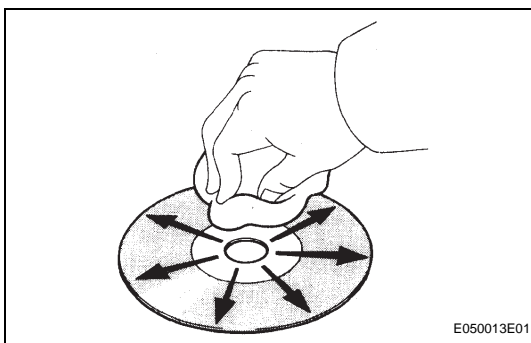

- (a) Clean the disc.
 (1) If the disc gets dirty, clean the disc by wiping the surface from the center to the outside, in a radial direction, with a soft cloth as shown in the illustration.

OK:

The malfunction disappears.

NOTICE:

Do not use a conventional record cleaner or anti-static preservative.

OK:

Not upside down.

OK

CD WAS DIRTY

NG

4 OPERATION USING ANOTHER CD

- (a) Replace the CD with another and recheck.
- (1) Replace the CD with another normal one to see whether the same trouble occurs again.

OK:

The malfunction disappears.

NG

REPLACE RADIO RECEIVER ASSEMBLY

OK

CD IS FAULTY

AV