


## INSTALLATION

### 1. INSTALL RADIO ANTENNA CORD SUB-ASSEMBLY

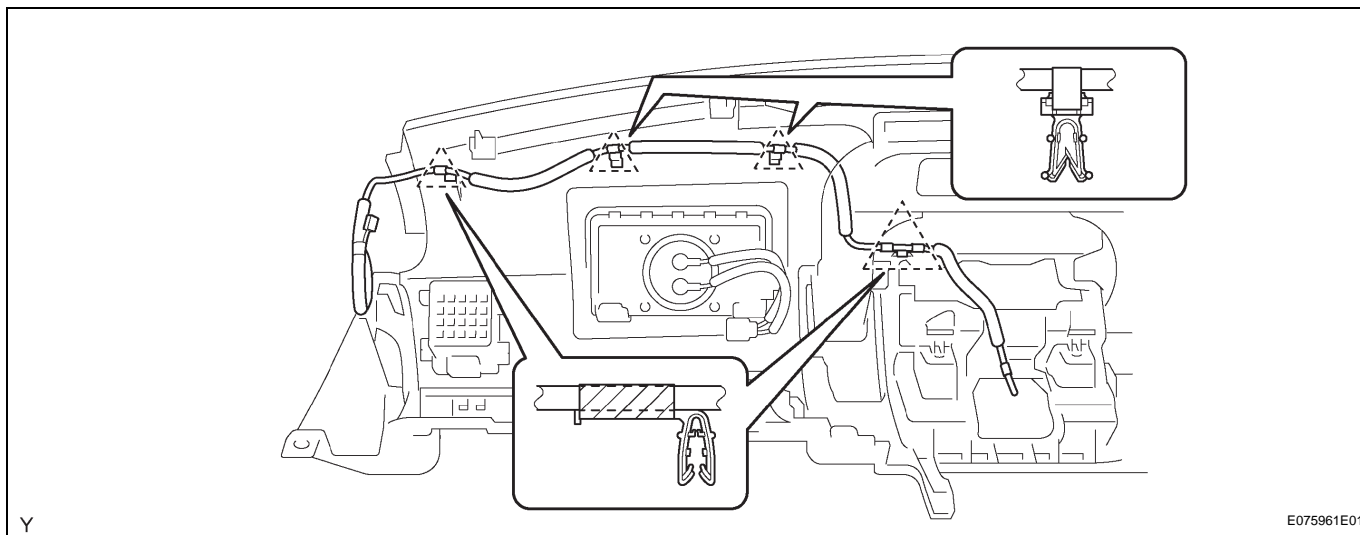

(a) Engage the 4 claws and install the Radio antenna cord.

2. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY
3. INSTALL INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY (See page [IP-18](#))
4. CONNECT PASSENGER AIRBAG CONNECTOR (See page [RS-577](#))
5. INSTALL INSTRUMENT SIDE PANEL RH (See page [IP-20](#))
6. INSTALL INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-20](#))
7. INSTALL LOWER INSTRUMENT PANEL LH (See page [IP-20](#))
8. INSTALL INSTRUMENT PANEL LOWER FINISH PANEL SUB-ASSEMBLY RH (See page [IP-20](#))
9. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-20](#))
10. INSTALL CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))
11. INSTALL COMBINATION METER ASSEMBLY (See page [ME-65](#))
12. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))
13. INSTALL NO. 1 LOWER INSTRUMENT PANEL FINISH PANEL (See page [IP-22](#))
14. INSTALL HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [ED-8](#))
15. INSTALL RADIO RECEIVER ASSEMBLY (See page [AV-70](#))

16. INSTALL AIR CONDITIONING CONTROL ASSEMBLY (See page [AC-96](#))
17. INSTALL FRONT CONSOLE BOX (for Manual Transmission on Bench Seat Type) (See page [IP-22](#))
18. INSTALL FRONT CONSOLE BOX (for Automatic Transmission on Bench Seat Type) (See page [IP-23](#))
19. INSTALL FRONT CONSOLE BOX (for Manual Transmission on Separate Seat Type) (See page [IP-23](#))
20. INSTALL FRONT CONSOLE BOX (for Automatic Transmission on Separate Seat Type) (See page [IP-24](#))
21. INSTALL INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission on Separate Seat Type) (See page [IP-24](#))
22. INSTALL REAR CONSOLE BOX ASSEMBLY (for Separate Seat Type) (See page [IP-24](#))
23. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Manual Transmission on Separate Seat Type) (See page [IP-25](#))
24. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Automatic Transmission on Separate Seat Type) (See page [IP-25](#))
25. INSTALL INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake) (See page [IP-25](#))
26. INSTALL INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake) (See page [IP-25](#))
27. INSTALL FRONT PILLAR GARNISH RH (See page [IR-52](#))
28. INSTALL FRONT PILLAR GARNISH LH (See page [IR-51](#))
29. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH (See page [IR-29](#))
30. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH (See page [IR-28](#))
31. INSTALL COWL SIDE TRIM BOARD RH (See page [IR-52](#))
32. INSTALL COWL SIDE TRIM BOARD LH (See page [IR-52](#))
33. INSTALL FRONT DOOR SCUFF PLATE RH (See page [IR-52](#))
34. INSTALL FRONT DOOR SCUFF PLATE LH (See page [IR-52](#))
35. INSTALL FRONT FLOOR FOOTREST (See page [IR-1](#))

**36. CONNECT CABLE TO NEGATIVE BATTERY  
TERMINAL**

**Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)**