
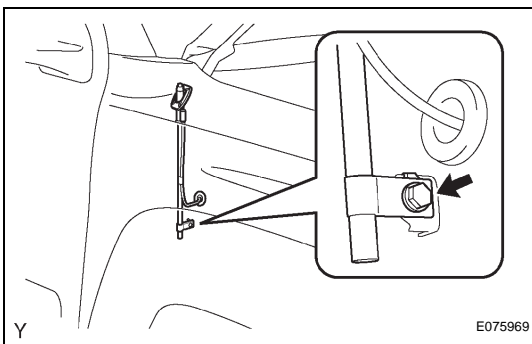
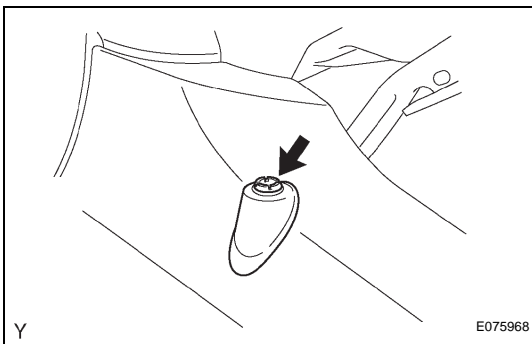


INSTALLATION

1. INSTALL WITH HOLDER ANTENNA ASSEMBLY

- (a) Tie the string inside the pillar to the new antenna assembly (with holder).
- (b) Using the string, fit the antenna assembly (with holder) into the pillar.
- (c) Connect the connector and install the 3 clamps.

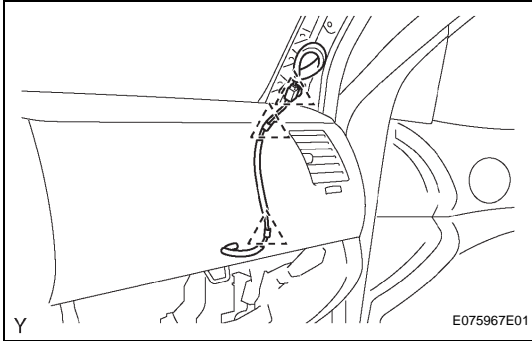

- (d) Install the antenna ornament with the nut.

- (e) Install the with holder antenna assembly with the bolt.

2. INSTALL PULL TOP ANTENNA POLE SUB - ASSEMBLY (See page [AV-102](#))

3. INSTALL FRONT PILLAR GARNISH RH (See page [IR-28](#))

4. INSTALL ASSIST GRIP SUB-ASSEMBLY (See page [IR-23](#))

5. INSTALL INSTRUMENT PANEL LOWER FINISH PANEL SUB-ASSEMBLY RH (See page [IP-20](#))

6. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-20](#))

7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)