


RADIO ANTENNA CORD

COMPONENTS


AV

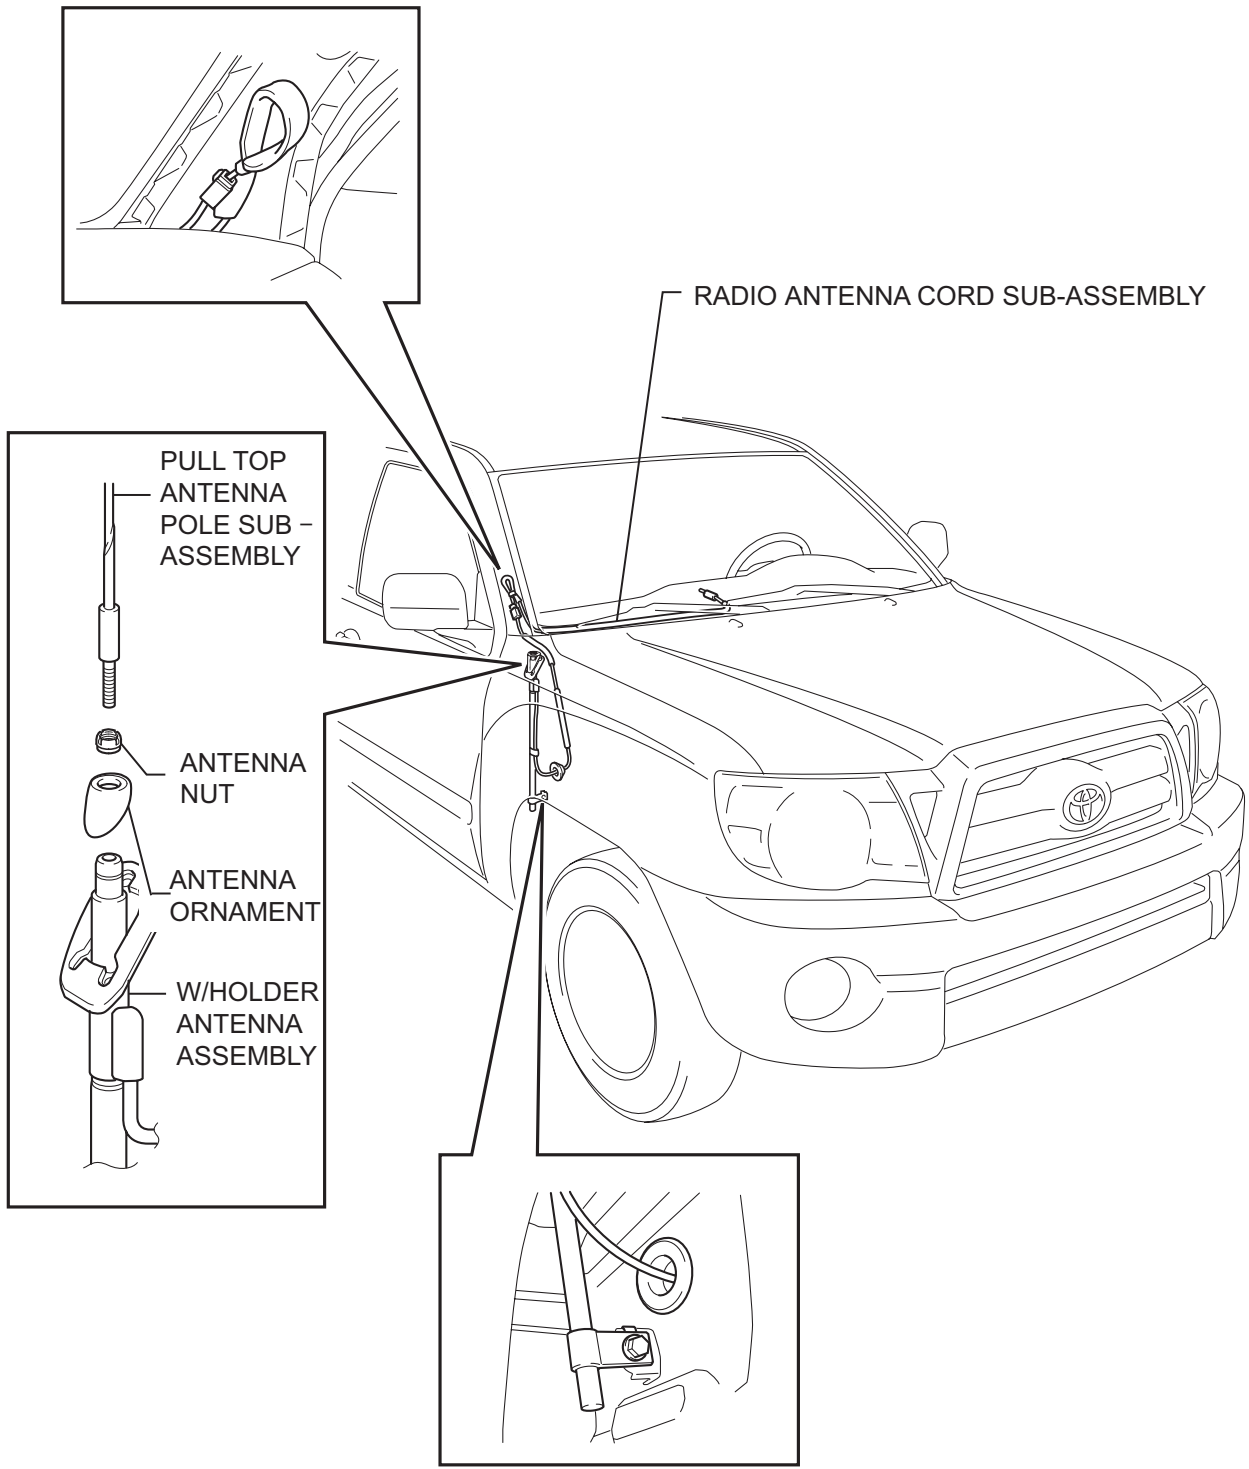

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
2. REMOVE FRONT FLOOR FOOTREST (See page [IR-1](#))
3. REMOVE FRONT DOOR SCUFF PLATE LH (See page [IR-12](#))
4. REMOVE FRONT DOOR SCUFF PLATE RH (See page [IR-12](#))
5. REMOVE COWL SIDE TRIM BOARD LH (See page [IR-12](#))
6. REMOVE COWL SIDE TRIM BOARD RH (See page [IR-12](#))
7. SEPARATE FRONT DOOR OPENING TRIM WEATHERSTRIP LH (See page [IR-13](#))
8. SEPARATE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (See page [IR-13](#))
9. REMOVE FRONT PILLAR GARNISH LH (See page [IR-13](#))
10. REMOVE FRONT PILLAR GARNISH RH (See page [IR-14](#))
11. REMOVE INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake) (See page [IP-9](#))
12. REMOVE INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake) (See page [IP-9](#))
13. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Automatic Transmission on Separate Seat Type) (See page [IP-9](#))
14. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (for Manual Transmission on Separate Seat Type) (See page [IP-9](#))
15. REMOVE REAR CONSOLE BOX ASSEMBLY (for Separate Seat Type) (See page [IP-10](#))
16. REMOVE INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission on Separate Seat Type) (See page [IP-10](#))
17. REMOVE FRONT CONSOLE BOX (for Automatic Transmission on Separate Seat Type) (See page [IP-10](#))
18. REMOVE FRONT CONSOLE BOX (for Manual Transmission on Separate Seat Type) (See page [IP-11](#))
19. REMOVE FRONT CONSOLE BOX (for Automatic Transmission on Bench Seat Type) (See page [IP-11](#))
20. REMOVE FRONT CONSOLE BOX (for Manual Transmission on Bench Seat Type) (See page [IP-11](#))

21. REMOVE AIR CONDITIONER CONTROL ASSEMBLY (See page [AC-90](#))
22. REMOVE RADIO RECEIVER ASSEMBLY (See page [AV-69](#))
23. SEPARATE HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [ED-3](#))
24. REMOVE NO. 1 LOWER INSTRUMENT PANEL FINISH PANEL (See page [IP-12](#))
25. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-12](#))
26. REMOVE COMBINATION METER ASSEMBLY (See page [ME-63](#))
27. REMOVE INSTRUMENT CLUSTER CENTER FINISH PANEL SUB-ASSEMBLY (See page [IP-13](#))
28. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-13](#))
29. REMOVE INSTRUMENT PANEL LOWER FINISH PANEL SUB-ASSEMBLY RH (See page [IP-14](#))
30. REMOVE LOWER INSTRUMENT PANEL LH (See page [IP-14](#))
31. REMOVE INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-14](#))
32. REMOVE INSTRUMENT SIDE PANEL RH (See page [IP-14](#))
33. DISCONNECT PASSENGER AIRBAG CONNECTOR (See page [RS-576](#))
34. REMOVE INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY (See page [IP-14](#))
35. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY
36. REMOVE RADIO ANTENNA CORD SUB-ASSEMBLY

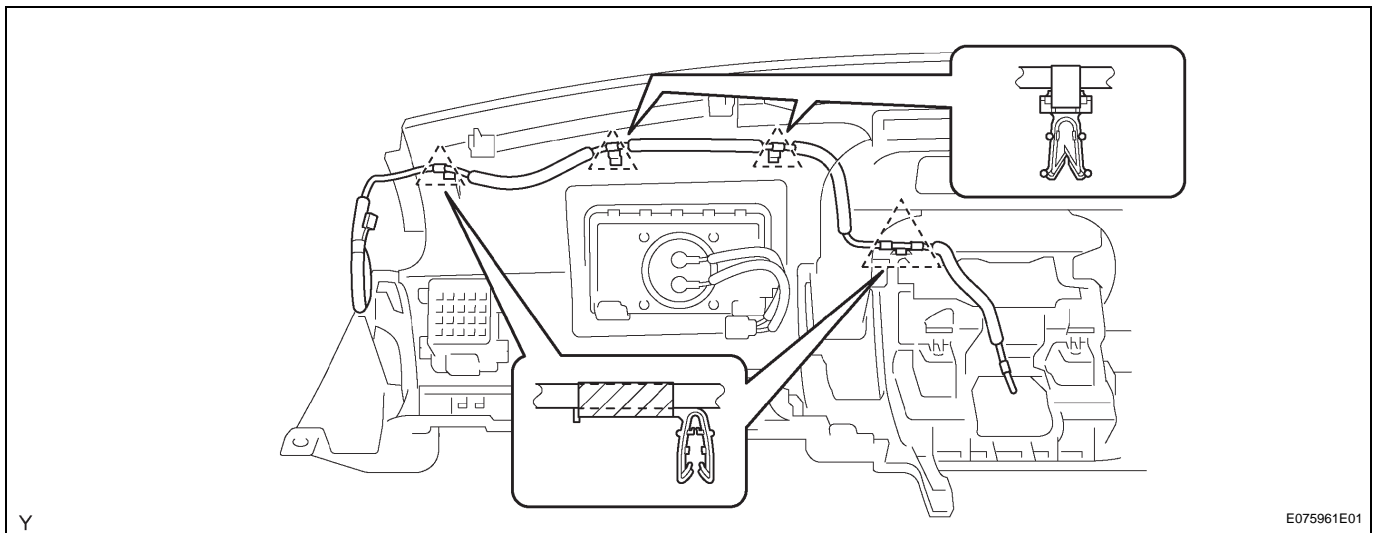

- (a) Disengage the 4 claws and remove the radio antenna cord sub-assembly.