


RADIO ANTENNA HOLDER

COMPONENTS




AV

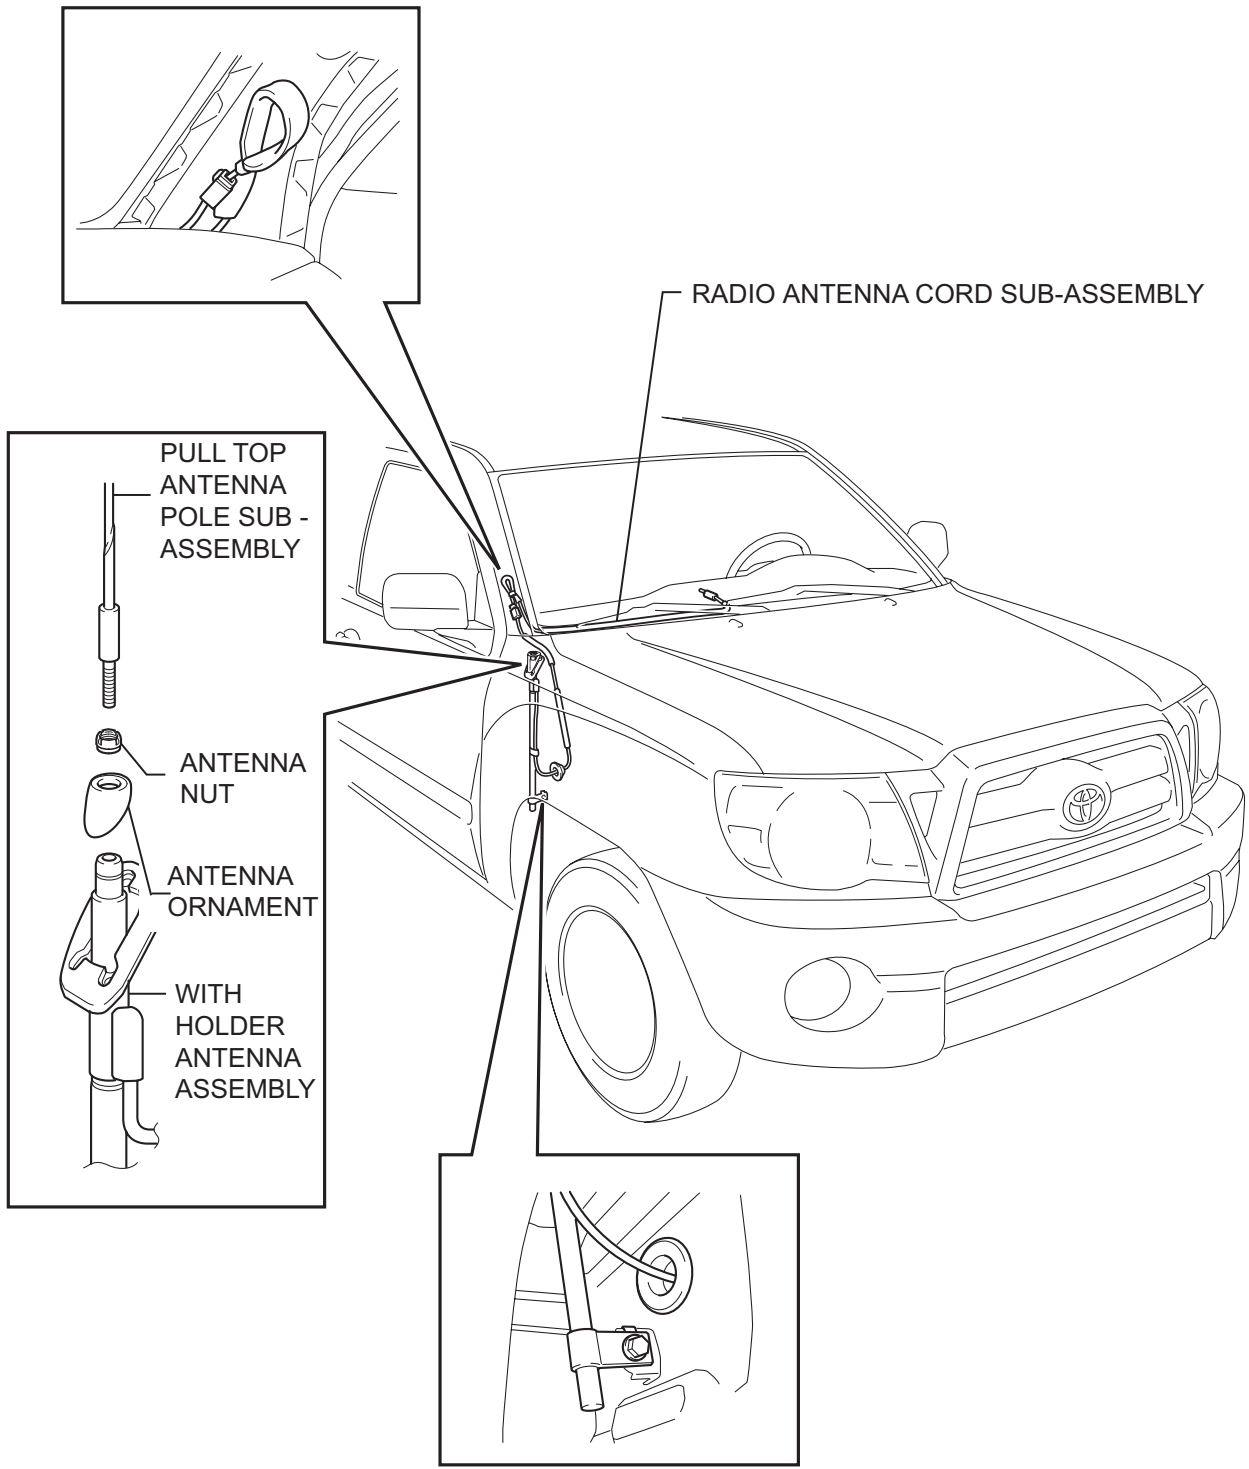

REMOVAL


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
2. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-13](#))
3. REMOVE INSTRUMENT PANEL LOWER FINISH PANEL SUB-ASSEMBLY RH (See page [IP-14](#))
4. REMOVE ASSIST GRIP SUB-ASSEMBLY (See page [IR-18](#))
5. REMOVE FRONT PILLAR GARNISH RH (See page [IR-14](#))
6. REMOVE PULL TOP ANTENNA POLE SUB - ASSEMBLY (See page [AV-102](#))
7. REMOVE ANTENNA ORNAMENT
 - (a) Remove the nut and the antenna ornament.

AV

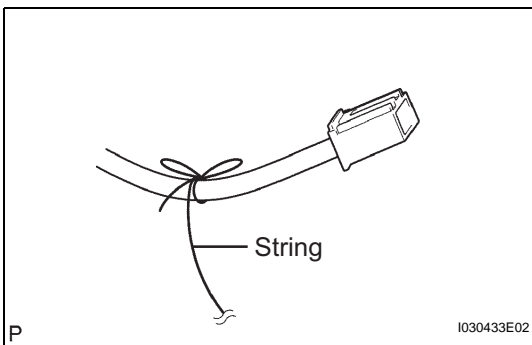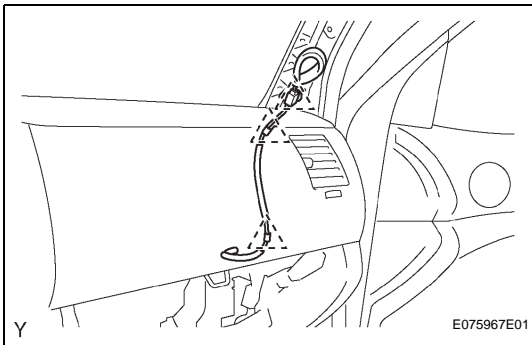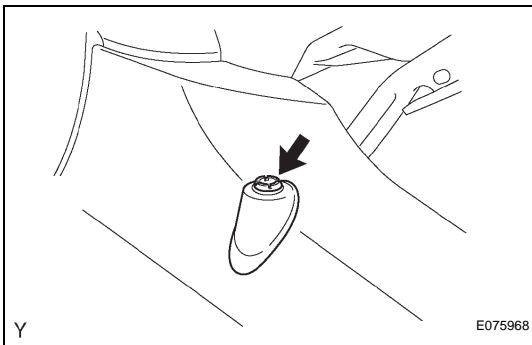

8. REMOVE WITH HOLDER ANTENNA ASSEMBLY
 - (a) Disconnect the connector and remove the 3 clamps.
 - (b) Tie a piece of string to the tip of the cable of the with holder antenna assembly.

HINT:
Use a string that is longer than the antenna assembly (with holder).

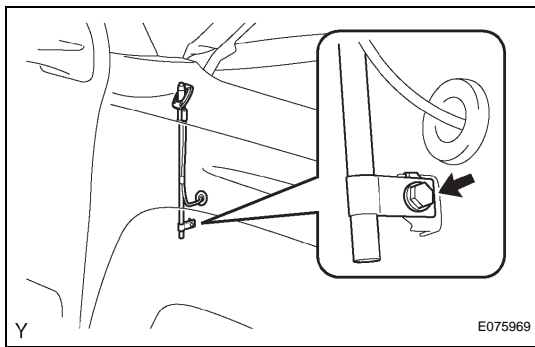

- (c) Remove the bolt and the with holder antenna assembly.

NOTICE:

Leave the string inside the pillar for the installation of a new antenna.

AV