
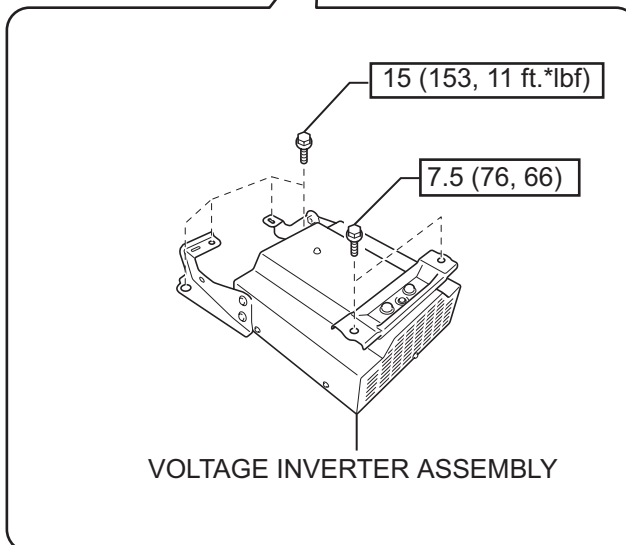


# VOLTAGE INVERTER

## COMPONENTS

AV

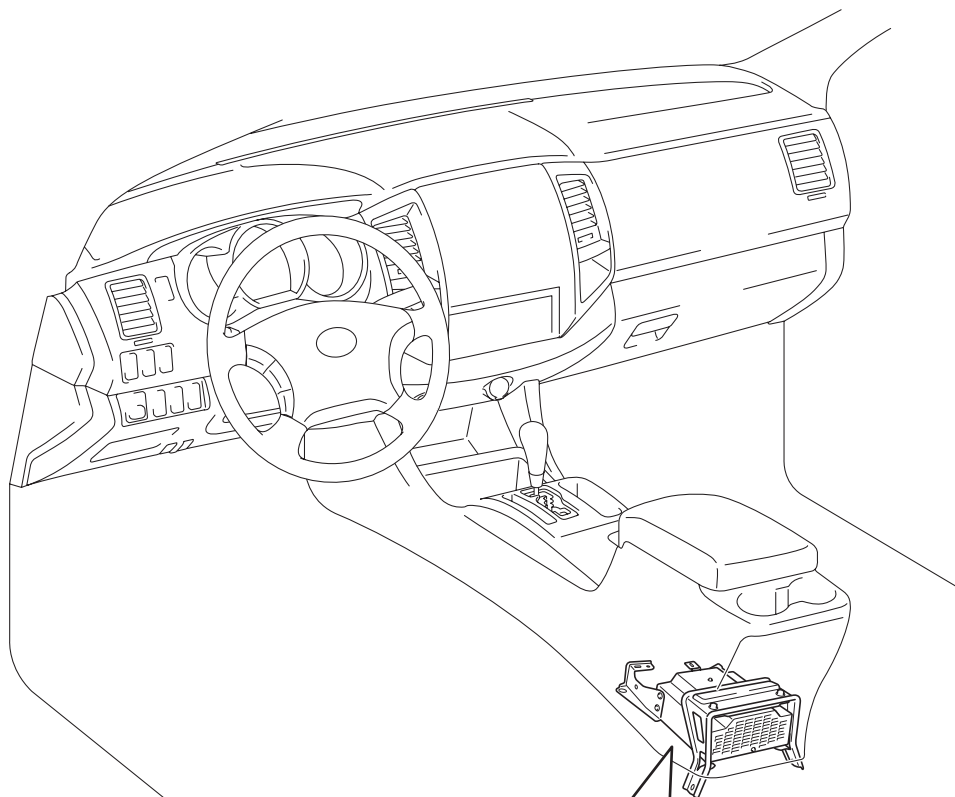



$\boxed{\text{N*m (kgf*cm, ft.*lbf)}}$  ; Specified torque

Y

E123177E01

## REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
2. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (See page [IP-9](#))
3. REMOVE REAR CONSOLE BOX ASSEMBLY (See page [IP-10](#))
4. REMOVE VOLTAGE INVERTER ASSEMBLY
  - (a) Remove the 6 bolts.

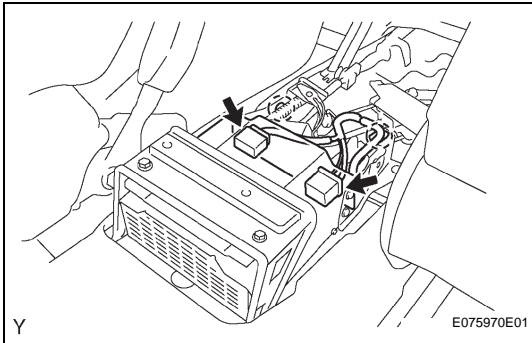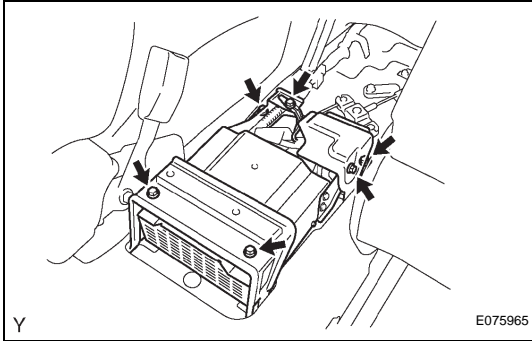

- (b) Disconnect the 2 connectors and remove the 2 wire harness clamps.