PROBLEM SYMPTOMS TABLE

Symptom	Suspected area	See page
Mirror dose not operate	ACC fuse	
	Outer mirror switch assembly	MI-11
	Outer rear view mirror assembly LH	MI-9
	Outer rear view mirror assembly RH	MI-9
	Wire harness	
Mirror operate abnormally	ACC fuse	
	Outer mirror switch assembly	MI-11
	Outer rear view mirror assembly LH	MI-9
	Outer rear view mirror assembly RH	MI-9
	Wire harness	

