

INNER REAR VIEW MIRROR


REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL (w/ EC Mirror)**


2. **REMOVE INNER REAR VIEW MIRROR ASSEMBLY**

(a) w/o Automatic glare-resistant EC mirror:

- (1) Pinch the cover and disengage the 2 claws, and remove the cover.

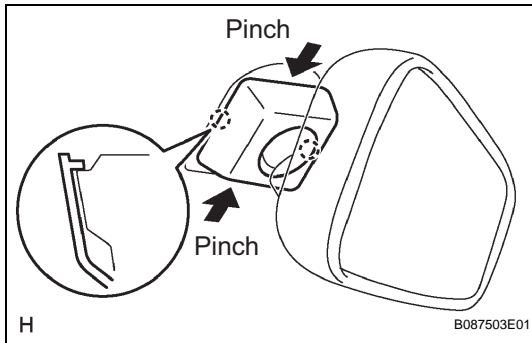


- (2) Push the lever, and slide and remove the inner rear view mirror.

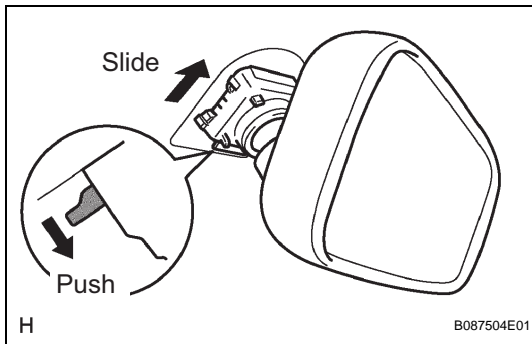



(b) w/ Automatic glare-resistant EC mirror.

- (1) Disconnect the EC mirror connector.
- (2) Slide the inner rear view mirror cover.

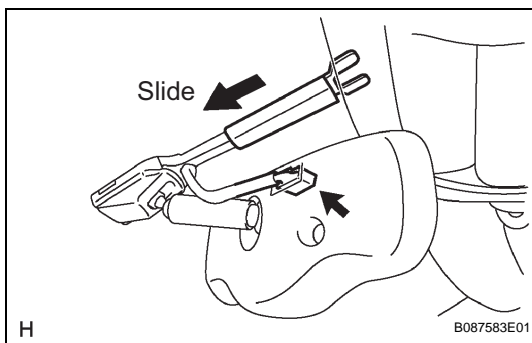

- (3) Slide the inner rear view mirror.

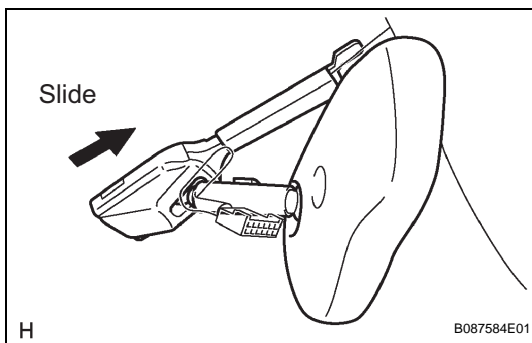


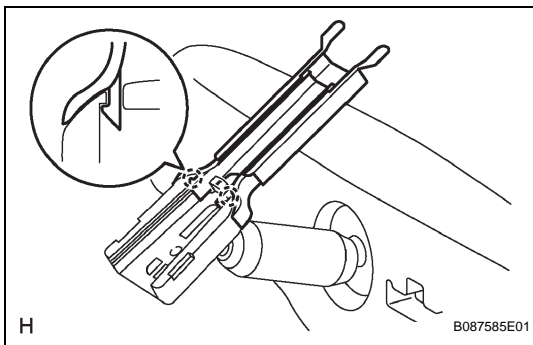


- (4) Disengage the 2 claws and remove the inner rear view mirror cover.

INSPECTION

1. INSPECT INNER REAR VIEW MIRROR ASSEMBLY (w/ EC Mirror)


- (a) Check the operation.
- (1) Connect the battery's positive (+) lead to terminal 6 and the negative (-) lead to terminal 7.
 - (2) Apply black colored tape to the forward sensor to prevent it from sensing.
 - (3) Light up the mirror with an electric light, and check that the mirror surface changes from bright to dark.
- If the result is not as specified, replace the inner rear view mirror.

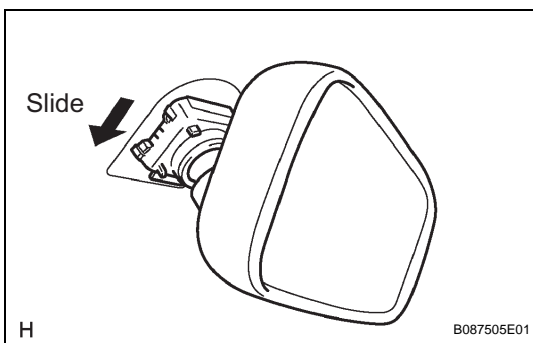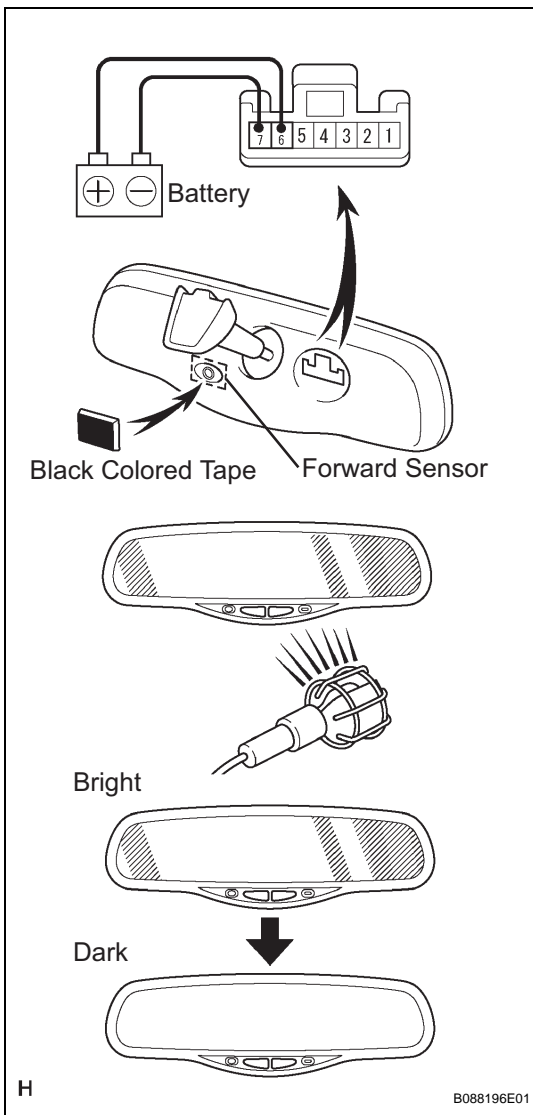


INSTALLATION

1. INSTALL INNER REAR VIEW MIRROR ASSEMBLY


- (a) w/o Automatic glare-resistant EC mirror:
- (1) Slide and install the inner rear view mirror.

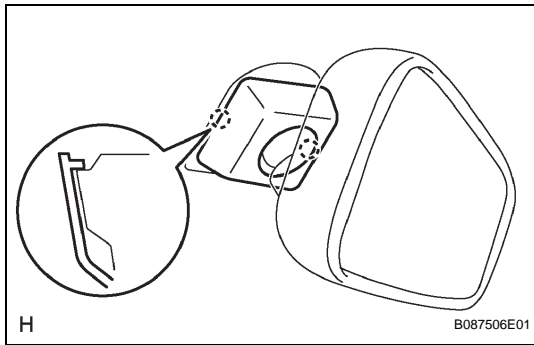


(2) Engage the 2 claws and install the cover.

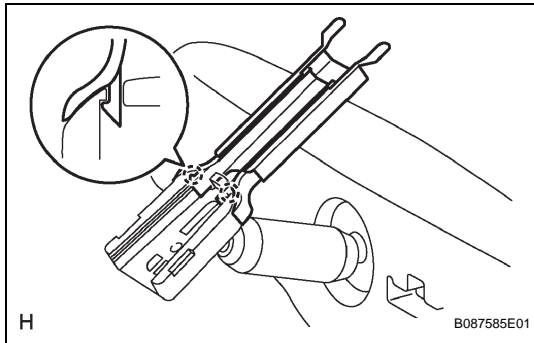

- (b) w/ Automatic glare-resistant EC mirror:
 (1) Engage the 2 claws and install the inner rear view mirror cover.

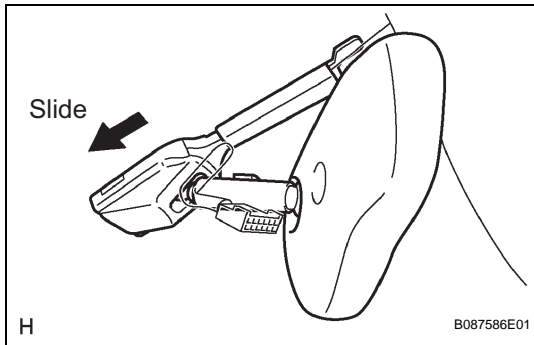

(2) Slide and install the inner rear view mirror.

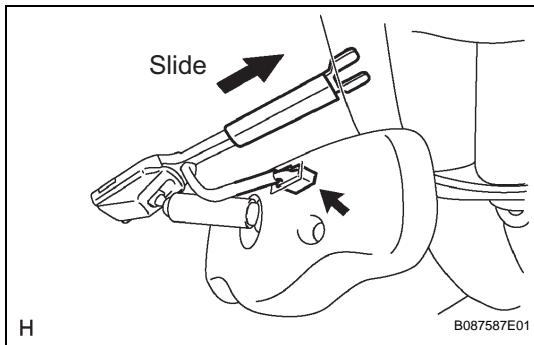

- (3) Slide the inner rear view mirror cover.
 (4) Connect the EC mirror connector.

2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL (w/ EC Mirror)
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)