

# OUTER MIRROR SWITCH

## INSPECTION

### 1. INSPECT OUTER MIRROR SWITCH ASSEMBLY

- (a) Check the resistance.
  - (1) Press L on the left/right adjustment switch.
  - (2) Using an ohmmeter, measure the resistance between the terminals.

**Standard**

Terminal Connection	Mirror Switch Condition	Specified Condition
4 (VL) - 8 (B) 6 (M+) - 7 (E)	UP	Below 1 Ω
4 (VL) - 7 (E) 6 (M+) - 8 (B)	DOWN	Below 1 Ω
5 (HL) - 8 (B) 6 (M+) - 7 (E)	LEFT	Below 1 Ω
5 (HL) - 7 (E) 6 (M+) - 8 (B)	RIGHT	Below 1 Ω


If the result is not as specified, replace the outer mirror switch.

- (3) Press R on the left/right adjustment switch.
- (4) Using an ohmmeter, measure the resistance between the terminals.

**Standard**

Terminal Connection	Mirror Switch Condition	Specified Condition
3 (VR) - 8 (B) 6 (M+) - 7 (E)	UP	Below 1 Ω
3 (VR) - 7 (E) 6 (M+) - 8 (B)	DOWN	Below 1 Ω
2 (HR) - 8 (B) 6 (M+) - 7 (E)	LEFT	Below 1 Ω
2 (HR) - 7 (E) 6 (M+) - 8 (B)	RIGHT	Below 1 Ω

If the result is not as specified, replace the outer mirror switch.

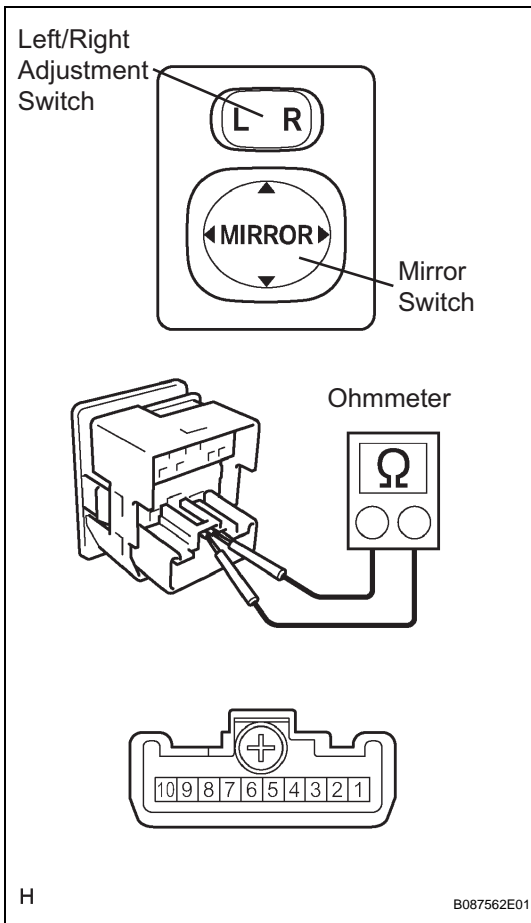

H

B087562E01

MI