


12. INSTALL REAR SEAT CUSHION BAND

- (a) Install the rear seat cushion band with the screw.

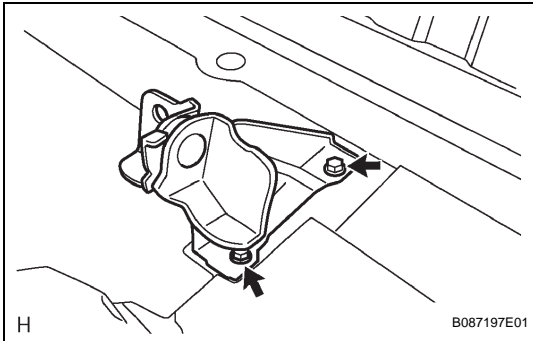


INSTALLATION

1. INSTALL REAR SEAT BACK CENTER HINGE SUB-ASSEMBLY

- (a) Install the rear seat back center hinge with the 2 bolts.

Torque: 18 N*m (185 kgf*cm, 14 ft.*lbf)


2. INSTALL LUGGAGE COMPARTMENT SIDE TRAY (See page [IR-26](#))

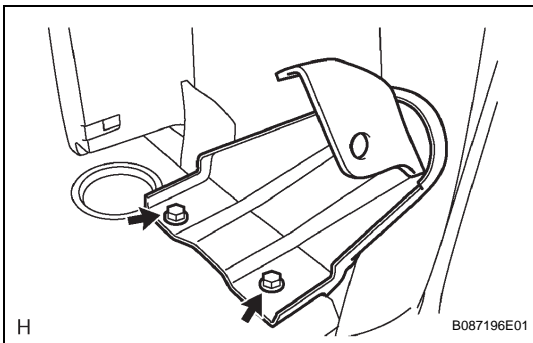

3. INSTALL REAR SEAT BACK HINGE SUB-ASSEMBLY

- (a) Install the rear seat back hinge with the 2 bolts.

Torque: 18 N*m (185 kgf*cm, 14 ft.*lbf)

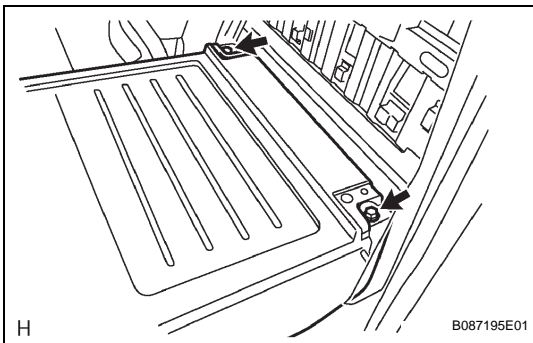


4. INSTALL REAR SEAT BACK ASSEMBLY LH

- (a) Install the rear seat back with the 2 bolts.

Torque: 37 N*m (375 kgf*cm, 27 ft.*lbf)

5. INSTALL REAR SEAT BACK ASSEMBLY RH (See page [SE-90](#))

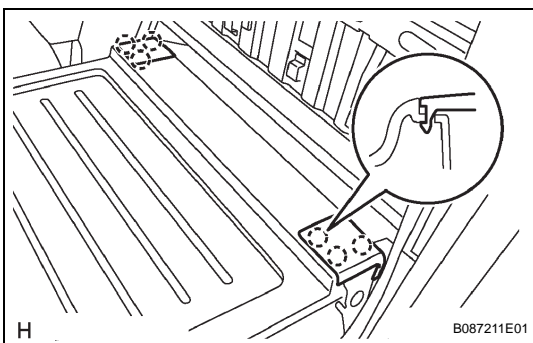

6. INSTALL REAR SEAT BACK HINGE COVER

- (a) for LH Side:


HINT:

Follow the same procedures as for the opposite side.

- (1) Engage the 3 claws and install the rear seat back hinge cover.

- (b) for RH Side:

- (1) Remove the rear seat back hinge cover (See page [SE-90](#)).

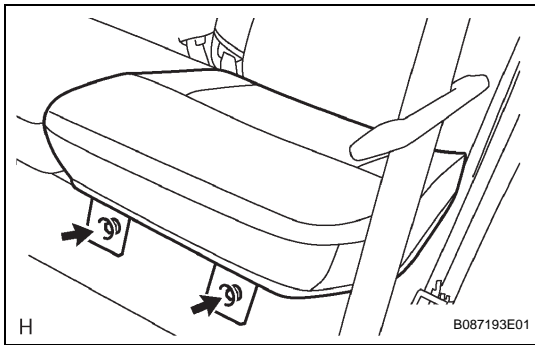

- 7. INSTALL REAR SEAT CUSHION ASSEMBLY**
(a) Install the rear seat cushion with the 2 bolts.
Torque: 37 N*m (375 kgf*cm, 27 ft.*lbf)