

REASSEMBLY

CAUTION:



Wear protective gloves. Sharp surface on the rear seat back frame could cause injuries to your hands.

1. INSTALL REAR SEAT BACK COVER

- (a) Using hog ring pliers, install the rear seat back cover with new hog rings.


NOTICE:

- Do not contaminate or scratch the rear seat back cover.
- When installing the hog rings, minimize wrinkles as far as possible.

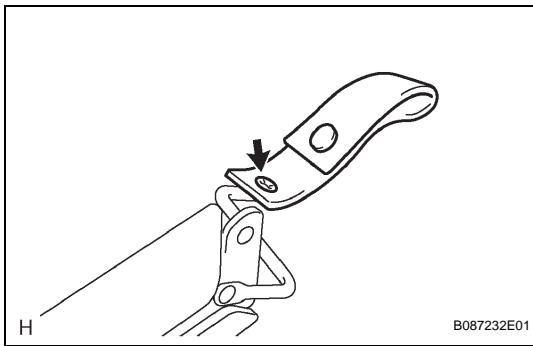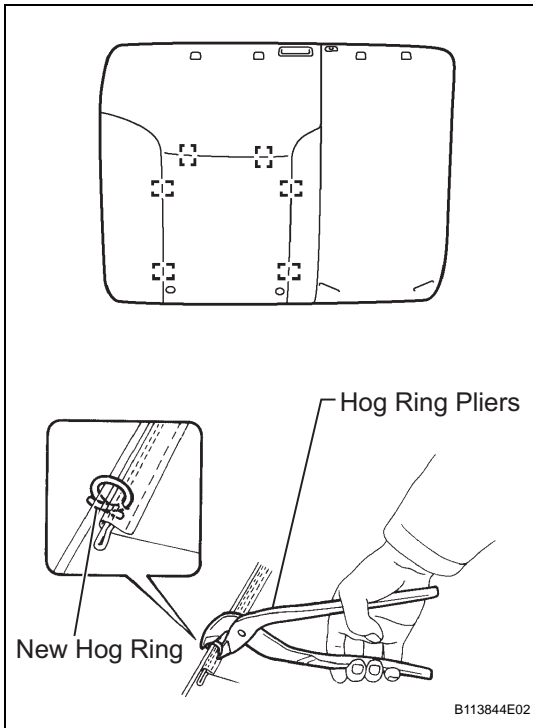


2. INSTALL REAR SEAT LOCK HANDLE

- (a) Install the rear seat lock handle with the screw.

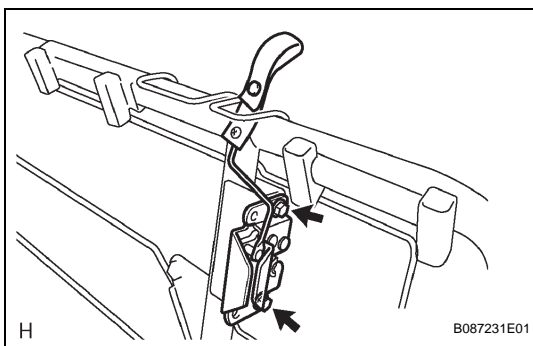

3. INSTALL REAR SEAT BACK LOCK ASSEMBLY

- (a) Install the rear seat back lock with the 2 bolts.
Torque: 30 N*m (305 kgf*cm, 22 ft.*lbf)

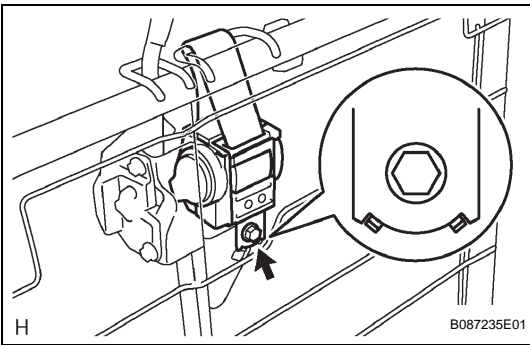


4. INSTALL REAR CENTER SEAT OUTER BELT ASSEMBLY

- (a) Align the retractor with the positioning claws of the rear seat back frame and install the retractor with the bolt.

Torque: 44 N*m (450 kgf*cm, 33 ft.*lbf)


- (b) Insert the belt through the hole into the rear seat back frame.

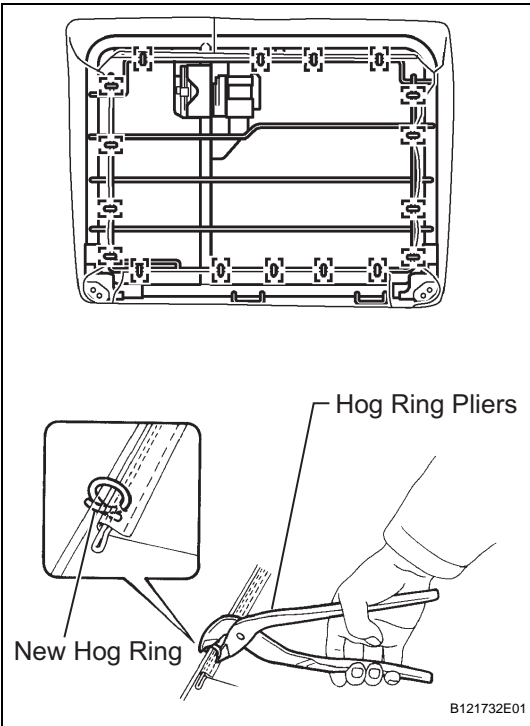

5. INSTALL REAR SEAT BACK FRAME SUB-ASSEMBLY


- (a) Install the rear seat back spring into the rear seat back pad.

- (b) Using hog ring pliers, install new hog rings.

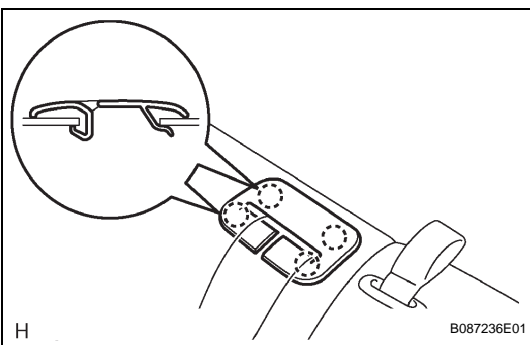

6. INSTALL REAR SEAT SHOULDER BELT COVER

- (a) Engage the 4 claws and install the rear seat shoulder belt cover.

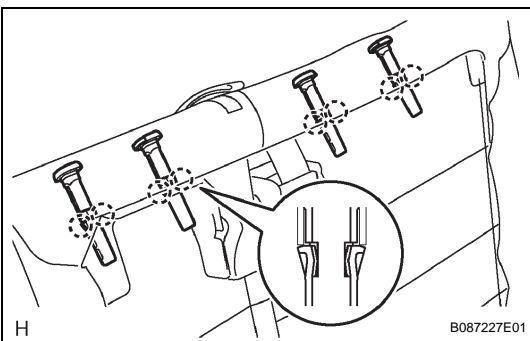


7. INSTALL REAR SEAT HEADREST SUPPORT

HINT:


Follow the same procedures as for the opposite side.

- (a) Engage the 2 claws and install the front seat headrest support.

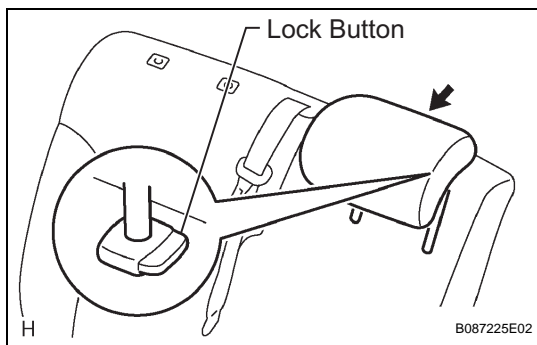


8. INSTALL REAR SEAT BACK BOARD SUB-ASSEMBLY

- (a) Disengage the lock button of the rear seat headrest support and install the rear seat headrest center.

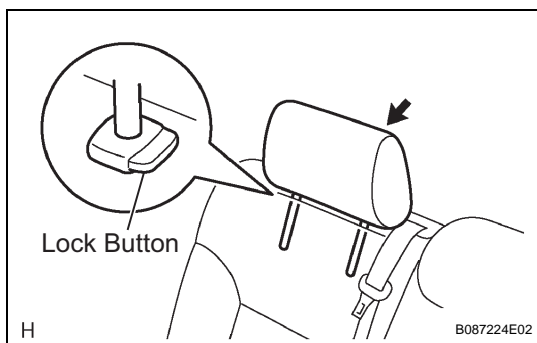


9. INSTALL REAR CENTER SEAT HEADREST ASSEMBLY

- (a) Disengage the lock button of the rear seat headrest support and install the rear center seat headrest.

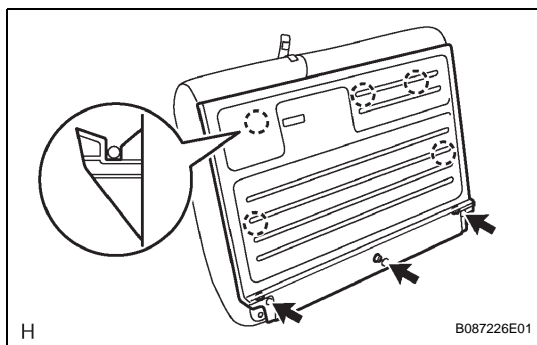

10. INSTALL REAR SEAT HEADREST ASSEMBLY

- (a) Engage the 5 claws and install the rear seat back board.
 (b) Tighten the 3 screws.

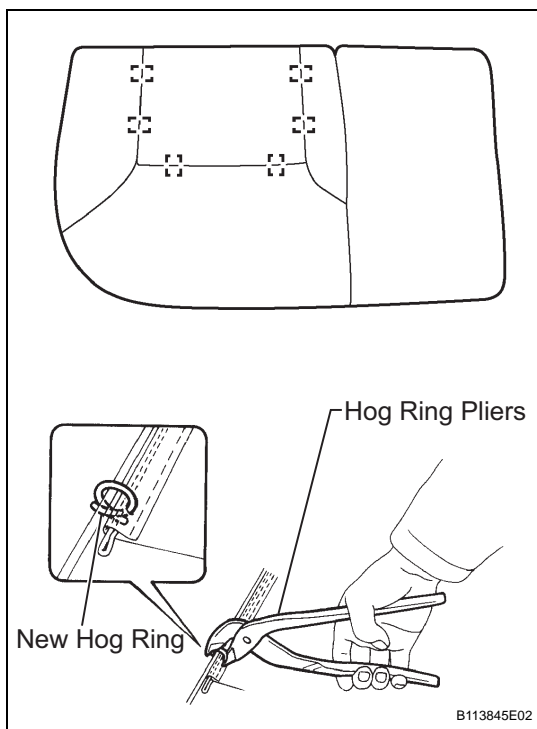


11. INSTALL REAR SEAT CUSHION COVER

- (a) Using hog ring pliers, install the rear seat cushion cover with new hog rings.


NOTICE:

- Do not contaminate or scratch the rear seat back cover.
- When installing the hog rings, minimize wrinkles as far as possible.

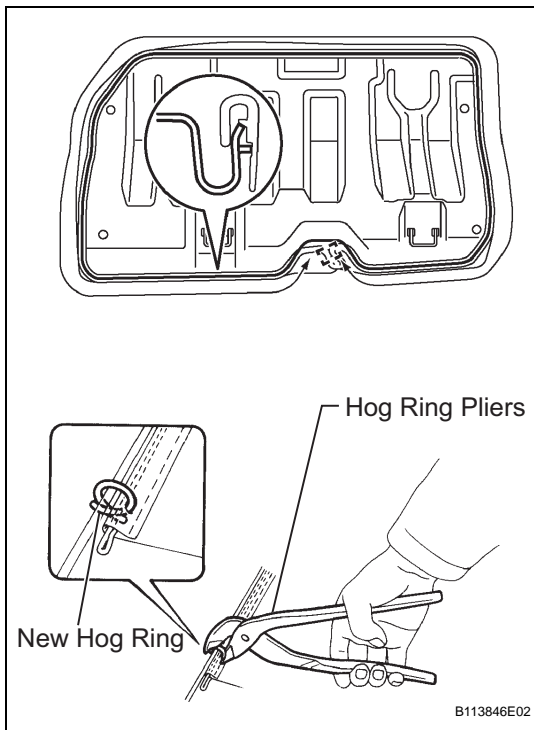

12. INSTALL REAR SEAT CUSHION FRAME SUB-ASSEMBLY

- (a) Engage the hook and install the rear seat cushion frame.
- (b) Install a new hog ring.

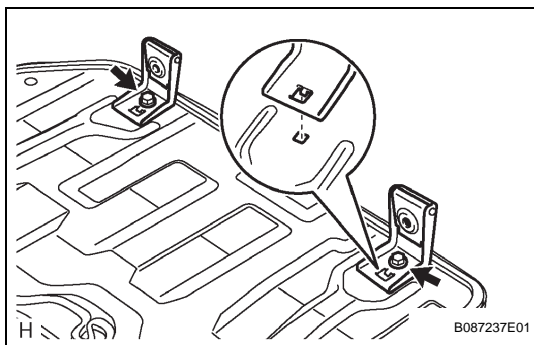


13. INSTALL REAR SEAT CUSHION HINGE SUB-ASSEMBLY

HINT:

Follow the same procedures as for the opposite side.

- (a) Install the rear seat cushion hinge with the bolt.
Torque: 21 N*m (215 kgf*cm, 16 ft.*lbf)

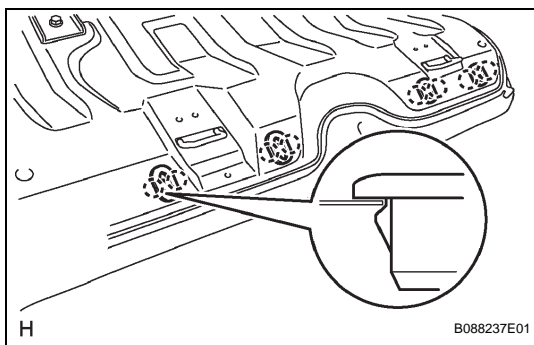


14. INSTALL REAR SEAT HEADREST HOLDER

HINT:

Follow the same procedures as for the opposite side.

- (a) Engage the 2 claws and install the rear seat headrest holder.

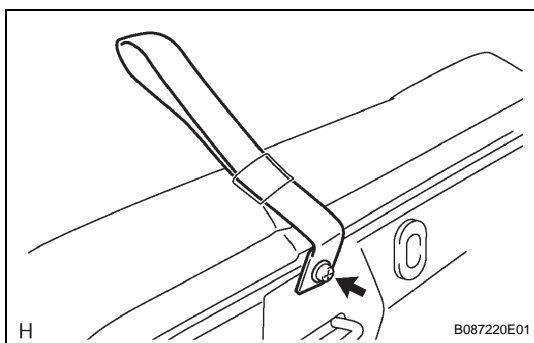

15. INSTALL REAR SEAT CUSHION BAND

- (a) Install the rear seat cushion band with the screw.