



DISASSEMBLY

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

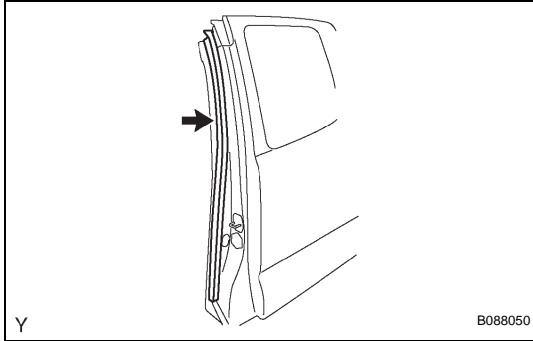


2. **REMOVE ACCESS PANEL REAR WEATHERSTRIP LH**

(a) Remove the access panel rear weatherstrip LH.

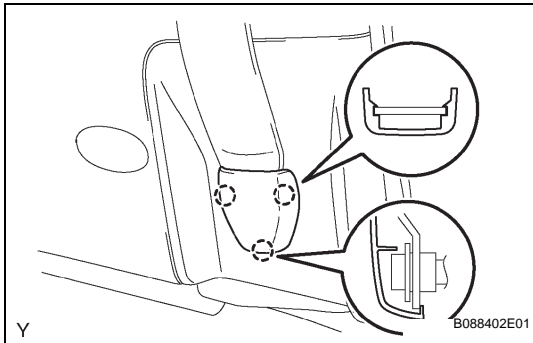


3. **REMOVE LAP BELT OUTER ANCHOR COVER**

(a) Disengage the 3 claws and remove the lap belt outer anchor cover.

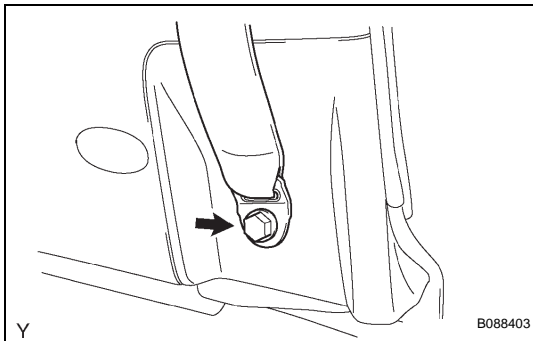


4. **REMOVE REAR DOOR TRIM BOARD SUB-ASSEMBLY LH**


(a) Remove the bolt and separate the outer front seat belt assembly LH (floor side).

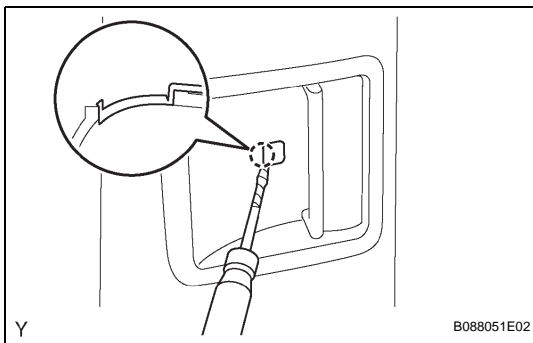


(b) Using a screwdriver with its tip wrapped in protective tape, open the cover.

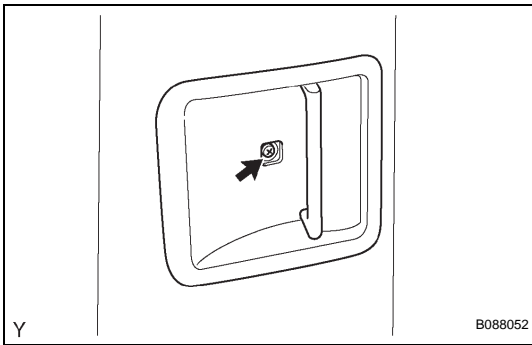


- (c) Remove the screw, then remove the access panel inside handle bezel LH.

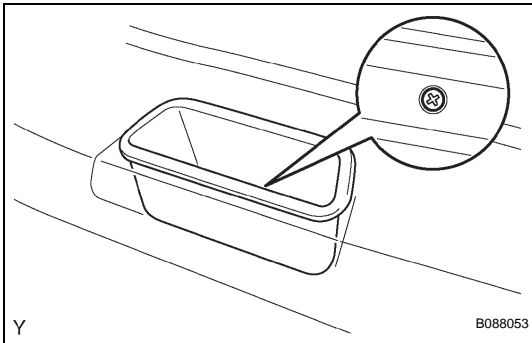

- (d) Remove the screw, then remove the door pull handle.

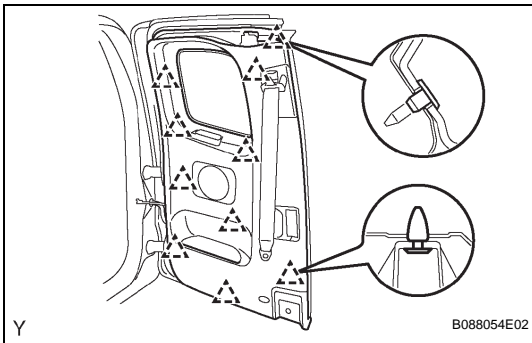

- (e) Remove the 10 clips.
 (f) Remove the rear door trim board sub-assembly by sliding it upward.

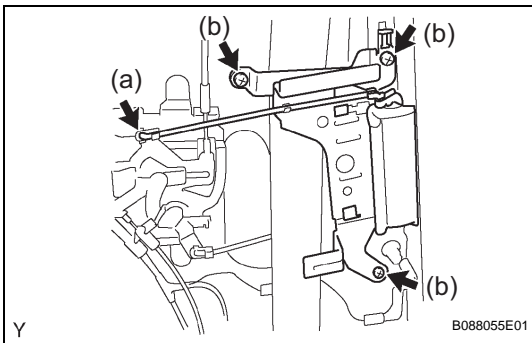


5. REMOVE ACCESS PANEL INSIDE HANDLE SUB-ASSEMBLY LH

- (a) Disconnect the rod.
 (b) Remove the 3 screws, then remove the access panel handle sub-assembly.

6. REMOVE FRONT SEAT OUTER BELT ASSEMBLY LH (See page SB-37)


7. REMOVE FRONT SHOULDER BELT ANCHOR ADJUSTER ASSEMBLY (See page SB-37)

8. REMOVE REAR SPEAKER ASSEMBLY (See page AV-88)

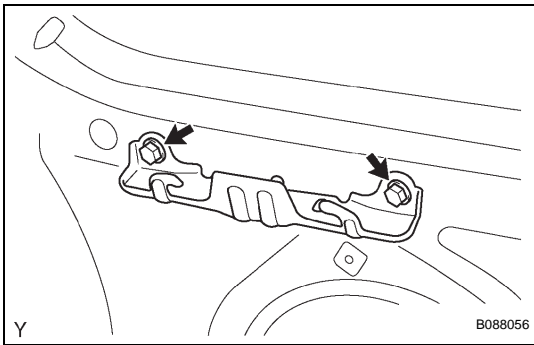


9. REMOVE NO. 1 DOOR TRIM BRACKET RH

- (a) Remove the 2 screws and remove the No. 1 door trim bracket.

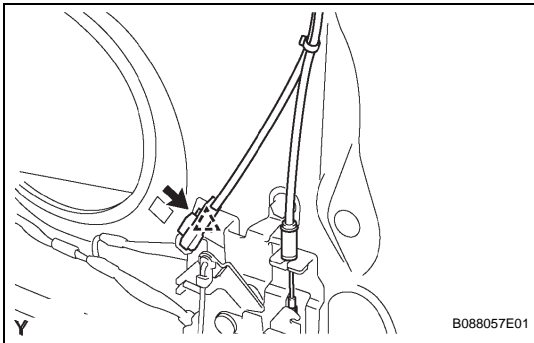


10. REMOVE ACCESS PANEL UPPER LOCK ASSEMBLY LH

- (a) Disconnect the connector, connector clamp and the access lock control cable sub-assembly.

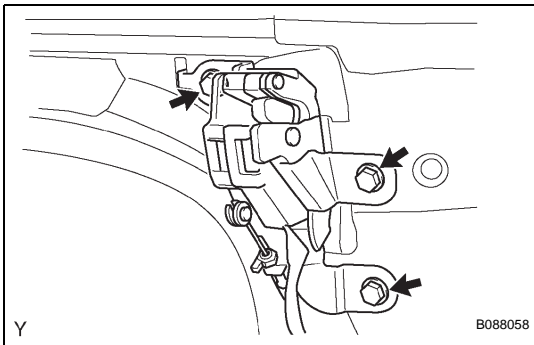


- (b) Remove the 3 bolts, then remove the access panel upper lock assembly LH.

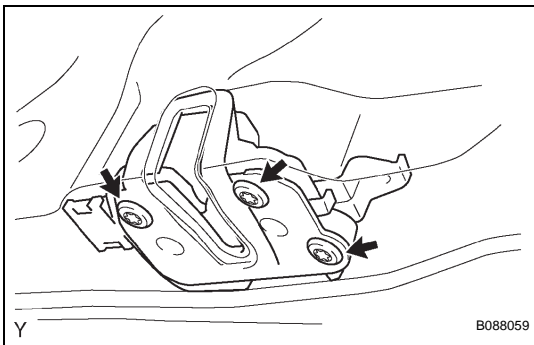


11. REMOVE ACCESS PANEL LOWER LOCK ASSEMBLY LH

- (a) Using a torx socket wrench T30 , remove the 3 screws.

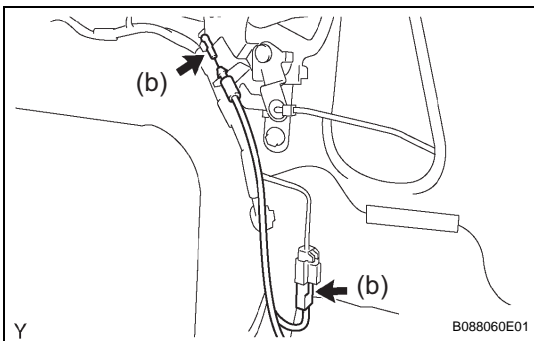


- (b) Disconnect the connector and access lock control cable sub-assembly.
 (c) Remove the access panel lower lock assembly LH by sliding it upward.

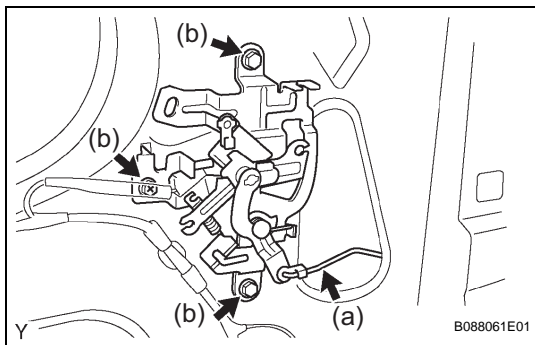


12. REMOVE ACCESS PANEL LOCK REMOTE CONTROL ASSEMBLY LH

- (a) Disconnect the rod.
- (b) Remove the 2 bolts and the screw, then remove the access panel lock remote control assembly LH.

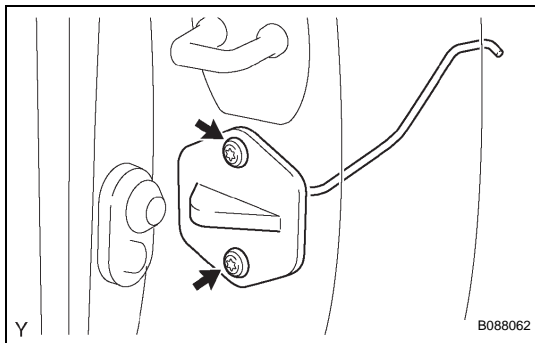


13. REMOVE REAR DOOR INSIDE LOCKING CABLE ASSEMBLY LH

- (a) Using a torx socket wrench T25 , remove the 2 screws, then remove the access panel lock cancel lever assembly LH.

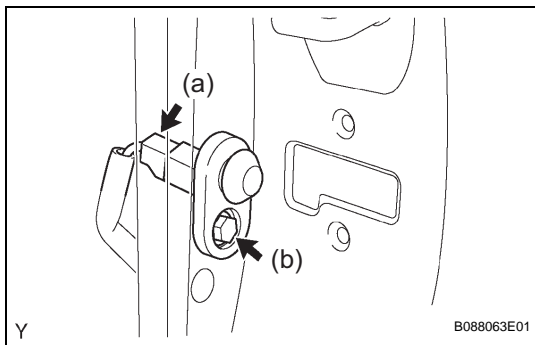


14. REMOVE FRONT DOOR COURTESY LAMP SWITCH ASSEMBLY

- (a) Disconnect the connector.
- (b) Remove the bolt, then remove the front door courtesy lamp switch.

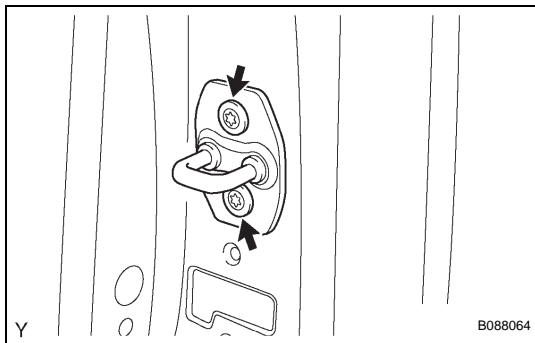


15. REMOVE FRONT DOOR LOCK STRIKER PLATE ASSEMBLY

- (a) Using a torx socket wrench T40 , remove the 2 screws and door lock striker plate assembly.

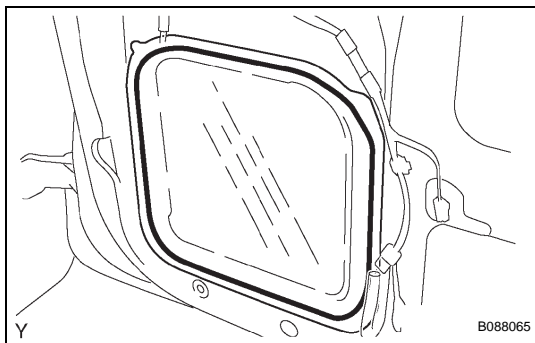


16. REMOVE REAR DOOR SERVICE HOLE COVER LH


- (a) Remove the rear door service hole cover LH.

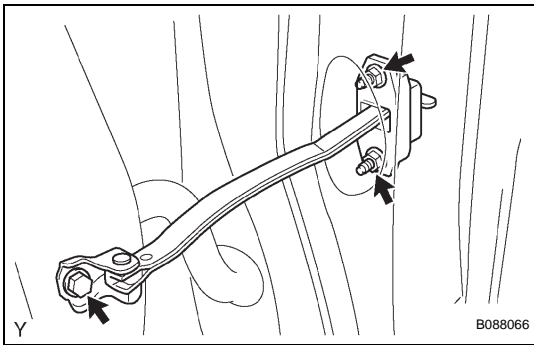**17. REMOVE REAR DOOR CHECK ASSEMBLY LH**

- (a) Remove the bolt and 2 nuts, then remove the access panel check assembly LH.

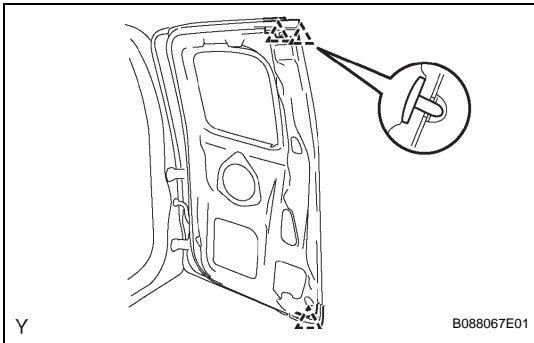**18. REMOVE REAR DOOR WEATHERSTRIP LH**

- (a) Disengage the 3 clips.

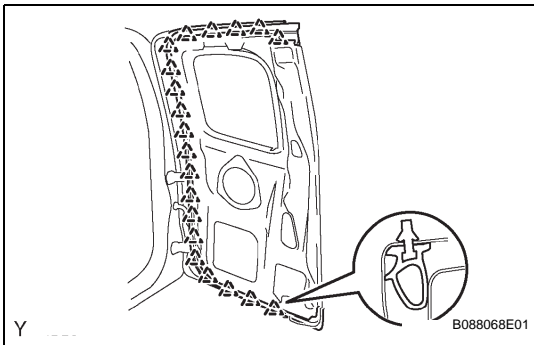

- (b) Using a clip remover, disengage the 20 clips, then remove the rear door weatherstrip LH.

NOTICE:

Remove the remaining tape on the door side.