

## REMOVAL


- 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
- 2. REMOVE REAR BUMPER BAR
  - (a) w/ Towing hitch:
    - (1) Disconnect the 2 No. 3 wire frame connectors.
    - (2) Loosen 2 bolts A.
    - (3) Remove the 8 bolts.
    - (4) Disengage the 2 pins and remove the rear bumper bar.

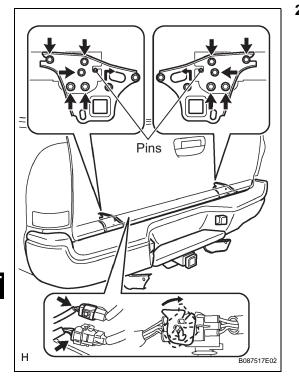



ΕT

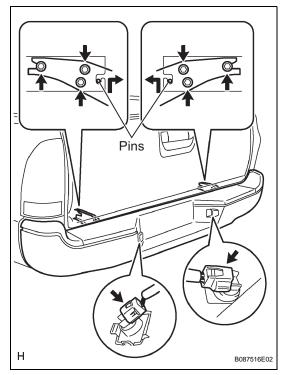


- (b) w/o Towing hitch:
  - (1) Disconnect the 2 license lamp connectors.
  - (2) Loosen the 2 bolts.
  - (3) Remove the 4 bolts.
  - (4) Disengage the 2 pins and remove the rear bumper bar.

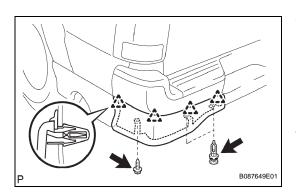

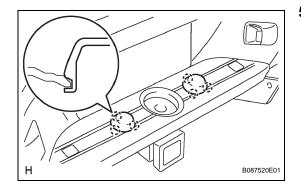

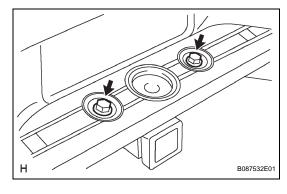

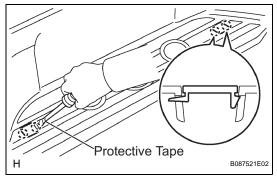

- 3. REMOVE REAR BUMPER SPOILER LH (for X-Runner)
  - (a) Using a clip remover, remove the 2 clips.
  - (b) Remove the screw.
  - (c) Disengage the 4 clips and remove the rear bumper spoiler.
- 4. REMOVE REAR BUMPER SPOILER RH (for X-Runner) HINT:


Follow the same procedures as for the rear bumper spoiler LH.

### 5. REMOVE REAR BUMPER COVER


- (a) w/ Towing Hitch:
  - (1) Disengage the 3 claws and remove the receiver hitch cap.
     HINT:
     Follow the same procedures as for the opposite side.
  - (2) Remove the 2 bolts.
  - (3) Remove the hitch ball.

 (b) Using a screwdriver with its tip in protective tape, disengage the 2 claws and remove the rear bumper cover lower.
 HINT:


Follow the same procedures as for the opposite side.

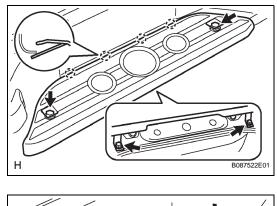

- (c) Remove the 4 bolts.
- (d) Disengage the 4 claws and remove the rear bumper cover.

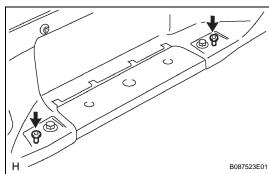


(e) Remove the 2 nuts from the rear bumper bar.

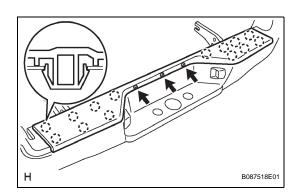


#### 6. REMOVE REAR BUMPER PLATE

- (a) Remove the 3 clips.
- (b) Disengage the 14 claws and remove the rear bumper plate.

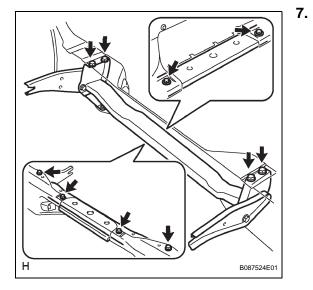

#### REMOVE REAR BUMPER BAR REINFORCEMENT SUB-ASSEMBLY (w/o Towing Hitch)

(a) Remove the 10 bolts and rear bumper bar reinforcement.

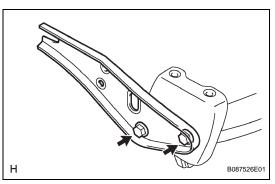

# 8. REMOVE REAR BUMPER ARM SUB-ASSEMBLY LH (w/o Towing Hitch)

(a) Remove the 2 bolts and rear bumper arm.


9. REMOVE REAR BUMPER ARM SUB-ASSEMBLY RH (w/o Towing Hitch)


HINT:


Follow the same procedures as for the rear bumper arm LH.

#### 10. REMOVE RECEIVER HITCH BRACKET SUB-ASSEMBLY (w/ Towing Hitch)

- (a) Disconnect the 2 license light connectors.
- (b) Remove the 10 bolts and receiver hitch bracket.

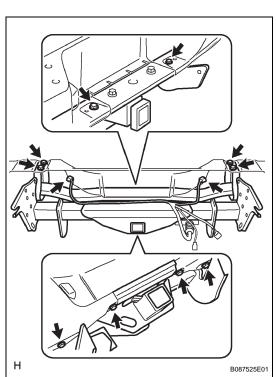

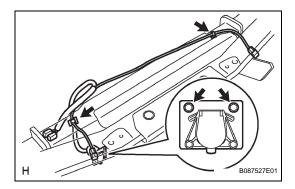

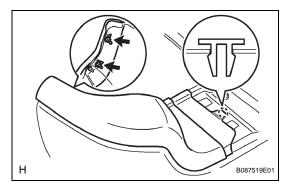


#### 11. REMOVE NO. 3 FRAME WIRE (w/ Towing Hitch)


- (a) Using a clip remover, remove the 2 wire harness clamps.
- (b) Remove the 2 bolts and No. 3 frame wire.

#### 12. REMOVE REAR BUMPER PLATE LH

- (a) Remove the 2 nuts.
- (b) Disengage the claw and remove the rear bumper plate.
- 13. REMOVE REAR BUMPER PLATE RH HINT:

Follow the same procedures as for the rear bumper plate LH.

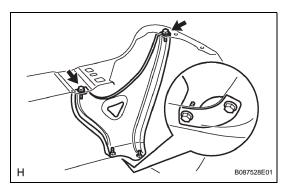

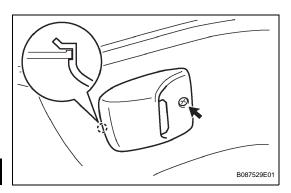

#### 14. REMOVE REAR BUMPER BAR CORNER REINFORCEMENT LH


- (a) Remove the 4 bolts and rear bumper bar corner reinforcement.
- 15. REMOVE REAR BUMPER BAR CORNER REINFORCEMENT RH HINT:


Follow the same procedures as for the rear bumper bar corner reinforcement LH.

#### **16. REMOVE LICENSE PLATE LIGHT ASSEMBLY** HINT:


Follow the same procedures as for the opposite side.

- (a) Remove the screw.
- (b) Disengage the claw and remove the license plate light.
- (c) Remove the bumper moulding mounting plate from the license plate light.

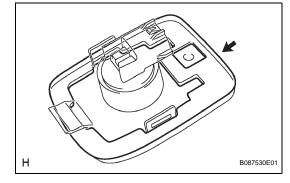

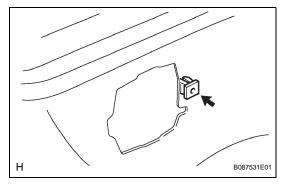


(d) Remove the nut from the rear bumper bar.

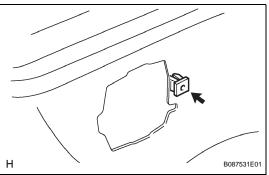


## INSTALLATION

1. INSTALL LICENSE PLATE LIGHT ASSEMBLY HINT:

 
Follow the same procedures as for the opposite side. (a) Install the nut into the rear bumper bar.

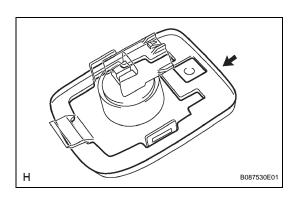




- (c) Engage the claw and install the license plate light.
- (d) Install the screw.

B087528E01

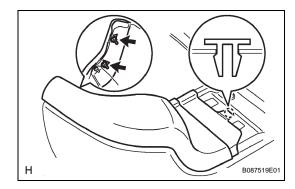

Н

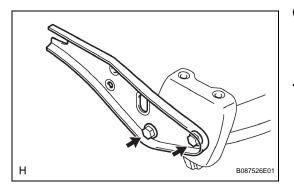

- 2. INSTALL REAR BUMPER BAR CORNER REINFORCEMENT LH
  - (a) Install the rear bumper bar corner reinforcement with 4 bolts.

Torque: 19 N\*m (195 kgf\*cm, 14 ft.\*lbf)

3. INSTALL REAR BUMPER BAR CORNER REINFORCEMENT RH HINT:

Follow the same procedures as for the rear bumper bar corner reinforcement LH.

#### 4. INSTALL REAR BUMPER PLATE LH

- (a) Engage the claw and install the bumper plate.
- (b) Install the 2 nuts.

Torque: 7.0 N\*m (70 kgf\*cm, 62 in.\*lbf)


5. INSTALL REAR BUMPER PLATE RH HINT:

Follow the same procedures as for the rear bumper plate LH.

- 6. INSTALL REAR BUMPER ARM SUB-ASSEMBLY LH (w/o Towing Hitch)
  - (a) Install the rear bumper arm with the 2 bolts..Torque: 19 N\*m (195 kgf\*cm, 14 ft.\*lbf)
- 7. INSTALL REAR BUMPER ARM SUB-ASSEMBLY RH (w/o Towing Hitch) HINT:

Follow the same procedures as for the rear bumper arm LH.

ET

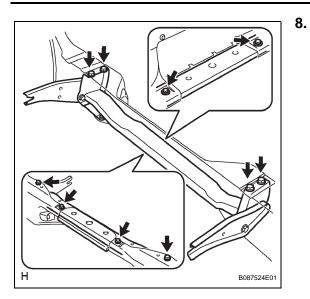


#### INSTALL REAR BUMPER REINFORCEMENT SUB-ASSEMBLY (w/o Towing Hitch)

(a) Install the rear bumper bar reinforcement with the 10 bolts.

Torque: 19 N\*m (195 kgf\*cm, 14 ft.\*lbf)

- H BOB7527E01
- 9. INSTALL NO. 3 FRAME WIRE (w/ Towing Hitch)
  - (a) Install the No. 3 frame wire with the 2 bolts. Torque: 19 N\*m (195 kgf\*cm, 14 ft.\*lbf)
  - (b) Install the 2 wire harness clamps.

- H
   BORTSZEDI
- 10. INSTALL RECEIVER HITCH BRACKET SUB-ASSEMBLY (w/ Towing Hitch)
  - (a) Install the receiver hitch bracket with the 10 bolts.
     Torque: 19 N\*m (195 kgf\*cm, 14 ft.\*lbf)
  - (b) Connect the 2 license light connectors.

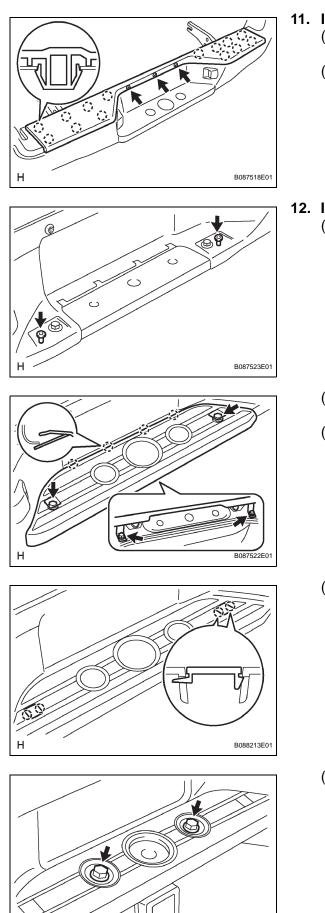

#### 11. INSTALL REAR BUMPER PLATE

- (a) Engage the 14 claws and install the rear bumper No. 1 plate.
- (b) Install the 3 clips.

- 12. INSTALL REAR BUMPER COVER
  - (a) Install the 2 nuts into the rear bumper bar.


- (b) Engage the 4 claws and install the rear bumper pad center.
- (c) Tighten the 4 bolts.


- (d) Engage the 2 claws and install the rear bumper cover lower. HINT: Follow the same procedures as for the opposite side.
- (e) w/ Towing Hitch:


B087532E01

- (1) Install the hitch ball.
- (2) Tighten the 2 bolts.

EI

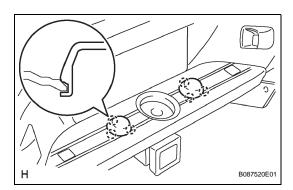

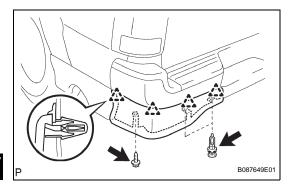

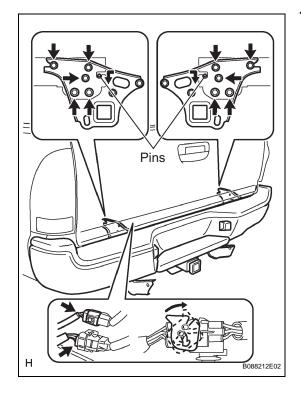

(3) Engage the 3 claws and remove the receiver hitch cap. HINT:

Follow the same procedures as for the opposite side.


- 13. INSTALL REAR BUMPER SPOILER LH (for X-Runner)
  - (a) Engage the 4 clips and install the rear bumper spoiler.
  - (b) Tighten the screw.
  - (c) Install the 2 clips.
- 14. INSTALL REAR BUMPER SPOILER RH (for X-Runner)

#### HINT:

Follow the same procedures as for the rear bumper spoiler LH.

#### 15. INSTALL REAR BUMPER BAR

- (a) w/ Towing hitch:
  - (1) Engage the 2 pins and remove the rear bumper bar.
  - (2) Tighten the 8 bolts.Torque: 90 N\*m (920 kgf\*cm, 67 ft.\*lbf)
  - (3) Connect the 2 No. 3 wire frame connectors.

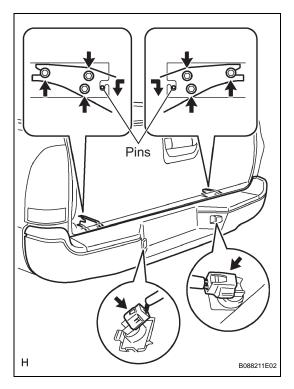

- (b) w/o Towing hitch:
  - (1) Engage the 2 pins and install the rear bumper bar.
  - (2) Tighten the 6 bolts. Torque: 90 N\*m (920 kgf\*cm, 67 ft.\*lbf)
    (3) Connect the 2 license lamp connectors.
- 16. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)